

 
 

 
 
 
 
 







 

 


 




## Remote Button Guide

<i>Remote Function</i>	<i>1-Way Remote Button Symbol</i>	<i>2-Way Remote Button Symbol</i>	<i>Description</i>	<i>Notes</i>
Lock/Arm		<b>I</b>	Tap button for a split second to lock and/or arm the vehicle.	
Unlock/Disarm		<b>I</b>	Tap button for a split second to unlock and/or disarm the vehicle.	
Remote Start		<b>II</b>	Hold button for 2.5 seconds to activate the remote start.	
Trunk Release		<b>III</b>	Hold button for 2.5 seconds to activate the trunk release.	Optional Feature
Query	N/A On One-way remote	<b>IV</b>	Tap button for a split second to verify the current status of the vehicle.	Two-way remotes only
Panic		<b>IV</b>	Hold button for 3.5 seconds to activate the horn and/or siren for 30 seconds. (Repeat step to de-activate horn and/or siren.)	2.5 seconds for two-way remote
Aux 1		<b>II</b>	Tap button for a split second to activate the optional auxiliary. (I.e. windows, neon).	Only on Alarm and Alarm/Starter units
Aux 2		<b>III</b>	Tap button for a split second to activate the optional auxiliary. (I.e. windows, neon).	Only on Alarm and Alarm/Starter units
Mute	 + 	<b>I + II</b>	Tap buttons simultaneously for a split second to mute siren and/or horn upon lock/arm and unlock/disarm.	
Valet Mode	 + 	<b>I + III</b>	Tap buttons simultaneously for a split second to bypass alarm and remote start features.	
Passive Mode	 + 	<b>II + III</b>	Tap buttons simultaneously for a split second. Vehicle will automatically lock 30 seconds after last door is closed.	
Timer Mode	 + 	<b>II + IV</b>	Tap buttons simultaneously for a split second. Vehicle will automatically start every 3 hours or 1.5 hours and run for set run time.	
Turbo Mode	 + 	<b>III + IV</b>	Tap buttons simultaneously for a split second. Engine will run for two minutes after key is removed to allow turbo charger to cool down.	Optional Feature Programming required
2nd Car Mode	Not Available	<b>III + IV</b>	Tap buttons simultaneously for a split second. Allows one remote to control two vehicles. (Only available with 2-way 2nd car remotes).	Optional Feature
Shock	 + 	<b>I + III</b>	Hold buttons for 2.5 seconds. The shock sensor will be bypassed until re-activated.	Only on Alarm and Alarm/Starter units

## Dealer Use Only

Option Menu 1	 + 	<b>I + II</b>	Hold buttons for 2.5 seconds to enter Option Menu 1.	Installer Only Feature
Option Menu 2	 + 	<b>I + IV</b>	Hold buttons for 2.5 seconds to enter Option Menu 2.	Installer Only Feature

Option Menu Scroll	 + 	<b>IV</b>	<b>1-Way remote</b> -Hold the buttons for 2.5 seconds to scroll down Option Menu. <b>2-Way remote</b> -Tap button IV to scroll down Option Menu.	Installer Only Feature
--------------------	---	-----------	--	------------------------