




## Under Body Coating Location

In order to prevent corrosion, stone chipping and vibration resistance, under body coat is applied to the under sides of the floor and wheel house. Therefore, when such panel is replaced or repaired, apply under body coat to that part.

### NOTICE

Do not apply the under body anti-corrosion agent to come in contact with tires, muffler and exhaust pipe.

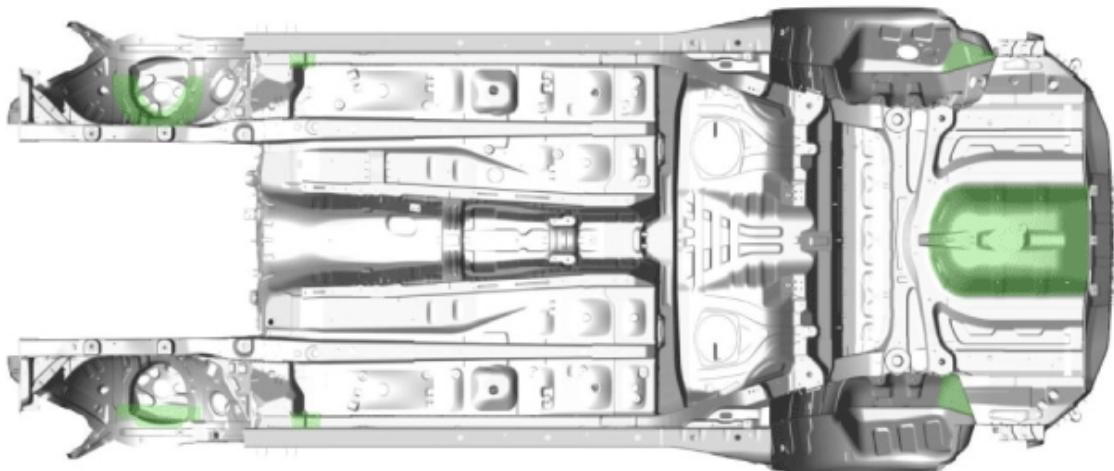

Under body coating (Thickness : 1.0 mm)