

Please rate this document after reviewing at the bottom of this page.

---

## INSPECTION

---

### [ Theta-II 2.0 T-GDI / Lambda-II 3.3 T-GDI]

Check the valve clearance.

If necessary, adjust the valve clearance by replacing the tappets.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**