


Please rate this document after reviewing at the bottom of this page.

INSPECTION

Check the brake fluid level in the brake fluid reservoir. The level should be between "MIN" and "MAX" marks on the side of the reservoir.

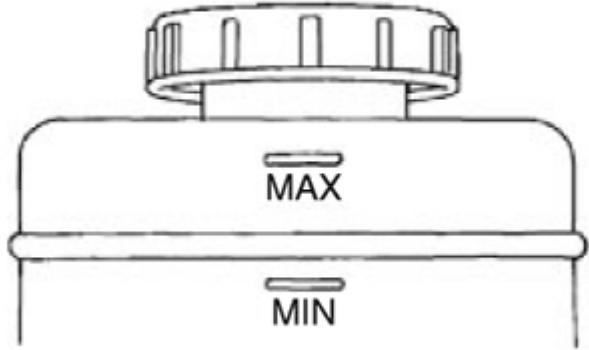

Use only hydraulic brake fluid conforming to DOT 3 or DOT 4 specification.

Check the brake system for any leakage if the fluid level is extremely low (lower than MIN).

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**