

Please rate this document after reviewing at the bottom of this page.

INSPECTION

1. Check the steering wheel free road.
 - (1) Turn the steering wheel so that the front wheels are facing straight ahead.
 - (2) Measure the distance where the steering wheel can be turned without moving the front wheels.
Standard value: 0 ~ 30mm (1.18in.) or less
 - (3) If the play exceeds standard value, inspect the steering column, shaft, and linkages.



2. Check the steering linkage for looseness or damage.
 - (1) Check that the dust parking and cap are not damaged.
 - (2) Check that the Bellows bands are not loose.
 - (3) Check that the steering gear box is not damaged.
 - (4) Check that the column and shaft are properly connected to the steering gear box.

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.