

Please rate this document after reviewing at the bottom of this page.

## MAINTENANCE UNDER SEVERE USAGE CONDITIONS - EXCEPT EUROPE (INCLUDING RUSSIA)

MAINTENANCE ITEM			MAINTENANCE OPERATION	MAINTENANCE INTERVALS	DRIVING CONDITION	
Engine oil and engine oil filter	Gasoline	Theta II 2.0L T-GDI	Except China	R	Every 5,000 km (3,000 miles) or 6 months	A, B, C, D, E, F, G, H, I, J, K
			For China	R	Every 5,000 km (3,000 miles) or 3 months	
	Gasoline	Lambda II 3.3L T-GDI	Except China	R	Every 5,000 km (3,000 miles) or 6 months	
			For China	R	Every 5,000 km (3,000 miles) or 3 months	
	Diesel	R 2.2L 2WD	For Russia, Australia, New Zealand and Republic of South Africa	R	Every 7,500 km (5,000 miles) or 6 months	
			Except Russia, Australia, New Zealand and Republic of South Africa	R	Every 5,000 km (3,000 miles) or 6 months	
	Diesel	R 2.2L 4WD	For Russia, Australia, New Zealand and Republic of South Africa	R	Every 7,500 km (5,000 miles) or 6 months	
			Except Russia, Australia, New Zealand and Republic of South Africa	R	Every 5,000 km (3,000 miles) or 6 months	
Spark plugs	Gasoline		R	Replace more frequently depending on the condition	B, H, I, K	
Automatic transaxle fluid	Gasoline, Diesel		R	Every 90,000 km (60,000 miles)	A, C, D, E, F, G, H, I, J	
Drive shaft and boots	Gasoline, Diesel		I	Inspect more frequently depending on the condition	C, D, E, F, G, H, I, J	
Propeller shaft	Gasoline, Diesel		I	Every 15,000 km (10,000 miles) or 12 months	C, E	
Differential oil (rear)	Gasoline, Diesel	Without LSD	R	Every 120,000 km (80,000 miles)	C, E, G, H, I, J	
		With LSD	R	Every 60,000 km (40,000 miles)	C, E, G, H, I, J	
Differential oil (front) (AWD)	Gasoline, Diesel		R	Every 120,000 km (80,000 miles)	C, E, G, H, I, J	

Air cleaner filter	Gasoline, Diesel	R	Replace more frequently depending on the condition	English
Climate control air filter	Gasoline, Diesel	R	Replace more frequently depending on the condition	C, E, G
Brake discs and pads, calipers and rotors	Gasoline, Diesel	I	Inspect more frequently depending on the condition	C, D, E, G, H
Parking brake (Foot Type)	Gasoline, Diesel	I	Inspect more frequently depending on the condition	C, D, G, H
Steering gear rack, linkage and boots	Gasoline, Diesel	I	Inspect more frequently depending on the condition	C, D, E, F, G
Suspension ball joints	Gasoline, Diesel	I	Inspect more frequently depending on the condition	C, D, E, F, G

#### Maintenance operation

I : Inspect and if necessary, adjust, correct, clean or replace.

R : Replace or change.

#### SEVERE DRIVING CONDITIONS

A : Repeatedly driving short distance of less than 8 km (5miles) in normal temperature or less than 16 km (10 miles) in freezing temperature.

B : Extensive engine idling or low speed driving for long distances.

C : Driving on rough, dusty, muddy, unpaved, graveled or saltspread roads.

D : Driving in areas using salt or other corrosive materials or in very cold weather

E : Driving in heavy dust condition.

F : Driving in heavy traffic area.

G : Driving on uphill, downhill, or mountain roads repeatedly.

H : Towing a trailer or using a camper on roof rack.

I : Driving for patrol car, taxi, other commercial use of vehicle towing.

J : Driving over 170 km/h (106 mile/h).

K : Frequently driving in stop-and-go conditions.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**