

Please rate this document after reviewing at the bottom of this page.


REMOVAL AND INSTALLATION

Cooling Fan Assembly


1. Disconnect the negative battery terminal.
2. Remove the engine room front under cover.
[\(Refer to Engine and Transmission Assembly - "Engine Room Under Cover"\)](#)
3. Drain the coolant.
[\(Refer to Cooling System - "Coolant"\)](#)
4. Remove the front bumper assembly.
[\(Refer to body \(Interior and Exterior\) - "Front Bumper Assembly"\)](#)
5. Disconnect the cooling fan connector (A).



6. Disconnect the reservoir hose (A).

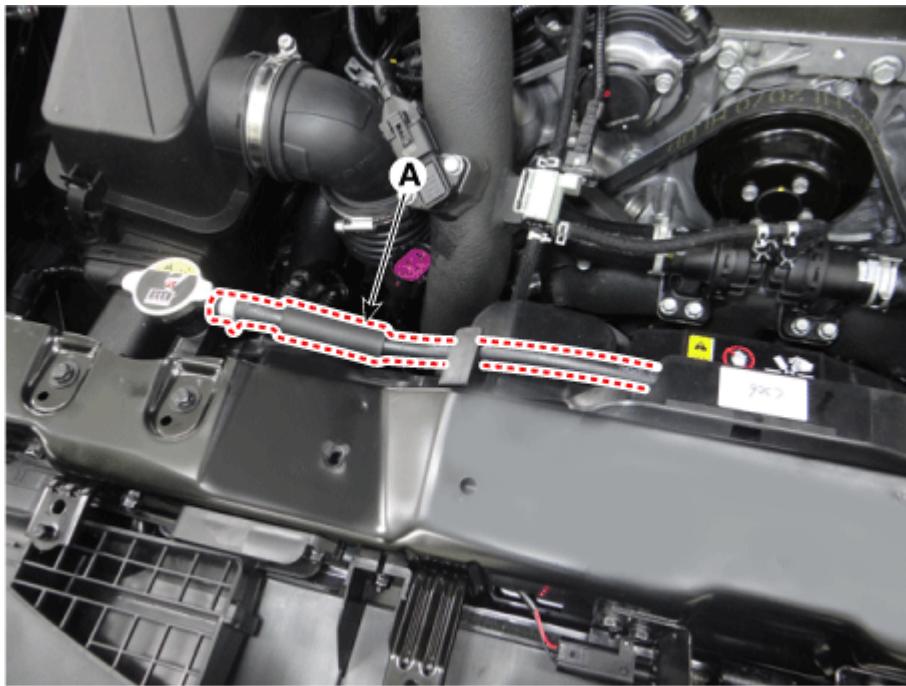

7. Disconnect the radiator upper hose (A).

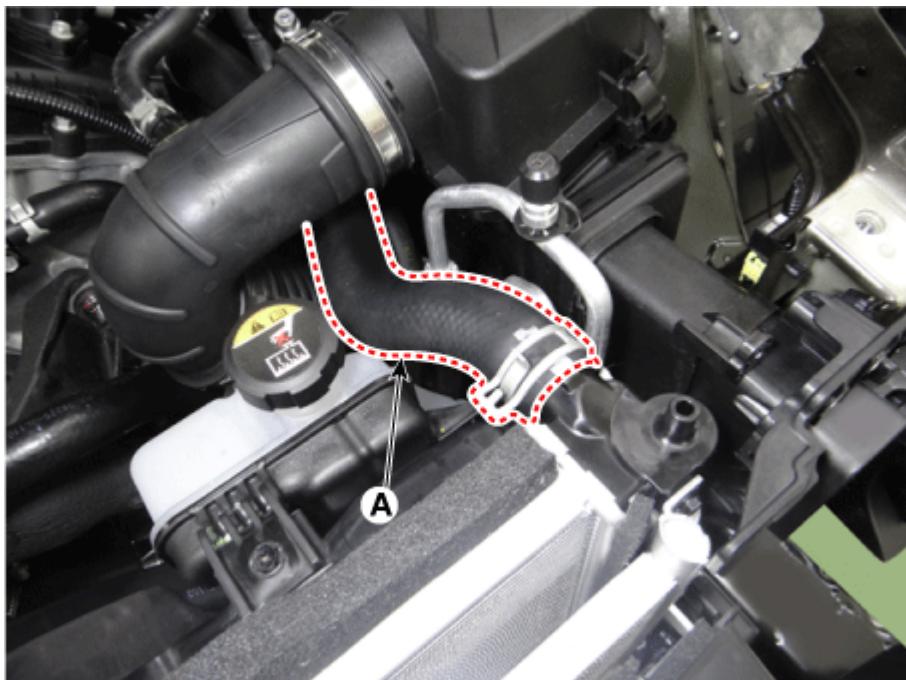

8. Remove the cooling fan assembly (A).

Tightening torque :


4.9 - 7.8 N·m (0.5 - 0.8 kgf·m, 3.6 - 5.8 lb·ft, 43.4 - 69.4 lb·in)



9. Remove the reservoir tank (A).

Tightening torque :

4.9 - 8.3 N·m (0.50 - 0.85 kgf·m, 3.6 - 6.1 lb·ft, 43.4 - 73.8 lb·in)

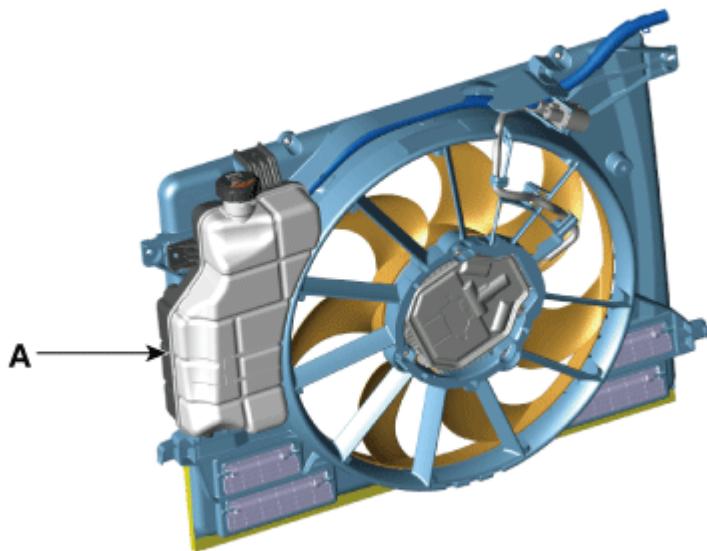

10. Install in the reverse order of removal.

11. Fill with engine coolant.

(Refer to Cooling System - "Coolant")

12. Start engine and check for leaks.

13. Recheck engine coolant level.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**