



Please rate this document after reviewing at the bottom of this page.

REMOVAL AND INSTALLATION

1. Disconnect the reservoir hose (A).

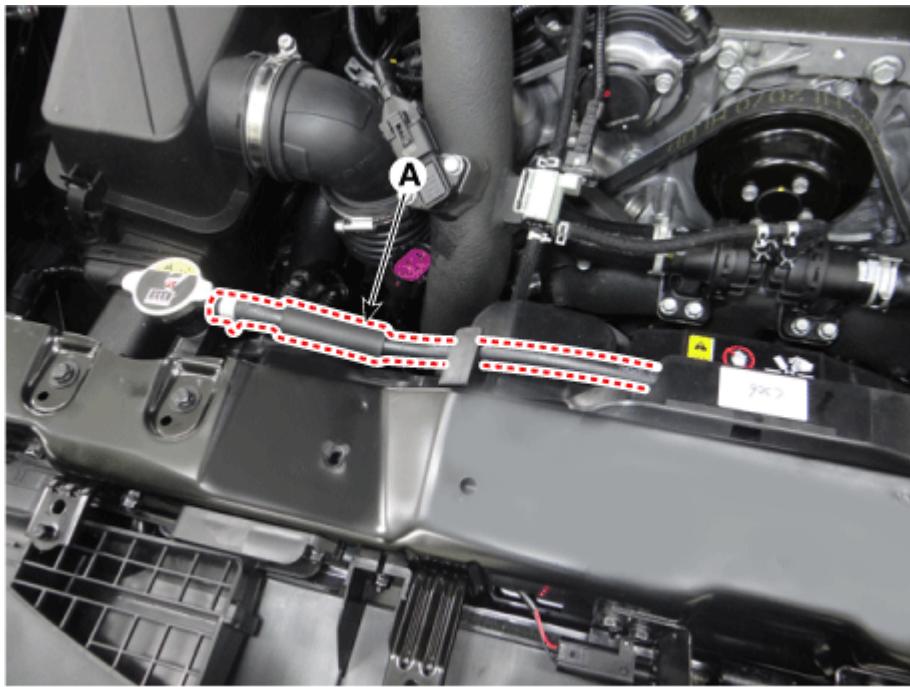


2. Remove the LH front strut bar (A).

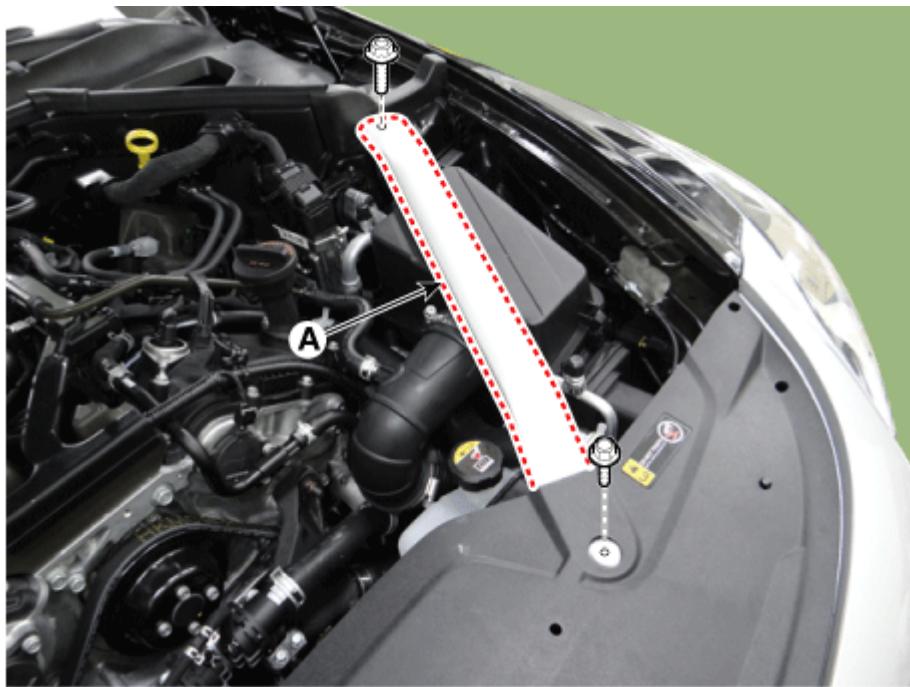

3. Remove the reservoir tank (A).

Tightening torque :

4.9 - 8.3 N·m (0.50 - 0.85 kgf·m, 3.6 - 6.1 lb·ft, 43.4 - 73.8 lb·in)

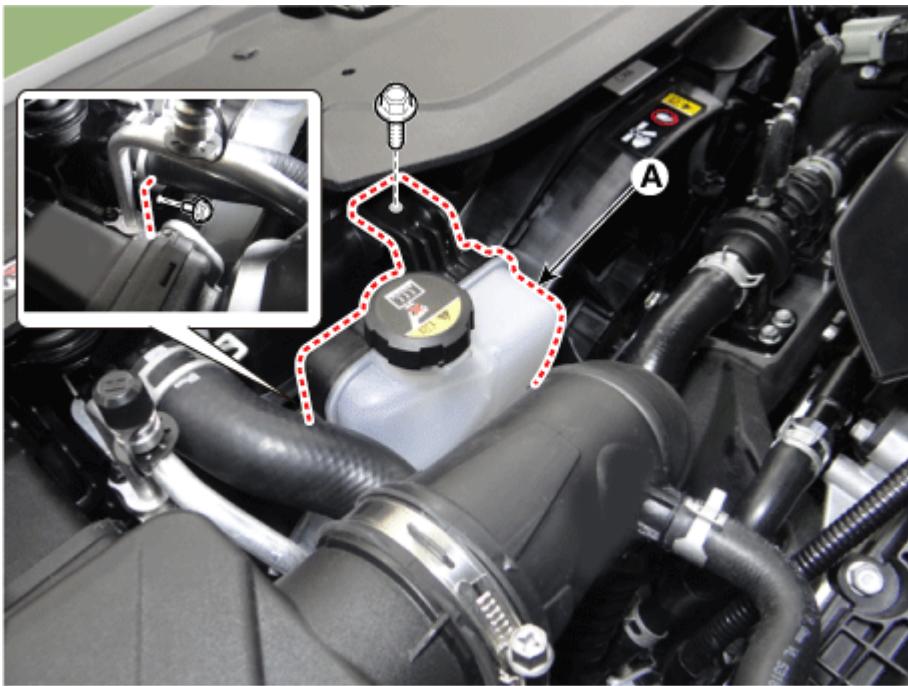

4. Install in the reverse order of removal.
5. Fill with engine coolant.
6. Start engine and check for leaks.
7. Recheck engine coolant level.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**