


Please rate this document after reviewing at the bottom of this page.

## REMOVAL AND INSTALLATION


1. Remove the engine and transmission assembly.  
**(Refer to Engine and Transmission Assembly - "Engine and Transmission Assembly")**
2. Remove the automatic transmission.  
**(Refer to Automatic Transmission System - "Automatic Transmission")**
3. Remove the adapter plate (A) and the drive plate (B).

**Tightening torque :**

71.6 - 75.5 N·m (7.3 - 7.7 kgf·m, 52.8 - 55.7 lb·ft)

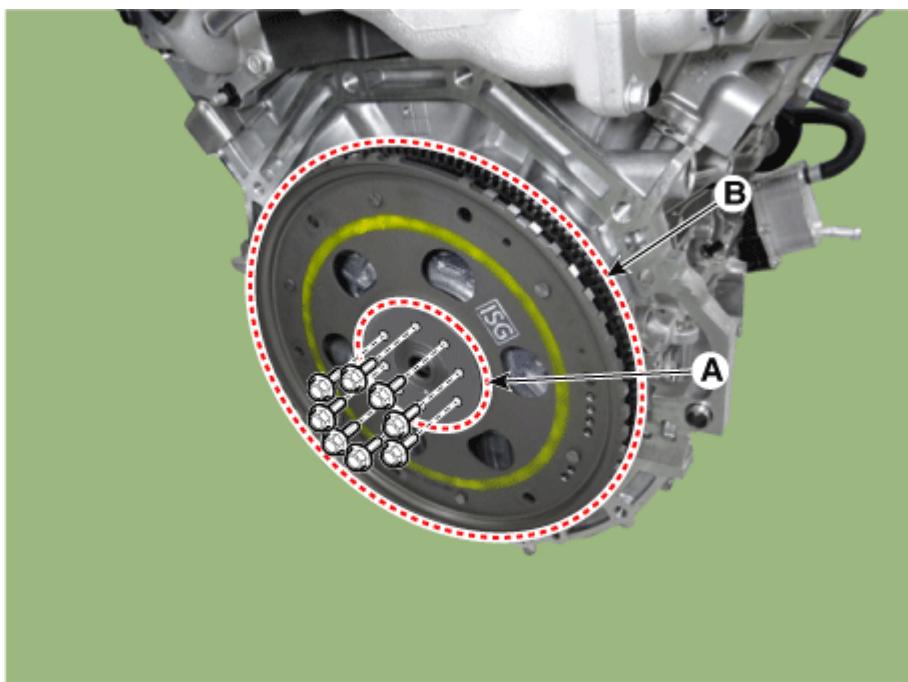

4. Remove the crankshaft adapter (A).

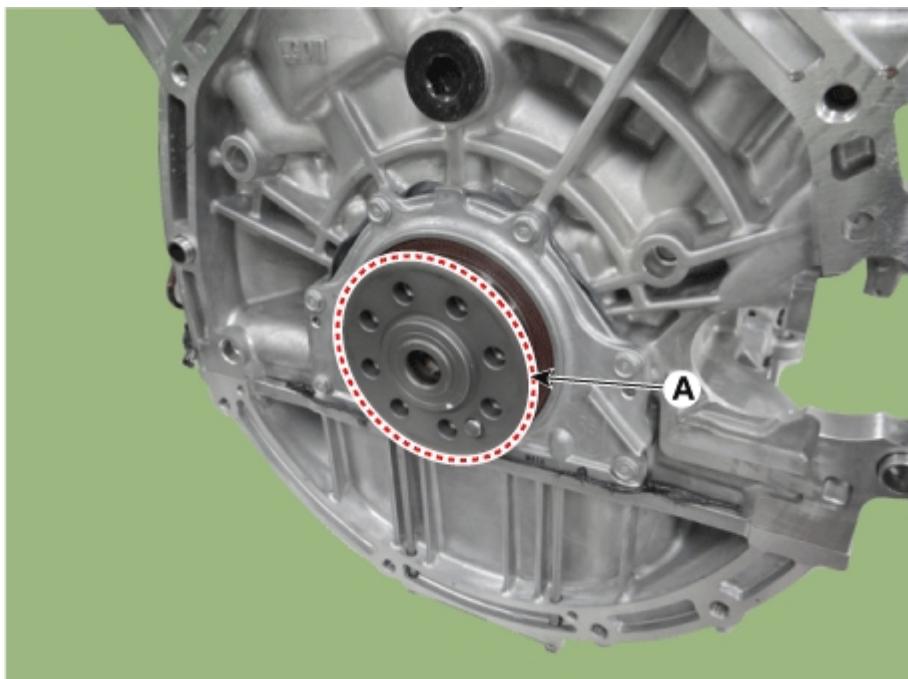

5. Install in the reverse order of removal.

English

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**