


Please rate this document after reviewing at the bottom of this page.

COMPONENTS

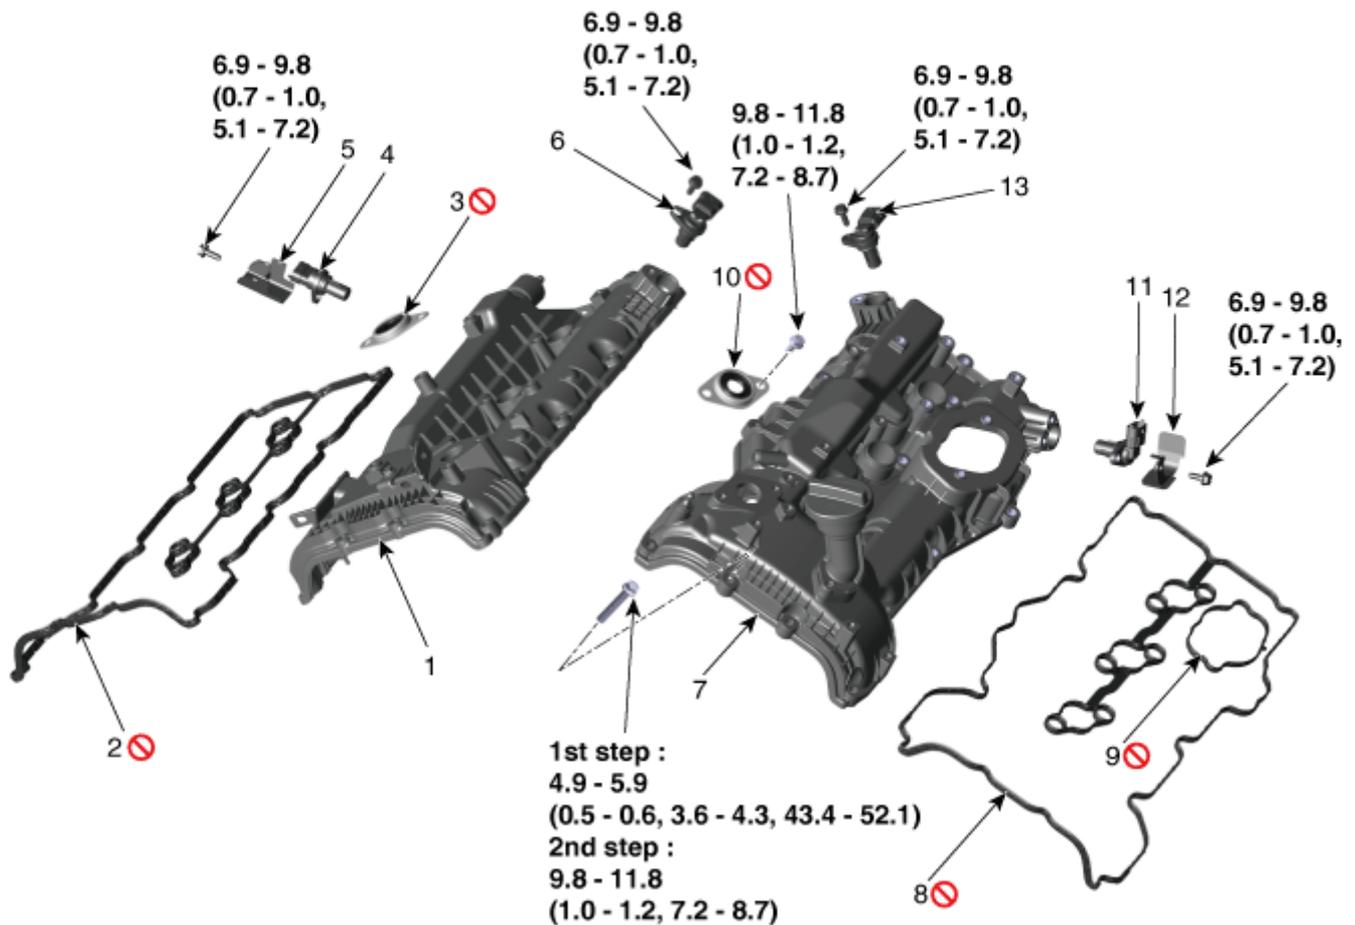

Torque : N·m (kgf·m, lb·ft, lb·in)

- | | |
|---|--|
| 1. RH Cylinder head cover | 7. LH Cylinder head cover |
| 2. RH Cylinder head cover gasket | 8. LH Cylinder head cover gasket |
| 3. RH Oil control valve (OCV) cap | 9. High pressure fuel pump gasket |
| 4. RH Exhaust camshaft position sensor (CMPS) | 10. LH Oil control valve (OCV) cap |
| 5. RH Exhaust camshaft position sensor (CMPS) cover | 11. LH Exhaust camshaft position sensor (CMPS) |
| 6. RH Intake camshaft position sensor (CMPS) | 12. LH Exhaust camshaft position sensor (CMPS) cover |
| | 13. LH Intake camshaft position sensor (CMPS) |

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**