

Please rate this document after reviewing at the bottom of this page.

REMOVAL AND INSTALLATION

1. Remove the engine cover (A).



NOTICE

- Lift up the lower end of engine cover, then left and right alternately.
- When installing, check that the mounting rubber insulators are installed.

2. Install in the reverse order of removal.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**