

Please rate this document after reviewing at the bottom of this page.


## REMOVAL AND INSTALLATION

### Engine room front under cover.

1. Remove the engine room front under cover (A).

**Tightening torque :**

7.8 - 11.8 N·m (0.8 - 1.2 kgf·m, 5.8 - 8.7 lb·ft)

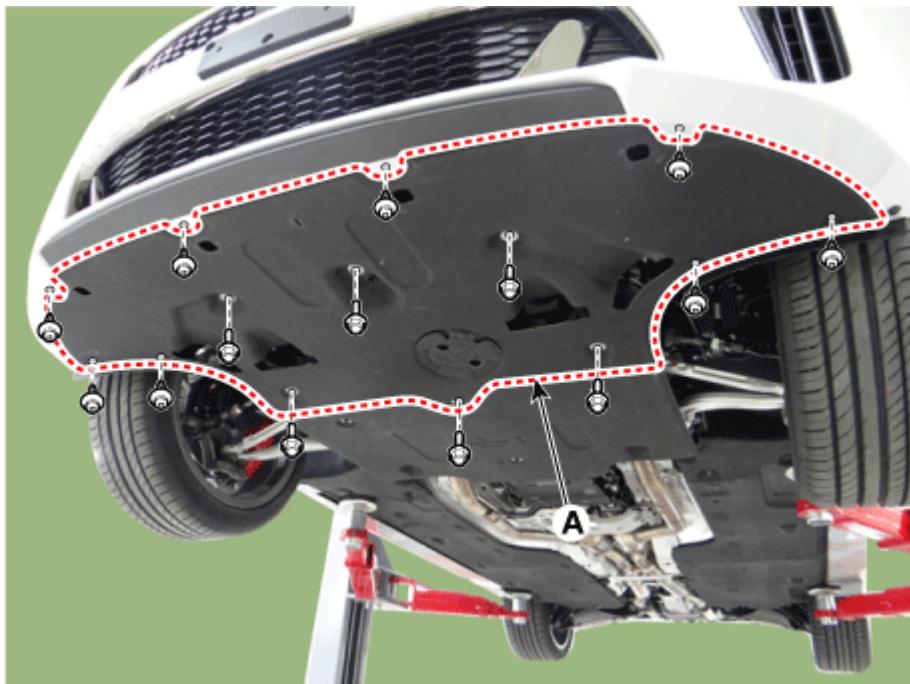


2. Install in the reverse order of removal.

### Engine room rear under cover.

1. Remove the engine room rear under cover (A).

**Tightening torque :**

7.8 - 11.8 N·m (0.8 - 1.2 kgf·m, 5.8 - 8.7 lb·ft)

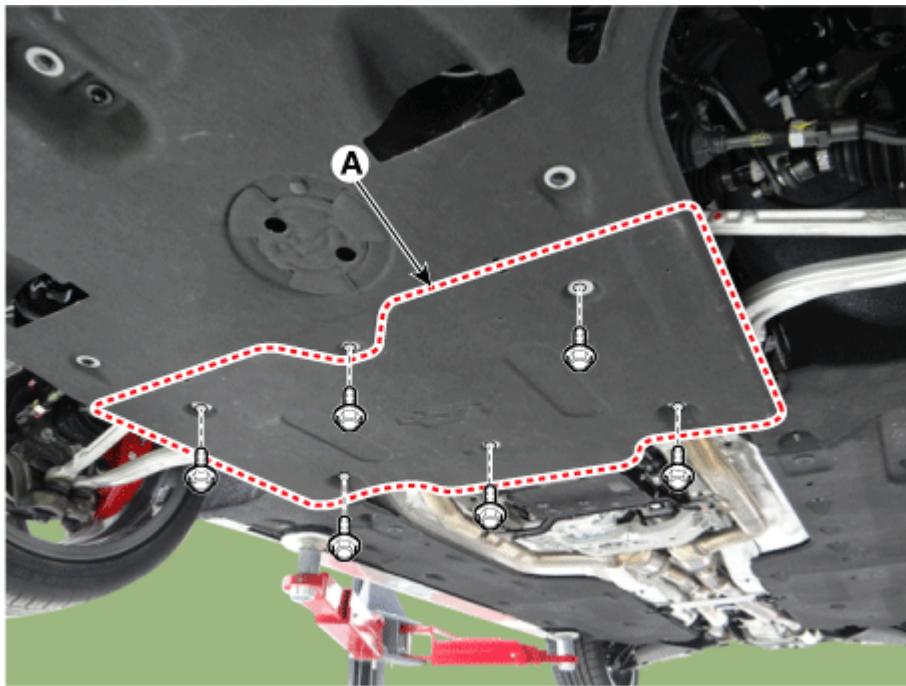

2. Install in the reverse order of removal.

### Engine Room Side Cover [AWD]

1. Remove the engine room front under cover.
2. Remove the engine room front side cover (A).


**Tightening torque :**

7.8 - 11.8 N·m (0.8 - 1.2 kgf·m, 5.8 - 8.7 lb·ft)

[RH]



[LH]

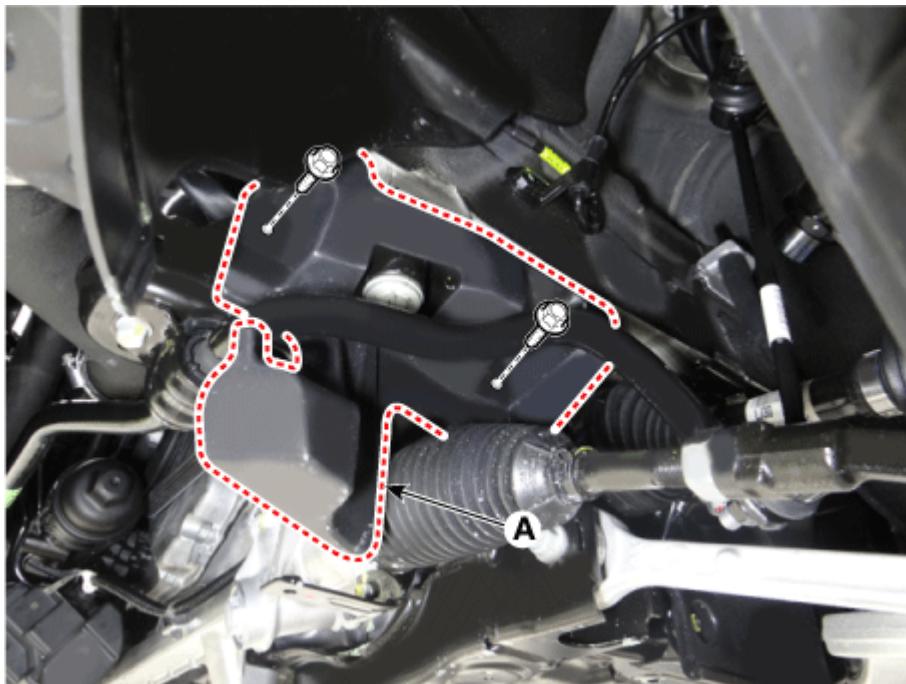

3. Remove the engine room rear side cover (A).


**Tightening torque :**

7.8 - 11.8 N·m (0.8 - 1.2 kgf·m, 5.8 - 8.7 lb·ft)

[RH]



[LH]

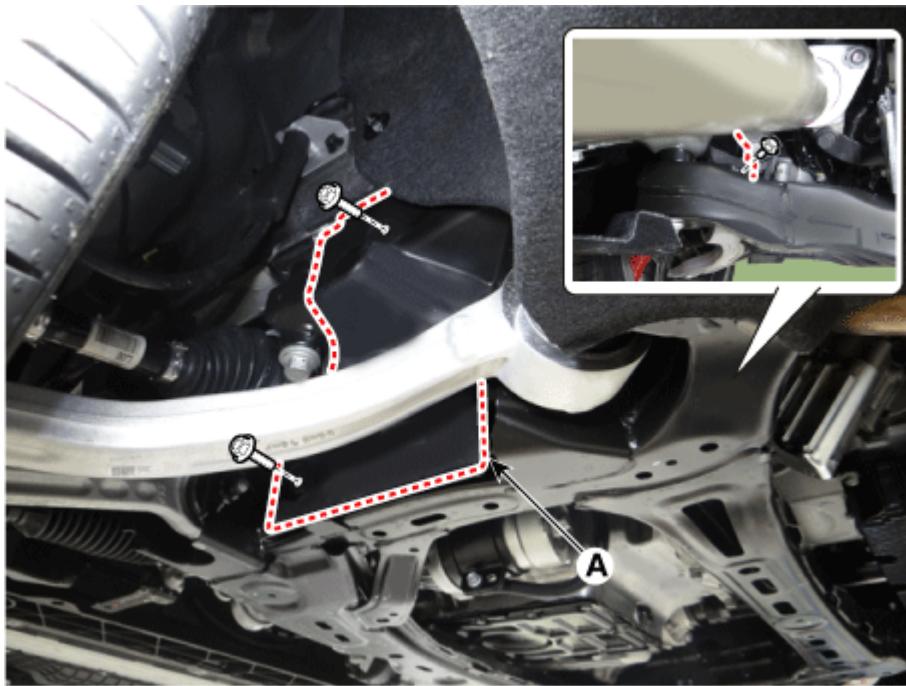

4. Install in the reverse order of removal.


### Engine Room Side Cover [2WD]

1. Remove the engine room front under cover.
2. Remove the front stabilizer bar from the sub frame.  
**(Refer to Suspension System - "Front Stabilizer Bar")**
3. Remove the engine room side cover (A).


**Tightening torque :**

7.8 - 11.8 N·m (0.8 - 1.2 kgf·m, 5.8 - 8.7 lb·ft)

**[RH]**

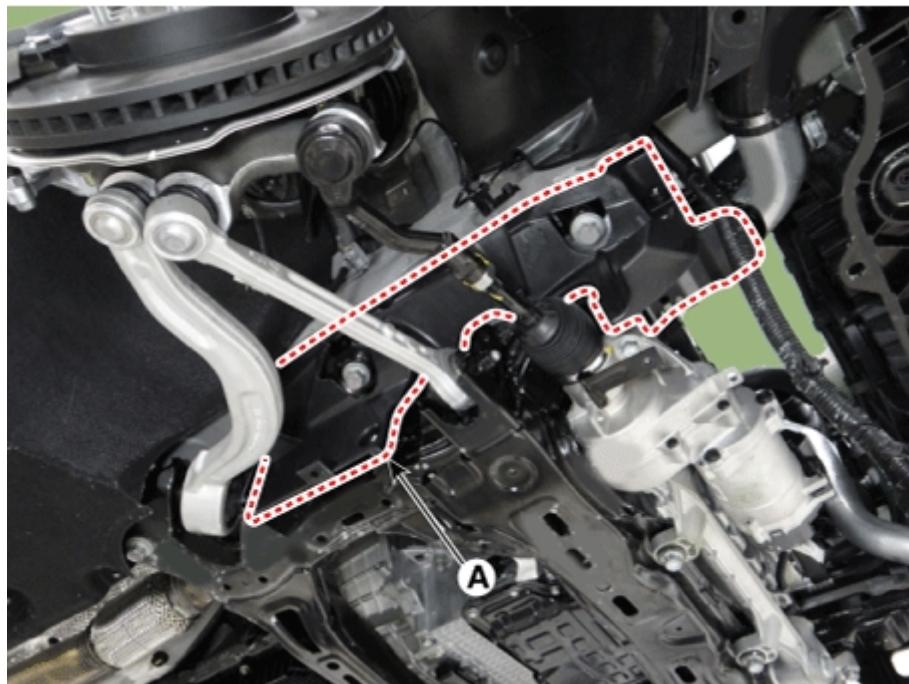

**[LH]**

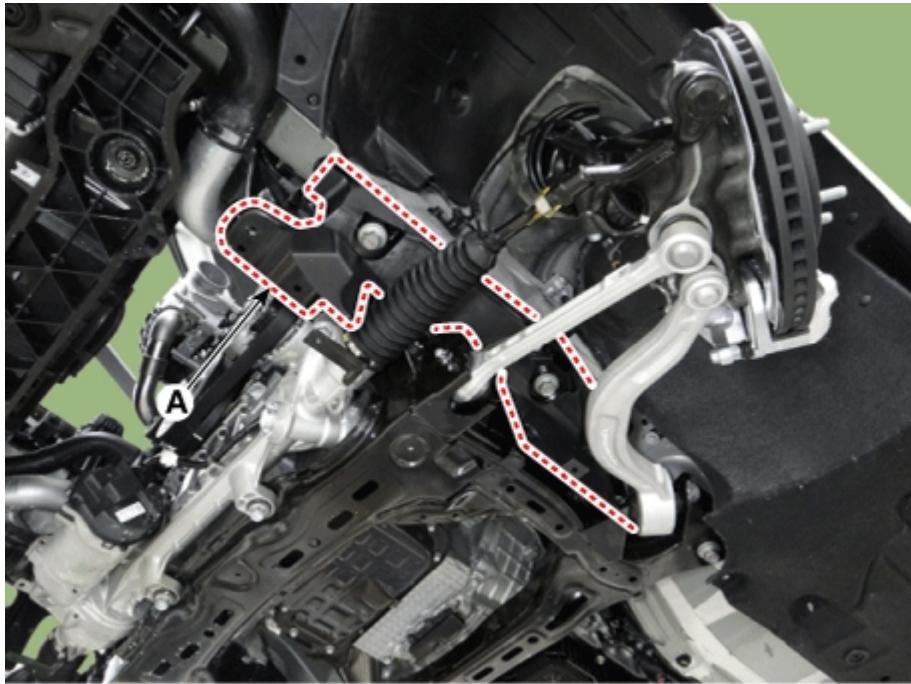

4. Install in the reverse order of removal.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**