


Please rate this document after reviewing at the bottom of this page.

## COMPONENTS

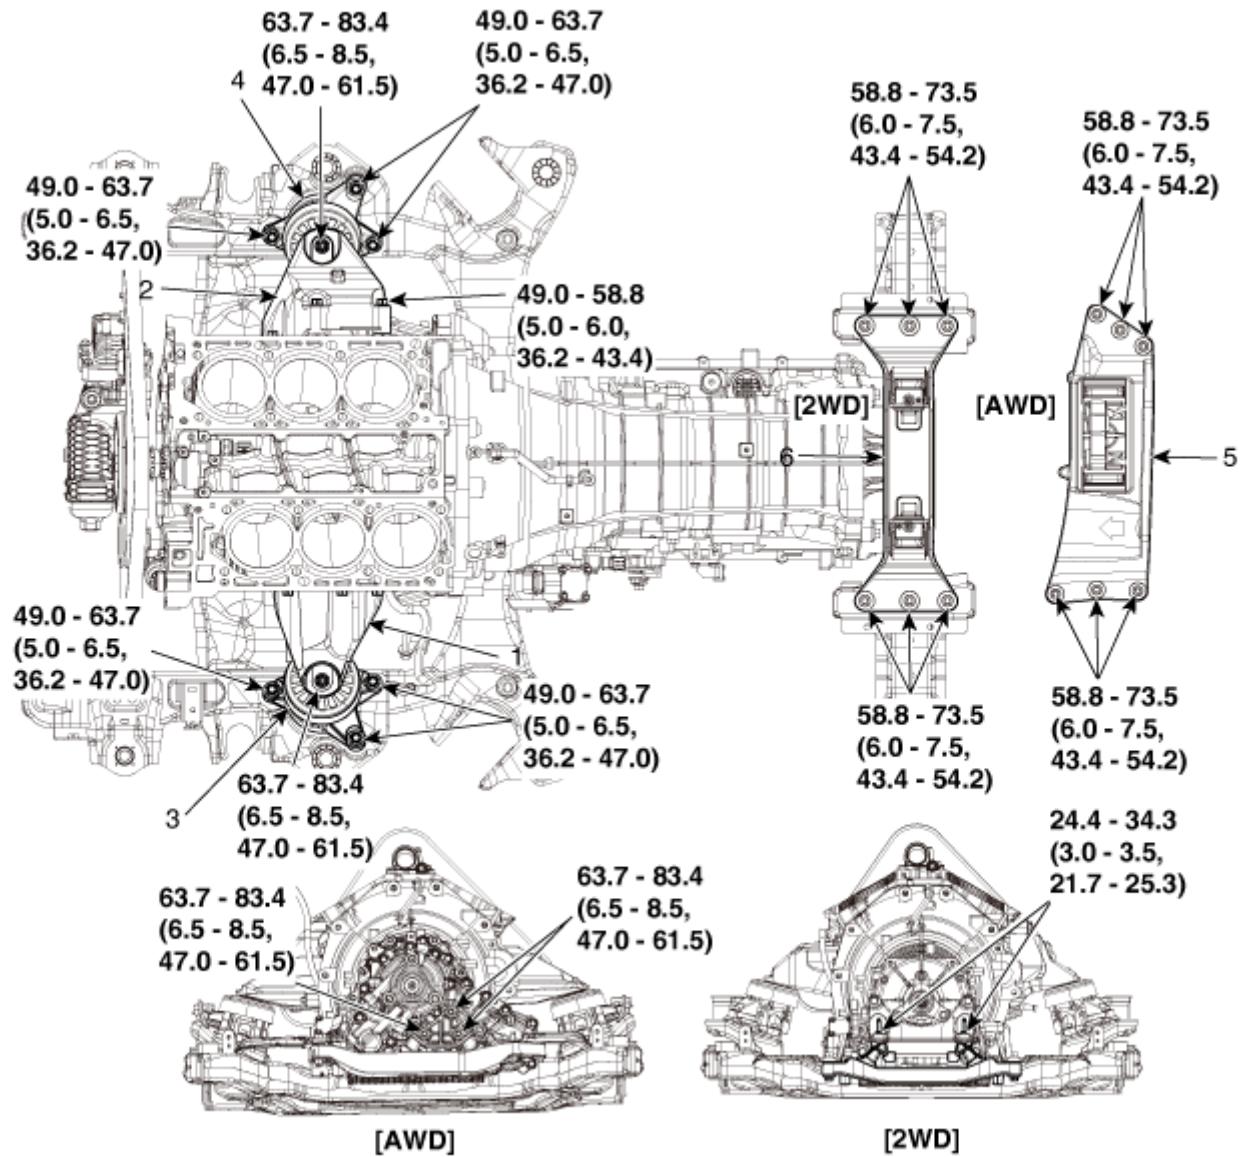

Torque : N·m (kgf·m, lb·ft)

1. Engine mounting support bracket (LH)
2. Engine mounting support bracket (RH)
3. Engine mounting bracket (LH)
4. Engine mounting bracket (RH)
5. Transmission mounting bracket (AWD)
6. Transmission mounting bracket (2WD)

\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.