

Please rate this document after reviewing at the bottom of this page.

REMOVAL AND INSTALLATION

LH Engine mounting bracket

1. Remove the sub frame.
(Refer to Suspension System - "Sub Frame")
2. Remove the LH engine mounting bracket (A).

Tightening torque :


49.0 - 63.7 N·m (5.0 - 6.5 kgf·m, 36.2 - 47.0 lb·ft)



3. Remove the LH engine mounting support bracket (A).

Tightening torque :

49.0 - 58.8 N·m (5.0 - 6.0 kgf·m, 36.2 - 43.4 lb·ft)

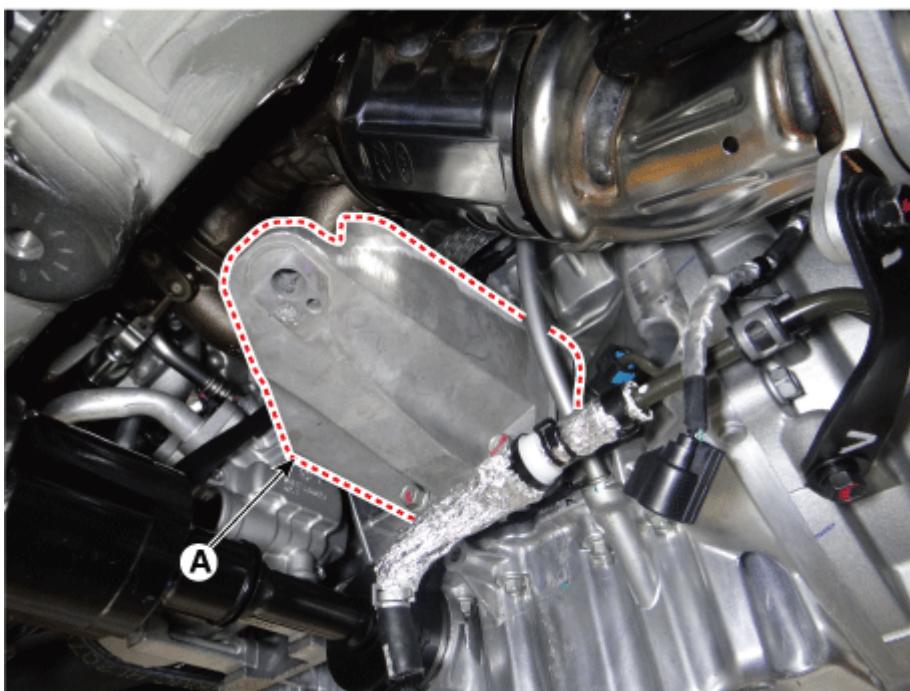

4. Install in the reverse order of removal.


English 

RH Engine mounting bracket

1. Remove the sub frame.
[\(Refer to Suspension System - "Sub Frame"\)](#)
2. Remove the RH engine mounting bracket (A).

Tightening torque :


49.0 - 63.7 N·m (5.0 - 6.5 kgf·m, 36.2 - 47.0 lb·ft)

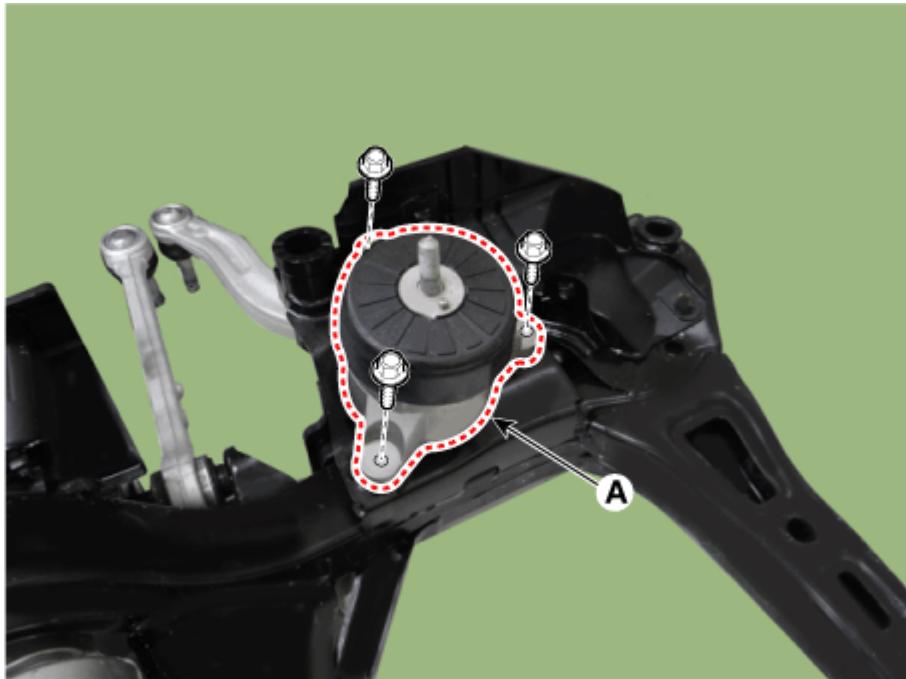

3. Remove the RH engine mounting support bracket (A).

Tightening torque :

49.0 - 58.8 N·m (5.0 - 6.0 kgf·m, 36.2 - 43.4 lb·ft)

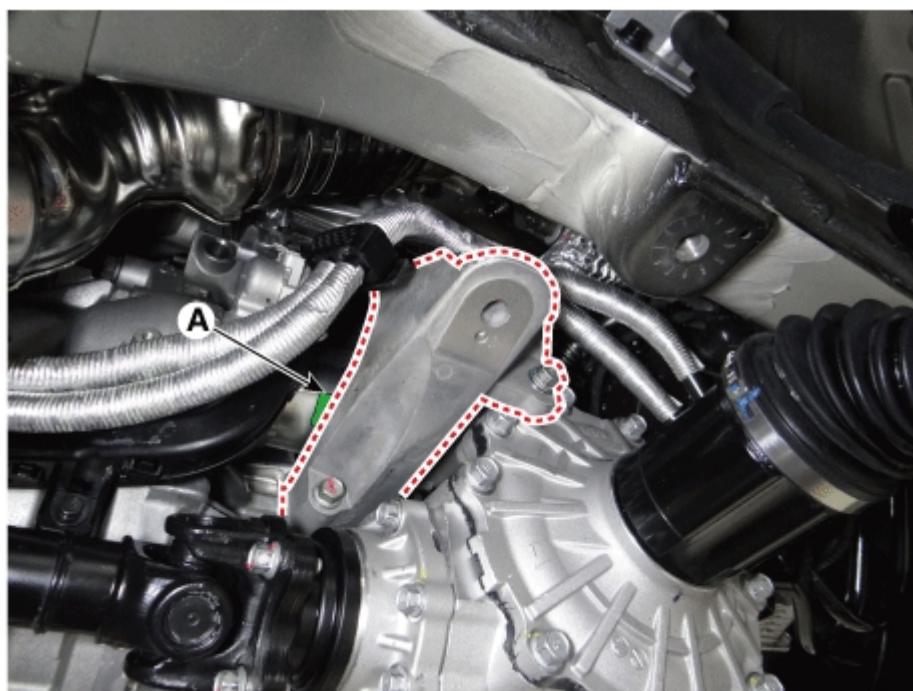


4. Install in the reverse order of removal.

Transmission mounting bracket (AWD)

1. Remove the engine room rear under cover.
[\(Refer to Engine and Transmission Assembly - "Engine Room Under Cover"\)](#)

2. Install the jack under the transmission to support the transmission.

English 

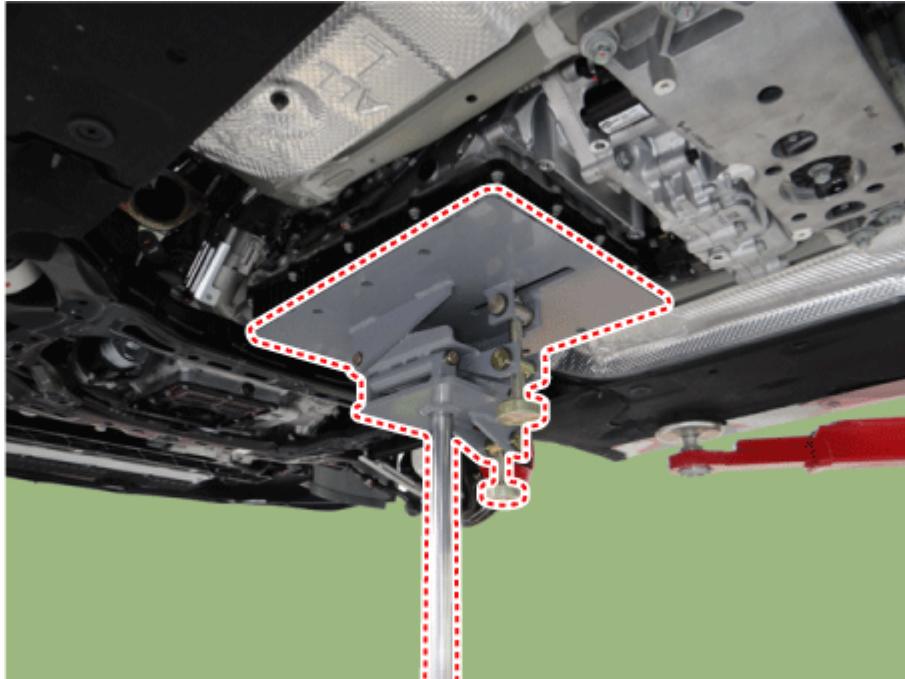

NOTICE

Put the rubber block between the jack and transmission to avoid damaging the transmission.

3. Remove the transmission mounting bracket (A).


Tightening torque

Bolts :

58.8 - 73.5 N·m (6.0 - 7.5 kgf·m, 43.4 - 54.2 lb·ft)

Nuts :


63.7 - 83.4 N·m (6.5 - 8.5 kgf·m, 47.0 - 61.5 lb·ft)

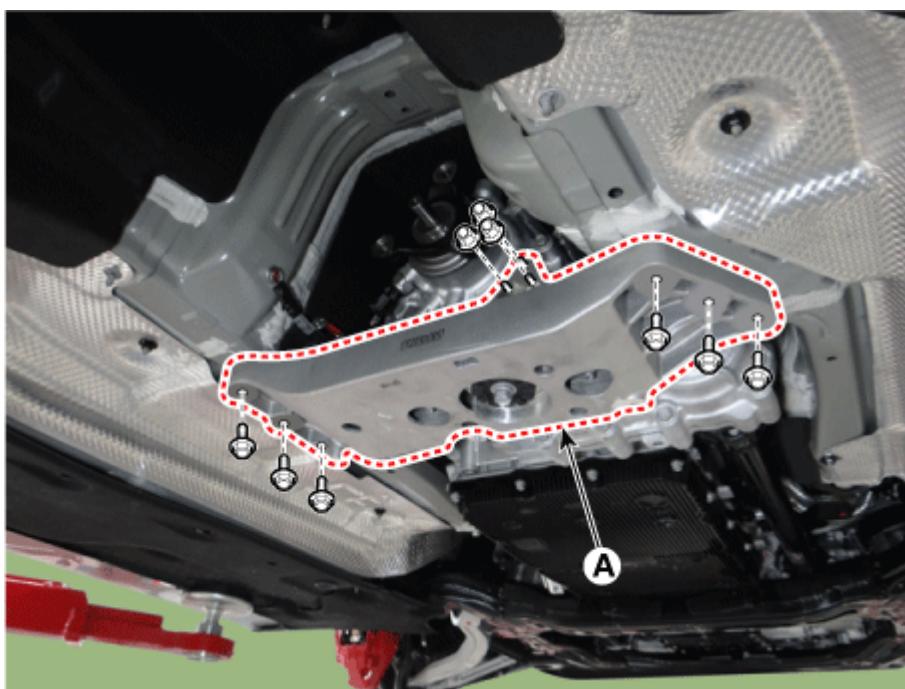

4. Install in the reverse order of removal.

Transmission mounting bracket (2WD)

1. Remove the engine room rear under cover.
(Refer to Engine and Transmission Assembly - "Engine Room Under Cover")
2. Install the jack under the transmission to support the transmission.

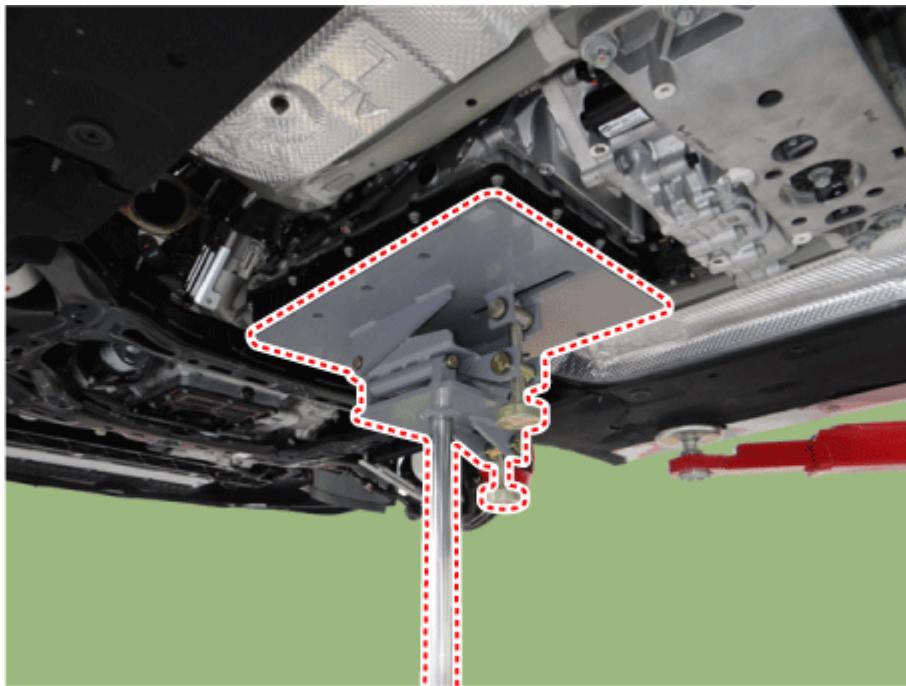
**NOTICE**

Put the rubber block between the jack and transmission to avoid damaging the transmission.

3. Remove the transmission mounting bracket mounting bolts (A).

Tightening torque :


58.8 - 73.5 N·m (6.0 - 7.5 kgf·m, 43.4 - 54.2 lb·ft)

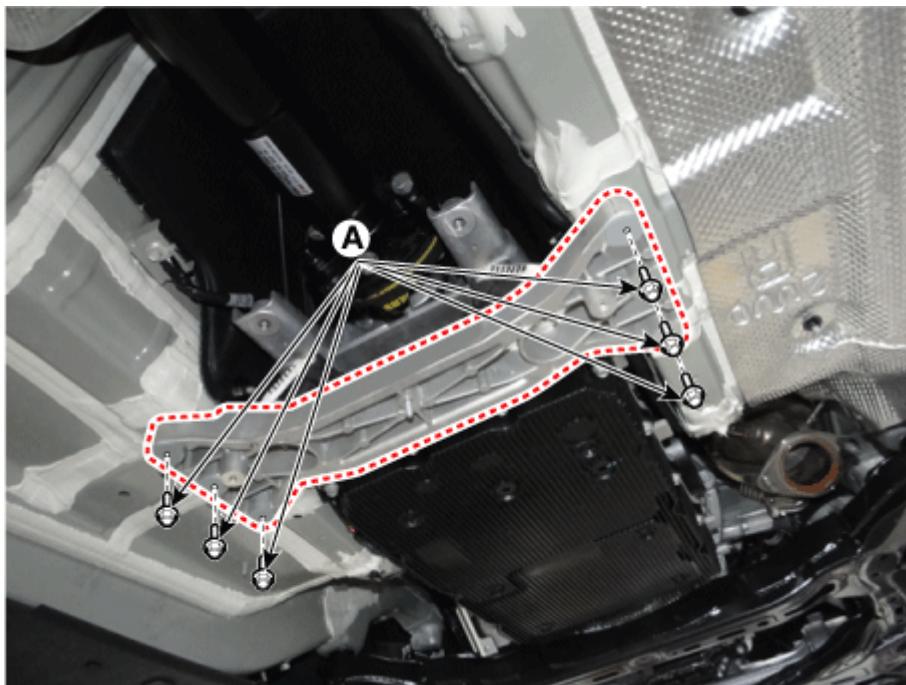

4. Remove the transmission mounting bracket (A).

Tightening torque :

24.4 - 34.3 N·m (3.0 - 3.5 kgf·m, 21.7 - 25.3 lb·ft)

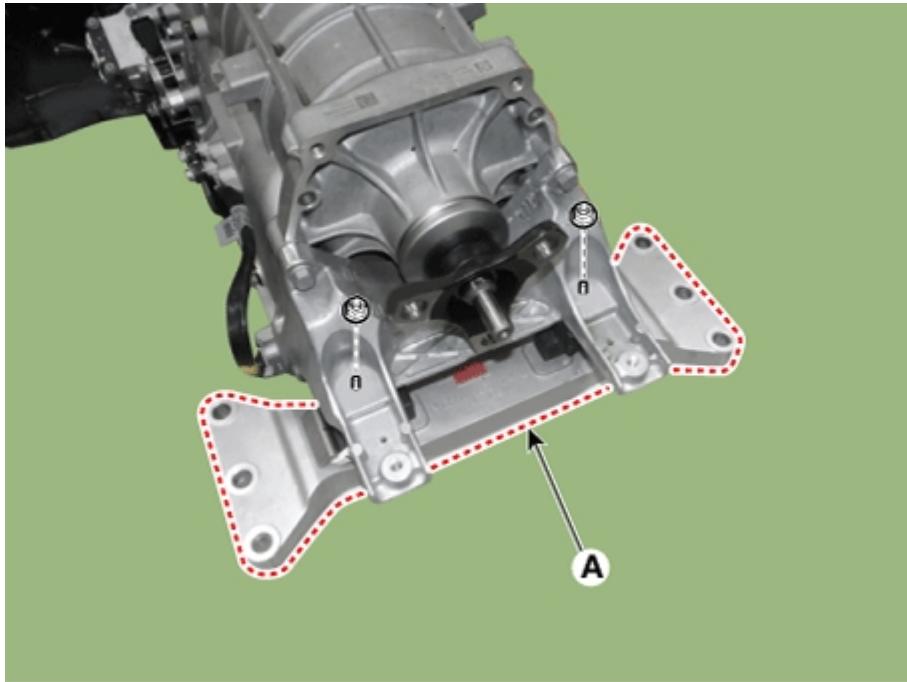

5. Install in the reverse order of removal.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**