

Please rate this document after reviewing at the bottom of this page.

## REMOVAL AND INSTALLATION


### LH Air Cleaner Assembly

1. Disconnect the negative battery terminal.

2. Remove the LH front strut bar (A).


**Tightening torque :**

46.1 - 60.8 N·m (4.7 - 6.2 kgf·m, 34.0 - 44.8 lbf·ft)

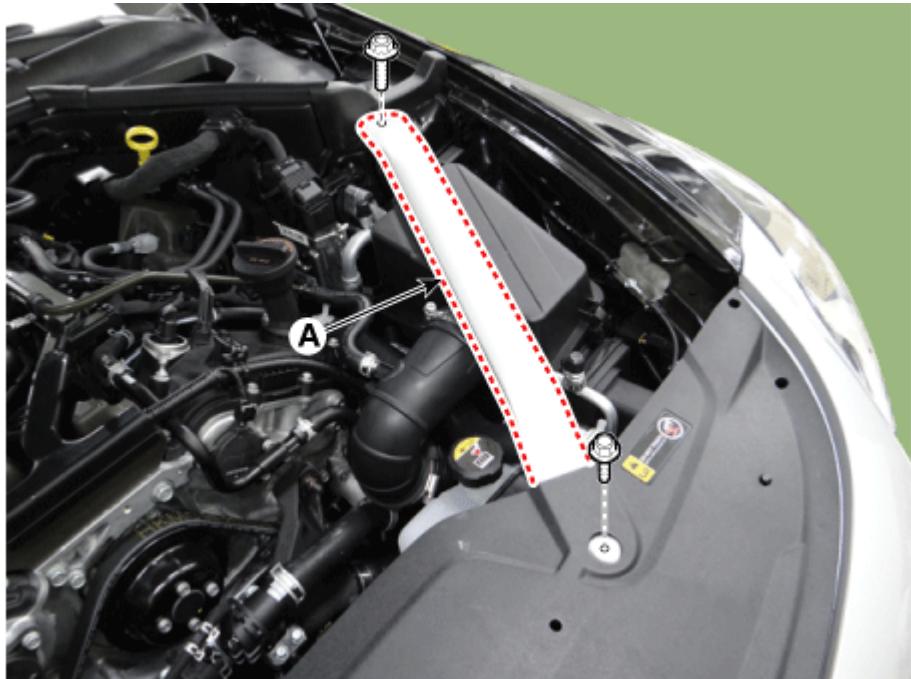

3. Remove the LH air cleaner assembly.

(1) Disconnect the RCV hose (A).

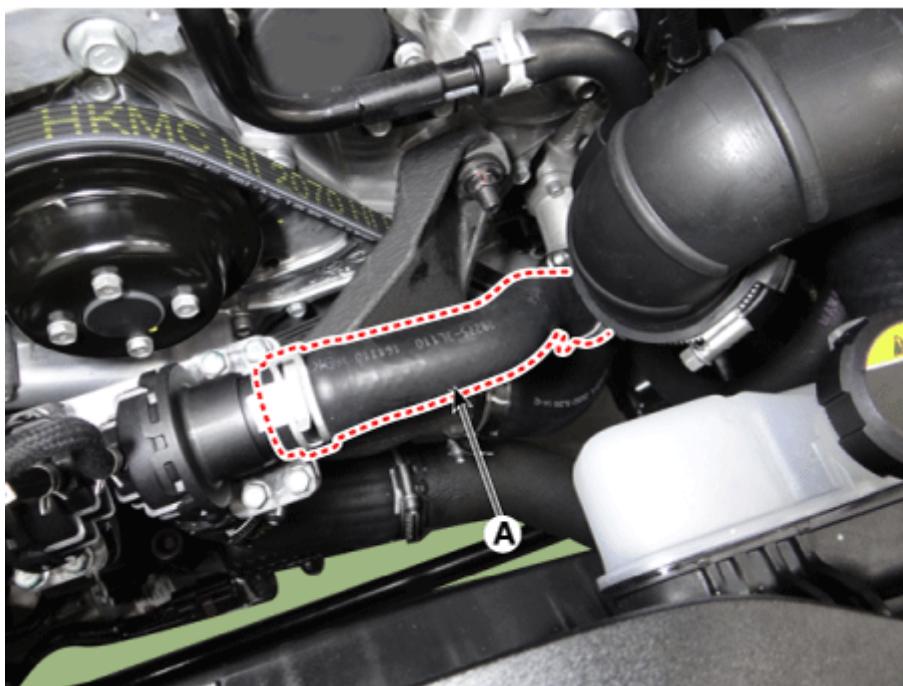


(2) Disconnect the RCV hose (A).



- (3) Disconnect the breather hose (A).
- (4) Disconnect the air intake hose (B).

**Tightening torque :**  
2.8 - 4.8 N·m (0.3 - 0.5 kgf·m, 2.2 - 3.6 lb·ft, 26.0 - 43.4 lb·in)

- (5) Remove the LH air cleaner assembly (C).

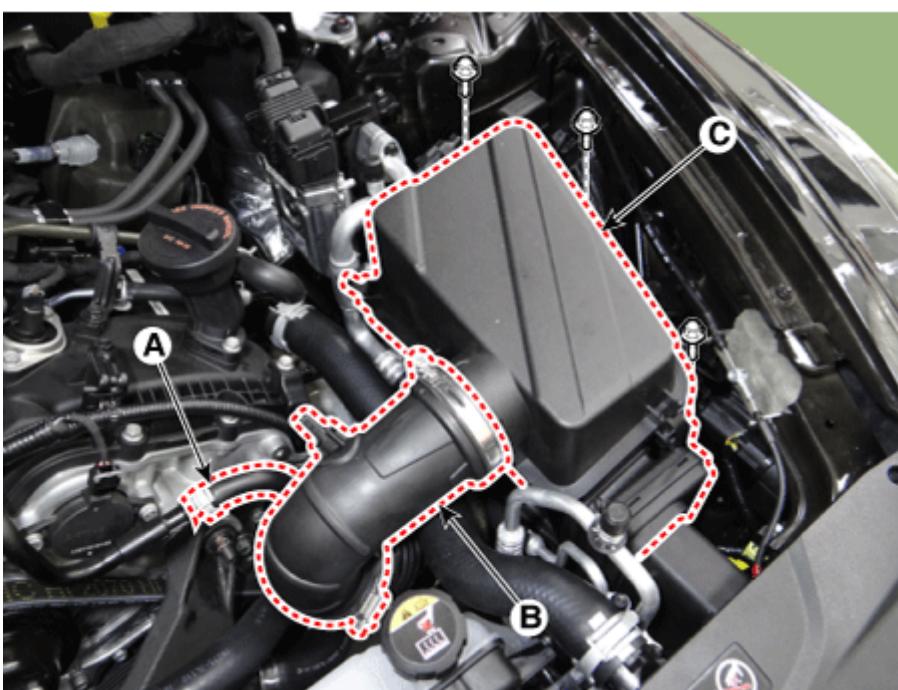


4. Install in the reverse order of removal.

## RH Air Cleaner Assembly


1. Disconnect the negative battery terminal.
2. Remove the RH front strut bar (A).

**Tightening torque :**  
46.1 - 60.8 N·m (4.7 - 6.2 kgf·m, 34.0 - 44.8 lbf·ft)

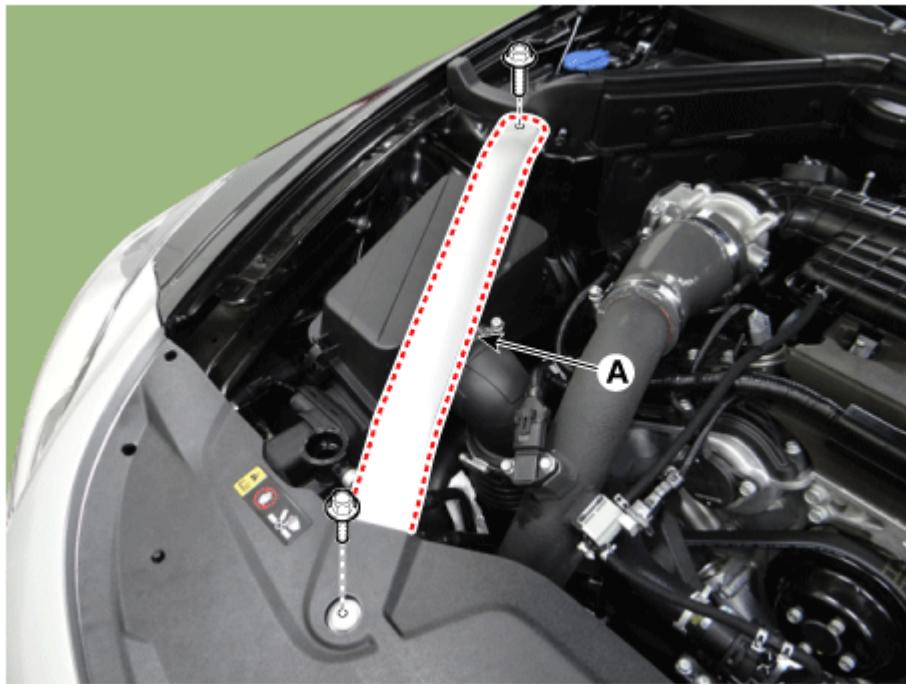

3. Remove the RH air cleaner assembly.

(1) Disconnect the RCV hose (A).

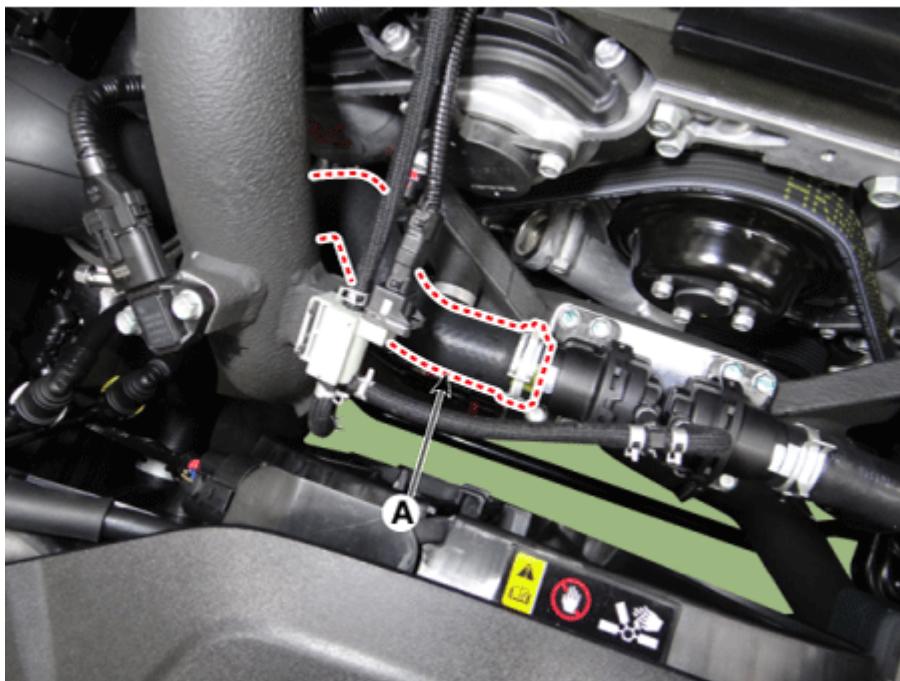

(2) Disconnect the air intake hose (A).


**Tightening torque :**

2.8 - 4.8 N·m (0.3 - 0.5 kgf·m, 2.2 - 3.6 lb·ft, 26.0 - 43.4 lb·in)

(3) Remove the LH air cleaner assembly (B).

**Tightening torque :**

7.8 - 9.8 N·m (0.8 - 1.0 kgf·m, 5.8 - 7.2 lb·ft)

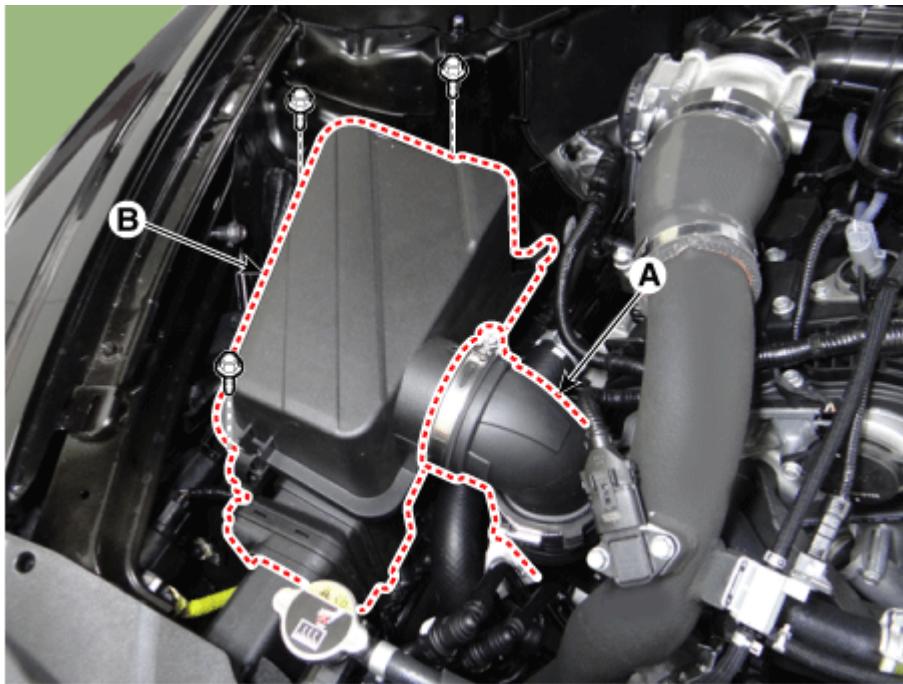


4. Install in the reverse order of removal.


## Air Cleaner Element

1. Remove the LH and RH front strut bar (A).

[LH]

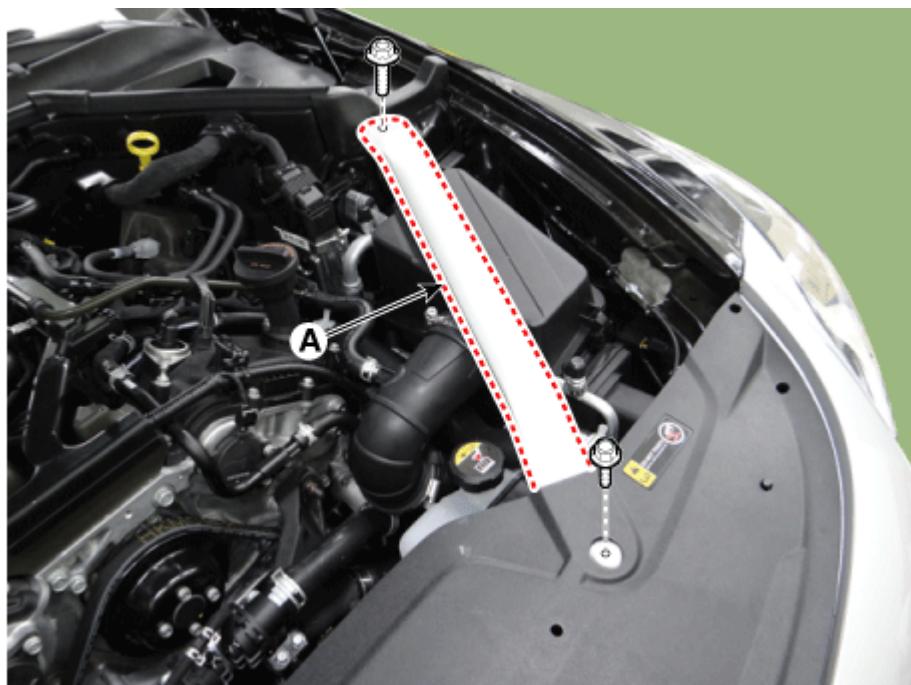


[RH]

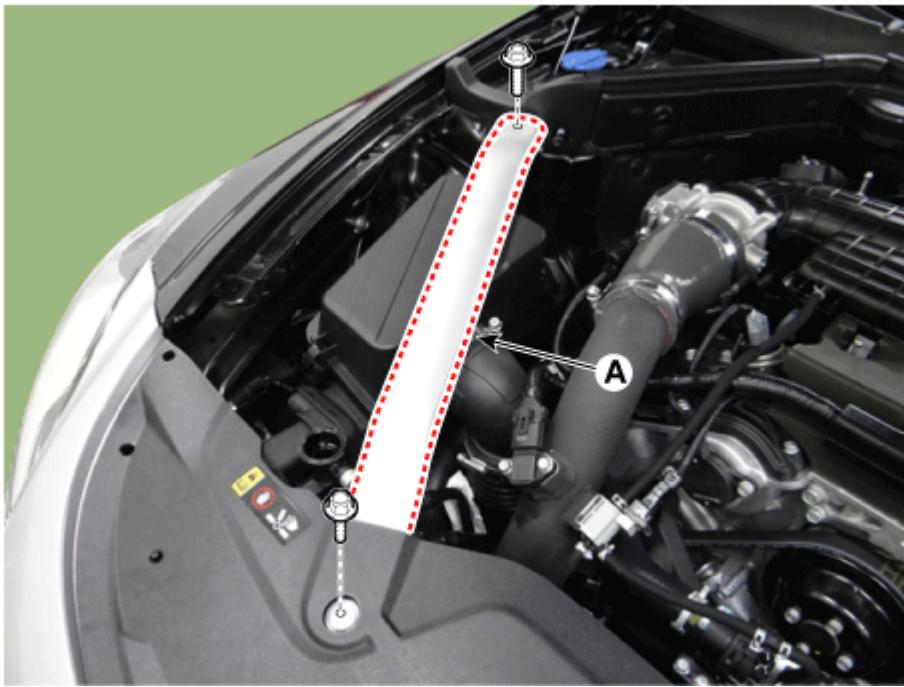


2. Open the air cleaner element cover (A) by unlocking the clamp.

[LH]

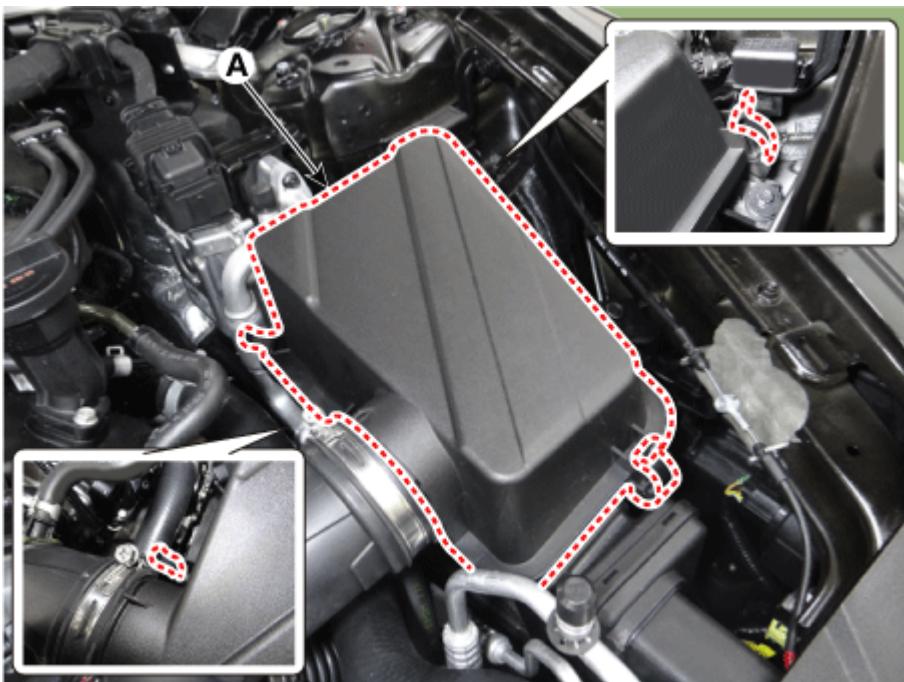

[RH]

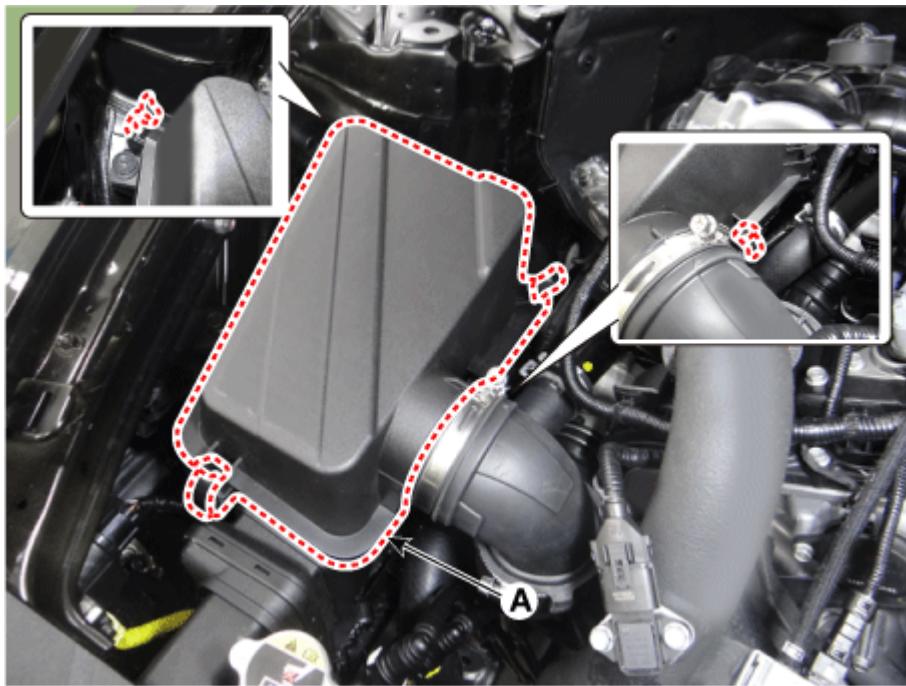

3. Replace the air cleaner element (A) with a new one.

[LH]



[RH]

**NOTICE**

If there are foreign substances inside the air cleaner assembly, wipe the inside of the air cleaner assembly and then replace the air cleaner element.


4. Close the air cleaner cover by hooking the clamps.

---

**INSPECTION**

---

1. Remove the air cleaner element.
2. Check if the air filter is excessively dirty. If so, replace the air cleaner element.
3. If the air cleaner element needs to be cleaned, blow compressed air as shown in the illustration to clean it.

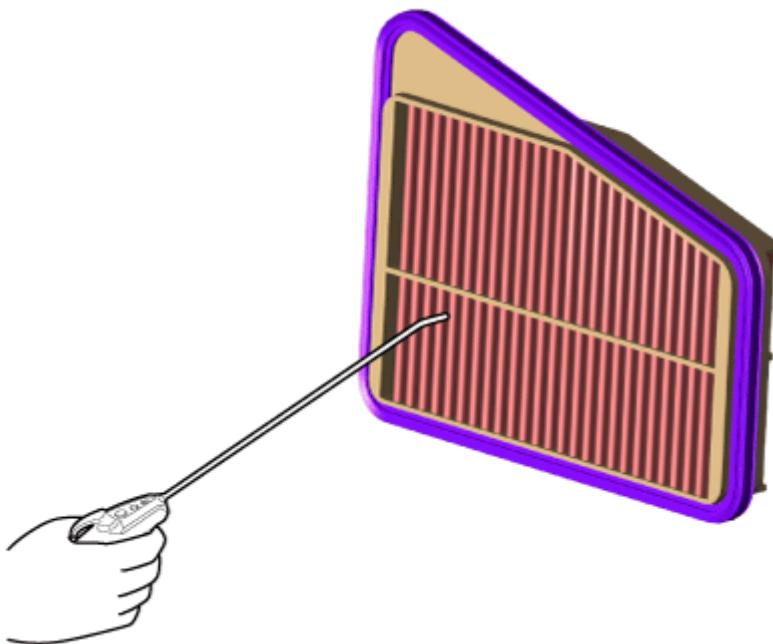**NOTICE**

Be fully aware of the direction of using compressed air on the air cleaner.

4. Reinstall the air cleaner element.

English 

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**