


Please rate this document after reviewing at the bottom of this page.

COMPONENTS

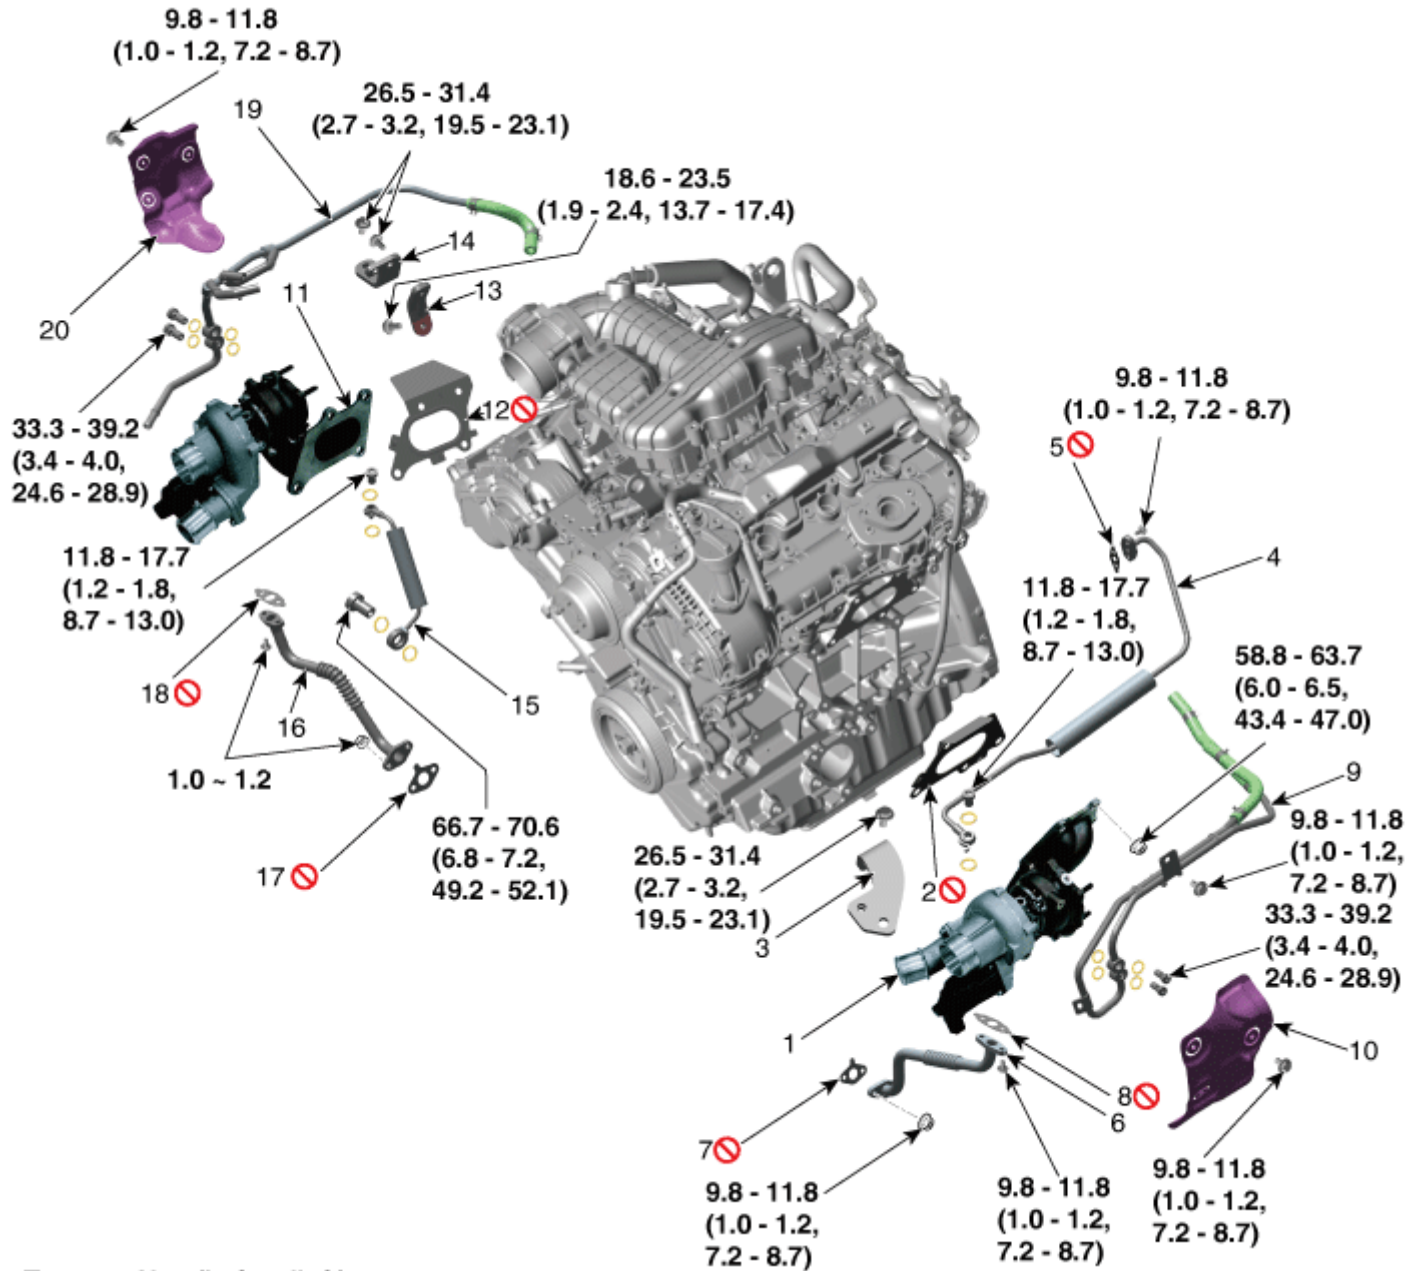

Torque : N·m (kgf-m, lb-ft)

- | | |
|---|--|
| 1. LH Turbo manifold module | 11. RH Turbo manifold module |
| 2. LH Turbo manifold module gasket | 12. RH Turbo manifold module gasket |
| 3. LH Turbo manifold module stay | 13. RH Turbo manifold module stay A |
| 4. LH Turbo charger oil feed pipe | 14. RH Turbo manifold module stay |
| 5. LH Turbo charger oil feed pipe gasket | 15. RH Turbo charger oil feed pipe |
| 6. LH Turbo charger oil drain pipe | 16. RH Turbo charger oil drain pipe |
| 7. LH Turbo charger oil drain pipe gasket A | 17. RH Turbo charger oil drain pipe gasket A |
| 8. LH Turbo charger oil drain pipe gasket | 18. RH Turbo charger oil drain pipe gasket |
| 9. LH Turbo charger water hose & pipe | 19. RH Turbo charger water hose & pipe |
| 10. LH Turbo manifold module heat protector | 20. RH Turbo manifold module heat protector |

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.