


Please rate this document after reviewing at the bottom of this page.

## COMPONENTS

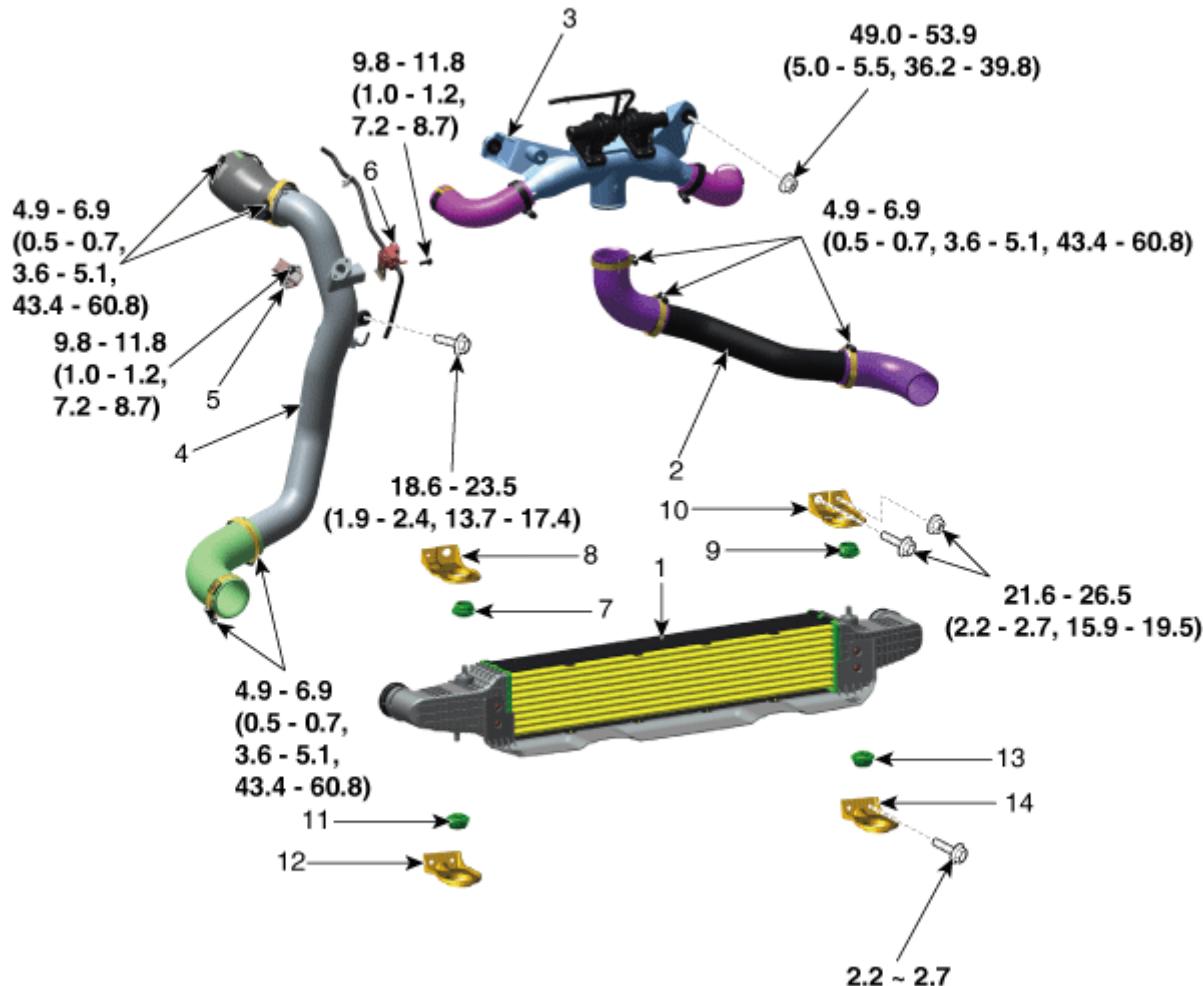

Torque : N·m (kgf·m, lb·ft, lb·in)

- 1. Intercooler
- 2. Intercooler inlet hose & pipe
- 3. Intercooler inlet joint
- 4. Intercooler outlet hose & pipe
- 5. Booster pressure sensor (BPS)
- 6. RCV solenoid valve
- 7. Intercooler upper mounting insulator (RH)
- 8. Intercooler upper mounting bracket (RH)
- 9. Intercooler upper mounting insulator (LH)
- 10. Intercooler upper mounting bracket (LH)
- 11. Intercooler lower mounting insulator (RH)
- 12. Intercooler lower mounting bracket (RH)
- 13. Intercooler lower mounting insulator (LH)
- 14. Intercooler lower mounting bracket (LH)

\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.