

Please rate this document after reviewing at the bottom of this page.

REMOVAL AND INSTALLATION


LH Front Muffler

1. Remove the engine room rear under cover.
(Refer to Engine and Transmission Assembly - "Engine Room Under Cover")

2. Remove the rear muffler bracket (A).

Tightening torque :


29.4 - 39.2 N·m (3.0 - 4.0 kgf·m, 21.7 - 28.9 lb·ft)

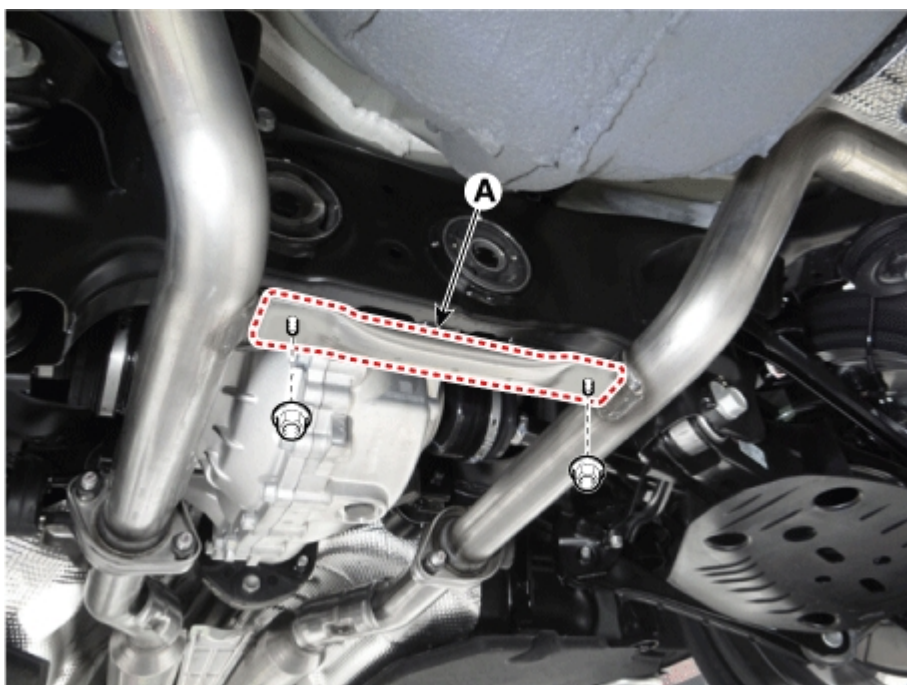

3. Remove the front muffler bracket (A).

Tightening torque :

29.4 - 39.2 N·m (3.0 - 4.0 kgf·m, 21.7 - 28.9 lb·ft)

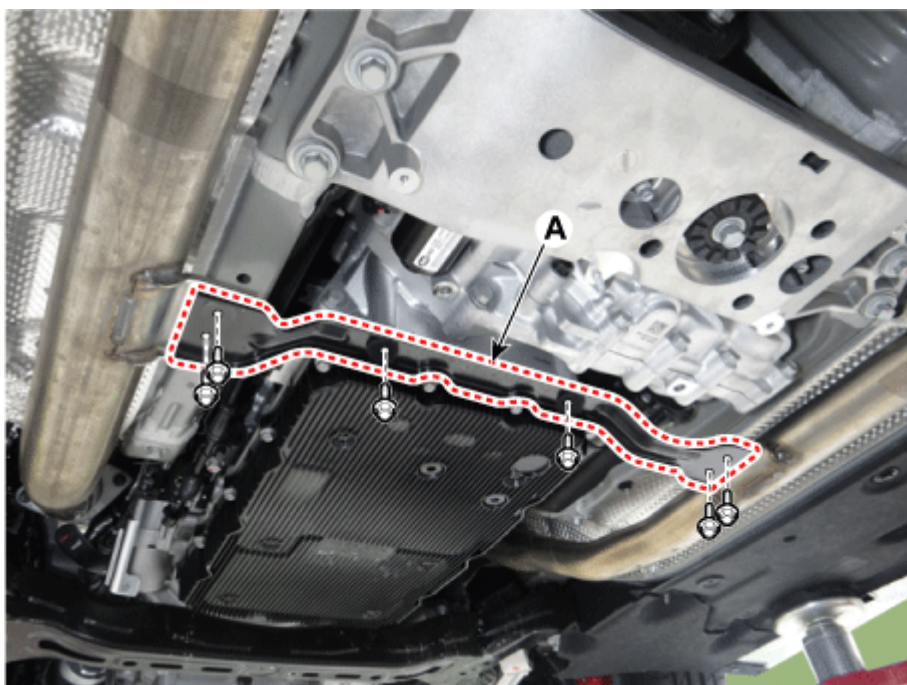


4. Remove the LH front muffler (A).

English

Tightening torque :

39.2 - 58.8 N·m (4.0 - 6.0 kgf·m, 28.9 - 43.4 lb·ft)

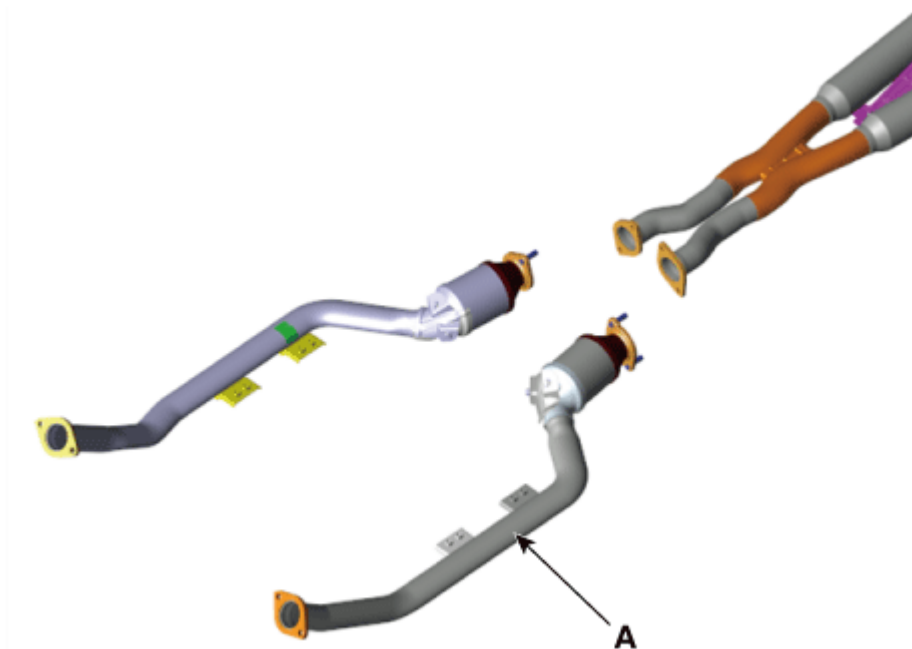

5. Install in the reverse order of removal.

NOTICE

Always use a new muffler gasket.

RH Front Muffler


1. Remove the engine room rear under cover.

(Refer to Engine and Transmission Assembly - "Engine Room Under Cover")

2. Remove the rear muffler bracket (A).

Tightening torque :

29.4 - 39.2 N·m (3.0 - 4.0 kgf·m, 21.7 - 28.9 lb·ft)

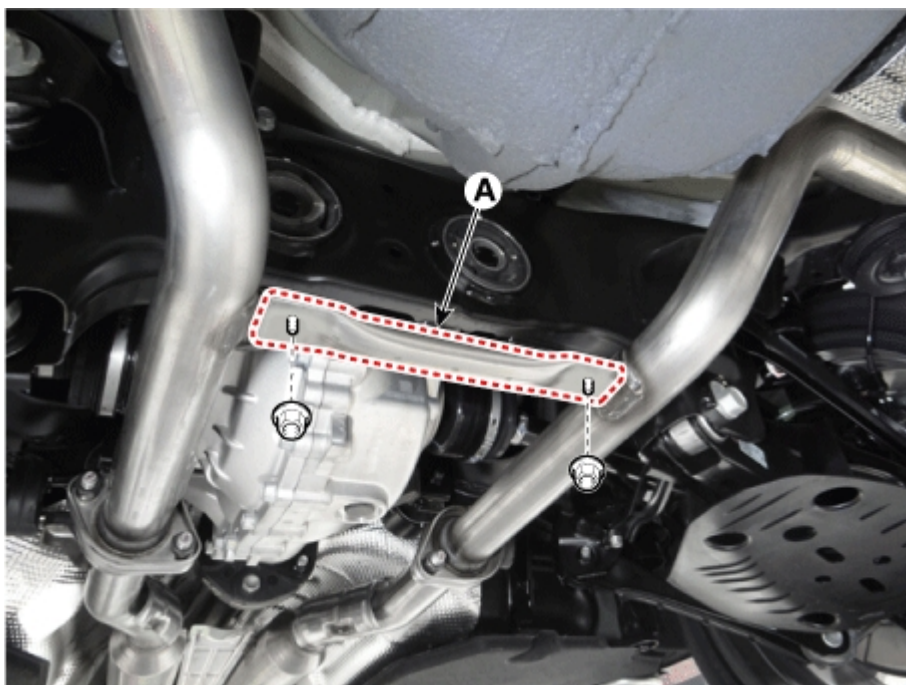


3. Remove the front muffler bracket (A).

Tightening torque :

29.4 - 39.2 N·m (3.0 - 4.0 kgf·m, 21.7 - 28.9 lb·ft)


English

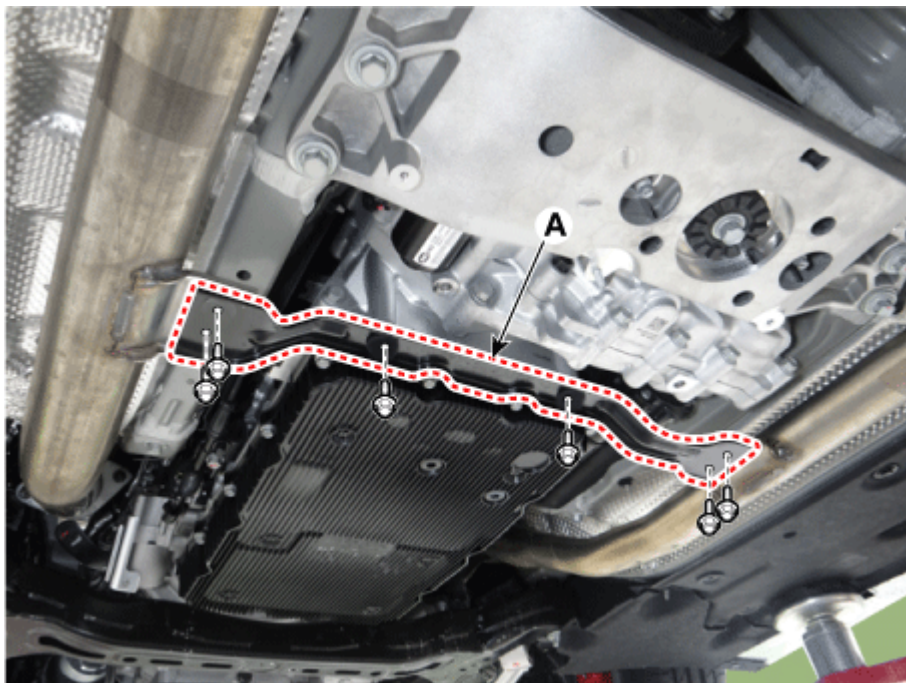

4. Remove the RH front muffler (A).

Tightening torque :

39.2 - 58.8 N·m (4.0 - 6.0 kgf·m, 28.9 - 43.4 lb·ft)

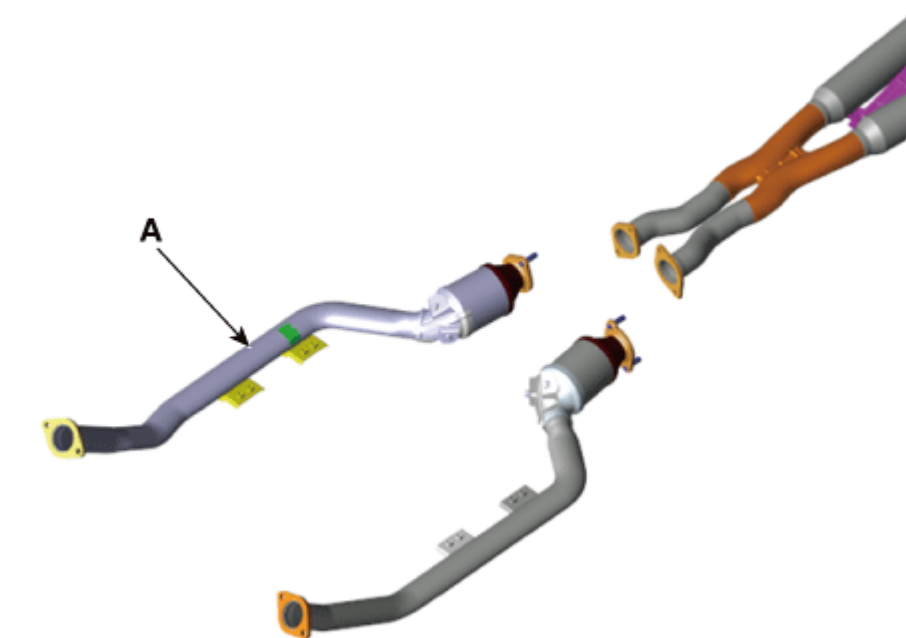


5. Install in the reverse order of removal.

NOTICE

Always use a new muffler gasket.

Center Muffler


1. Remove the tunnel stay (A).

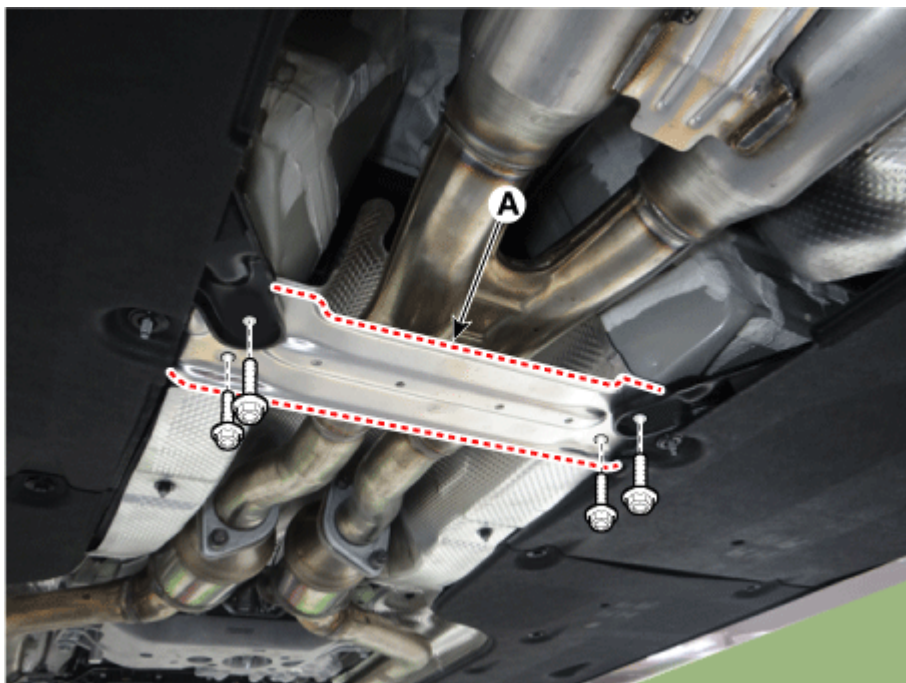

2. Remove the rear muffler bracket (A).

Tightening torque :

29.4 - 39.2 N·m (3.0 - 4.0 kgf·m, 21.7 - 28.9 lb·ft)

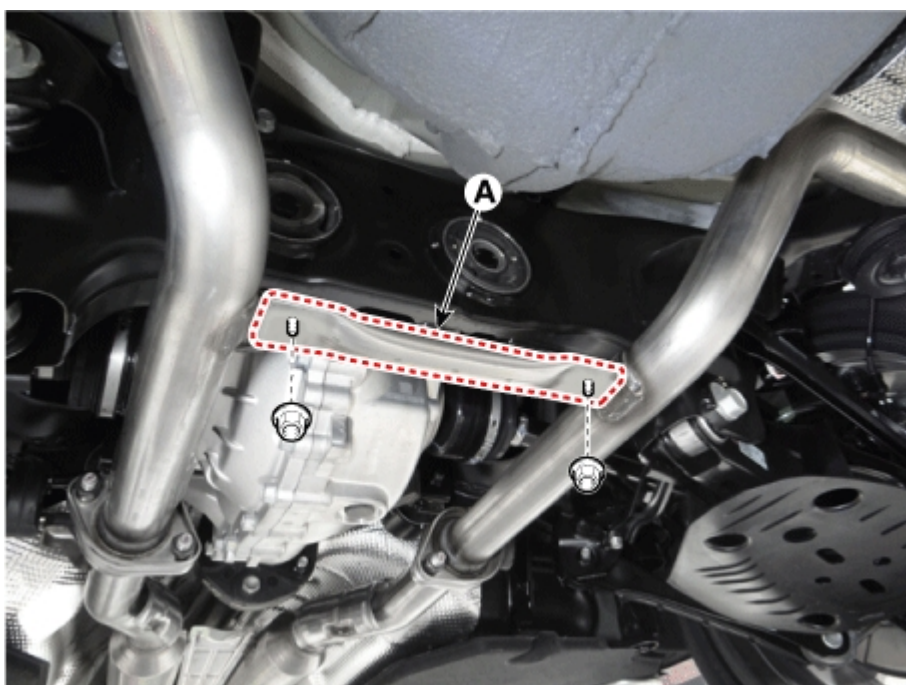


3. Detach the hanger from the center muffler.

4. Remove the center muffler (A).

Tightening torque :

39.2 - 58.8 N·m (4.0 - 6.0 kgf·m, 28.9 - 43.4 lb·ft)

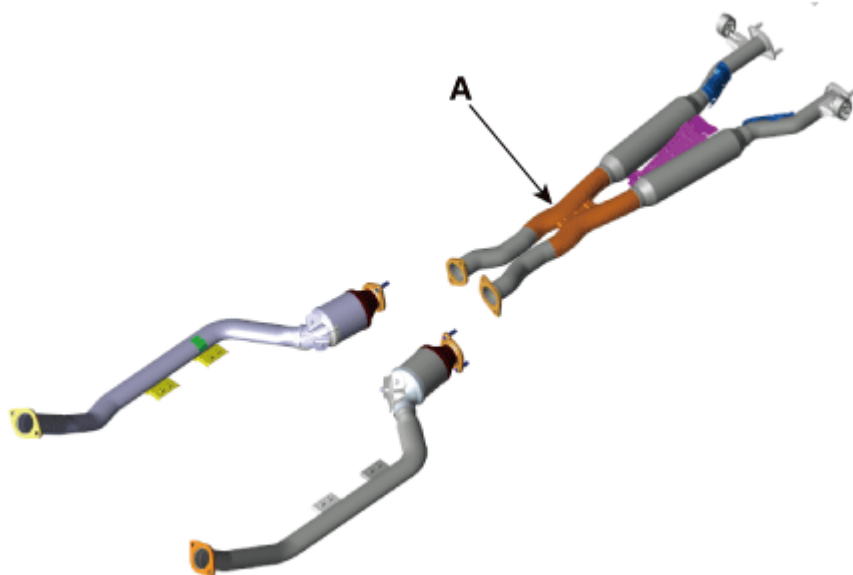

5. Install in the reverse order of removal.

NOTICE


Always use a new muffler gasket.

LH Rear Muffler

1. Remove the rear muffler bracket (A).

Tightening torque :

29.4 - 39.2 N·m (3.0 - 4.0 kgf·m, 21.7 - 28.9 lb·ft)

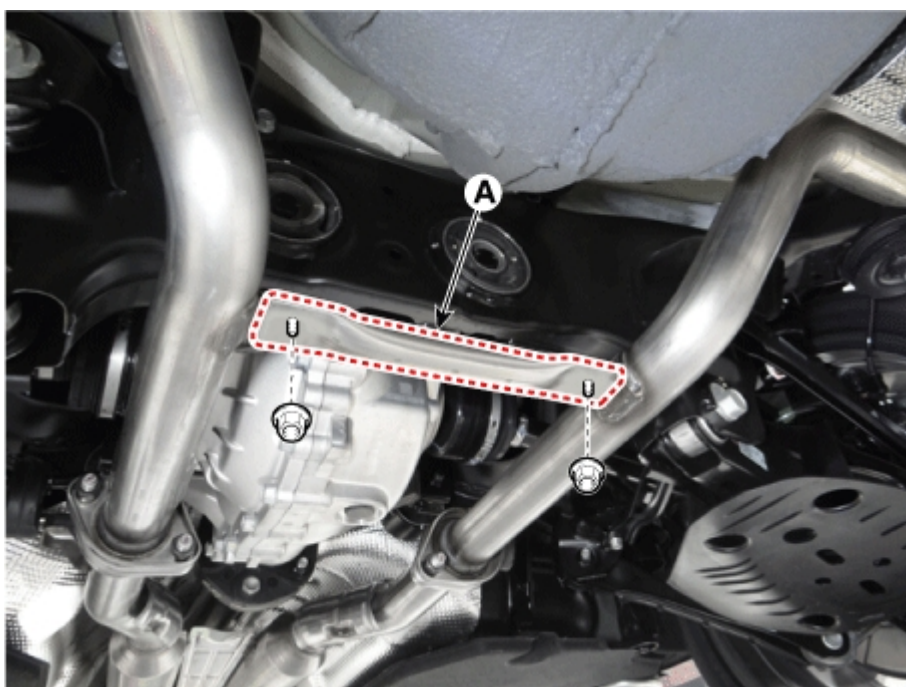


2. Detach the hanger (A) from the LH rear muffler.

3. Remove the LH rear muffler (B).

Tightening torque :

39.2 - 58.8 N·m (4.0 - 6.0 kgf·m, 28.9 - 43.4 lb·ft)

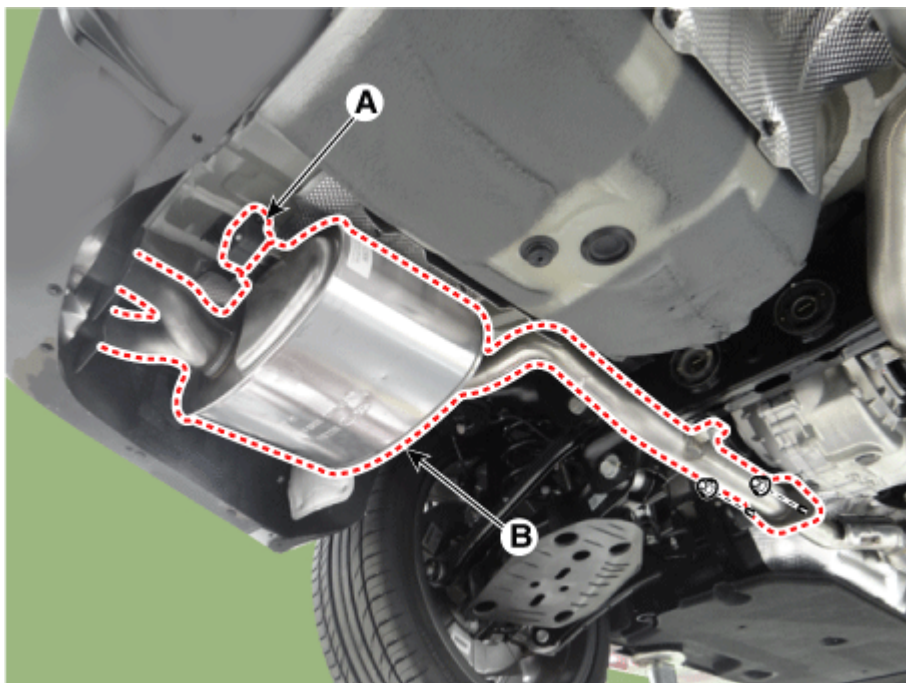

4. Install in the reverse order of removal.

NOTICE


Always use a new muffler gasket.

RH Rear Muffler

1. Remove the rear muffler bracket (A).

Tightening torque :


29.4 - 39.2 N·m (3.0 - 4.0 kgf·m, 21.7 - 28.9 lb·ft)

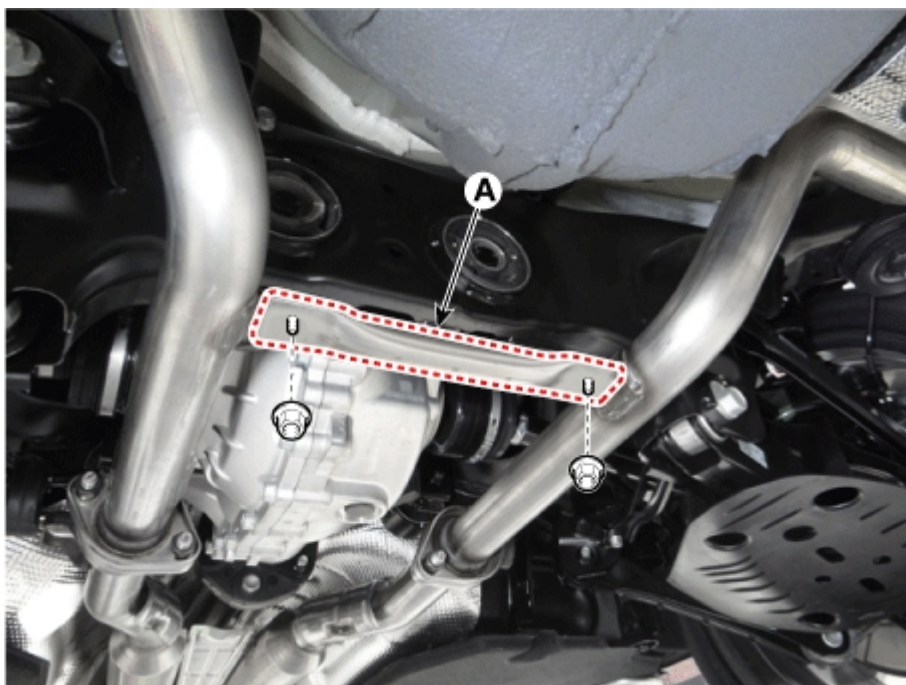

2. Detach the hanger (A) from the RH rear muffler.
3. Remove the RH rear muffler (B).

Tightening torque :

39.2 - 58.8 N·m (4.0 - 6.0 kgf·m, 28.9 - 43.4 lb·ft)

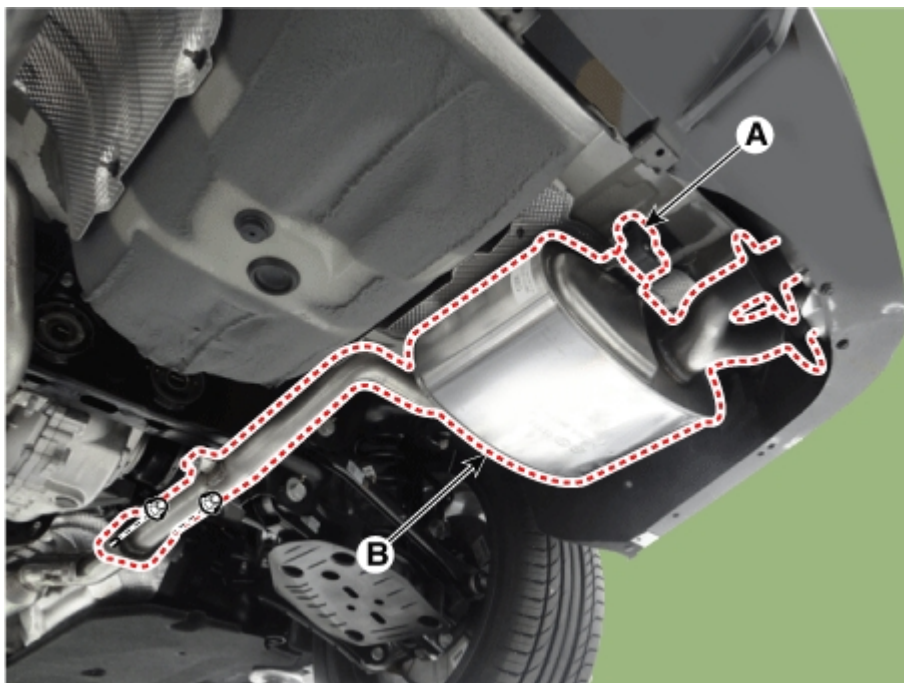

4. Install in the reverse order of removal.

NOTICE

Always use a new muffler gasket.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**