


Please rate this document after reviewing at the bottom of this page.

REPLACEMENT

1. Remove the crankshaft damper pulley.
(Refer to Drive Belt System - "Crankshaft Damper Pulley")
2. Remove the front oil seal (A).



3. Using SST (09231-3C100), install a new front oil seal.

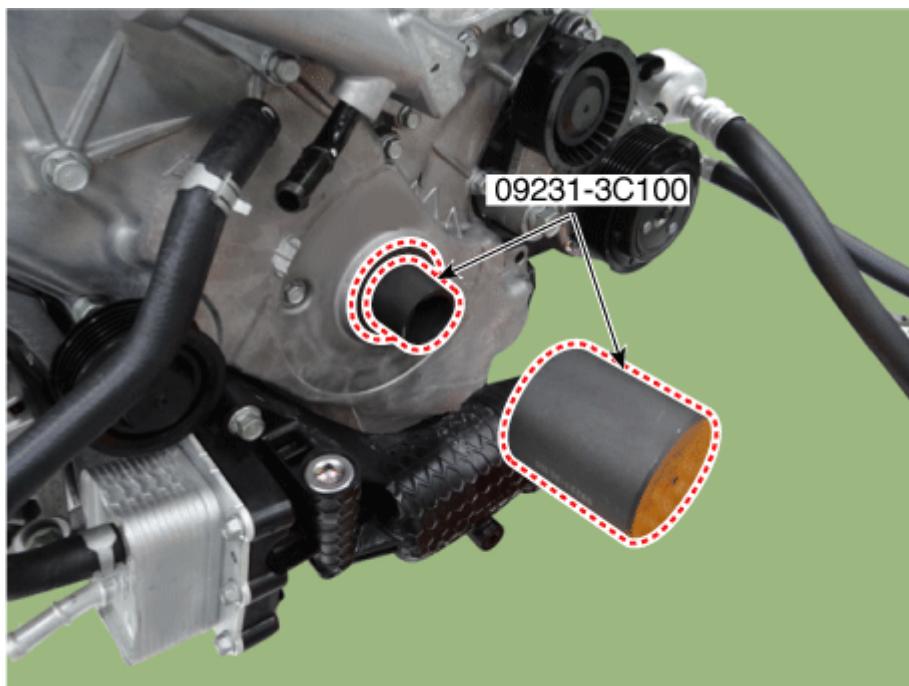

NOTICE

Always use a new front oil seal.