

Please rate this document after reviewing at the bottom of this page.

TIGHTENING TORQUES

Item	N.m	kgf.m	lb-ft
Ignition coil mounting bolt	9.8 - 11.8	1.0 - 1.2	7.2 - 8.7
Spark plug	14.7 - 24.5	1.5 - 2.5	10.9 - 18.1
Alternator mounting bolt	49.0 - 63.7	5.0 - 6.5	36.2 - 47.0
Battery (+) terminal tightening nut	7.8 - 9.8	0.8 - 1.0	5.2 - 8.7
Battery (-) terminal tightening nut	7.8 - 9.8	0.8 - 1.0	5.2 - 8.7
Battery bracket mounting bolt	8.8 - 29.4	0.9 - 3.0	6.5 - 21.7
Battery tray mounting bolt	8.8 - 29.4	0.9 - 3.0	6.5 - 21.7
Battery sensor cable flange mounting bolt (Chassis ground)	26.5 - 35.3	2.7 - 3.6	19.5 - 26.0
Starter mounting bolt	49.0 - 63.7	5.0 - 6.5	36.2 - 47.0
Starter cover mounting bolt	8.8 - 13.7	0.9 - 1.4	6.5 - 10.1

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.