


Please rate this document after reviewing at the bottom of this page.

TROUBLE SYMPTOM CHARTS

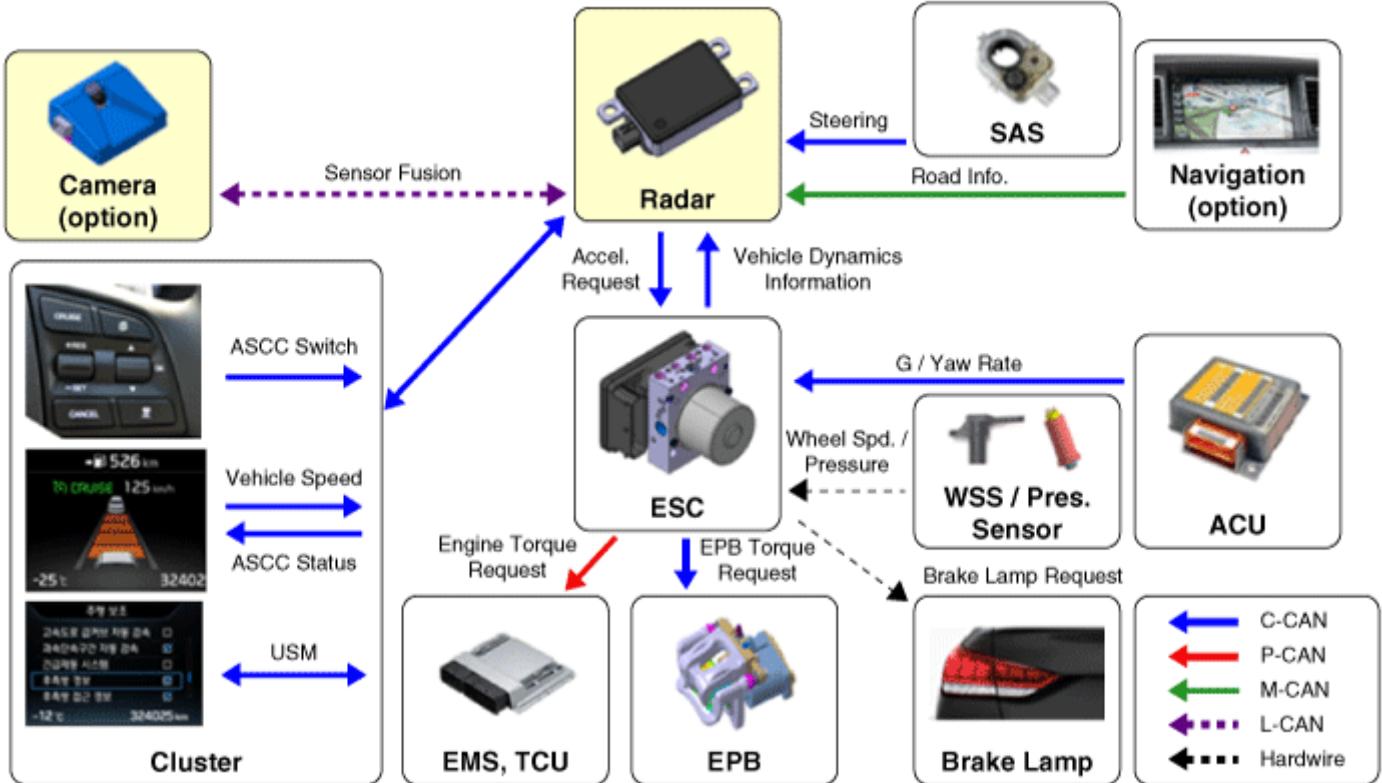

Component Parts And Function Outline

Component part	Function
Cruise Control Switch	Input the set speed and distance to the SCC ECU.
Instrument Cluster	Display various information inputted from SCC.
Smart Cruise Control Unit	Recognize and track the vehicle ahead. Calculate the target speed and distance Request the acceleration and retardation to ESP
VDC (HECU)	Automatic braking and request the engine torque control to the engine (ECM) Request the EPB torque control on the Electronic Parking Brake (EPB) Request the stop lamp indicator ON
Engine (ECM)	Control the engine torque
Electronic Parking Brake (EPB)	Control the EPB torque
Stop lamp	Stop lamp indicator ON

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.