

Please rate this document after reviewing at the bottom of this page.

## TROUBLESHOOTING

Symptom	Suspected area
Engine does not start or struggles to start	Vapor hose damaged or disconnected
Engine struggles to start	Malfunctioning Purge Control Solenoid Valve
Rough idle or engine stalls	Vapor hose damaged or disconnected
	Malfunctioning PCV valve
Rough idle	Malfunctioning Evaporative Emission Control System
Excessive oil consumption	Positive crankcase ventilation line clogged

\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.