


Please rate this document after reviewing at the bottom of this page.

## INSPECTION

1. After disconnecting the vapor hose from the PCV valve, remove the PCV valve.
2. Reconnect the PCV valve to the vapor hose.
3. Run the engine at idle, then put a finger over the open end of the PCV valve and make sure that intake manifold vacuum can be felt.

### NOTICE

The plunger inside the PCV valve will move back and forth in vacuum.

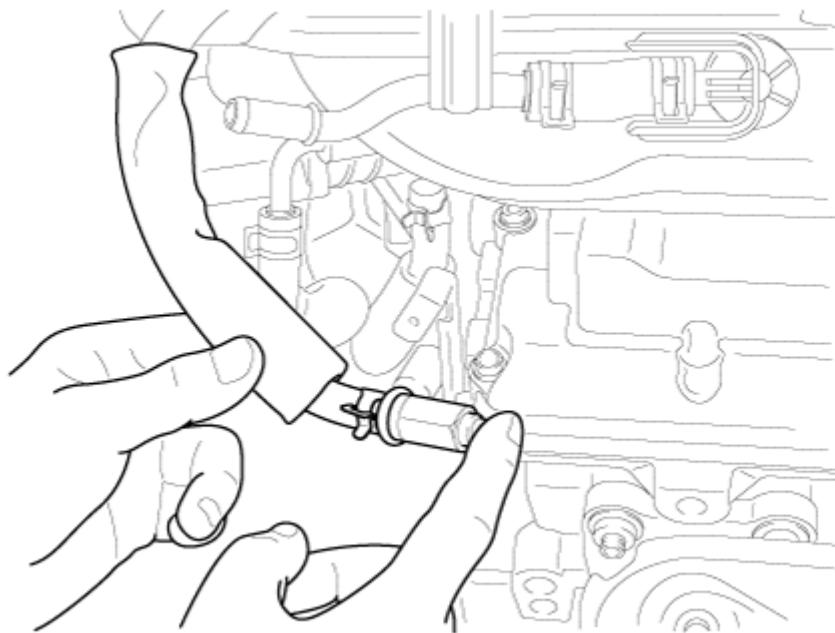

4. If vacuum is not felt, inspect PCV operation. If operating correctly, clean or replace the vapor hose.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**