


Please rate this document after reviewing at the bottom of this page.


REMOVAL

1. Disconnect the vapor hose (A).
2. Remove the PCV valve (B).

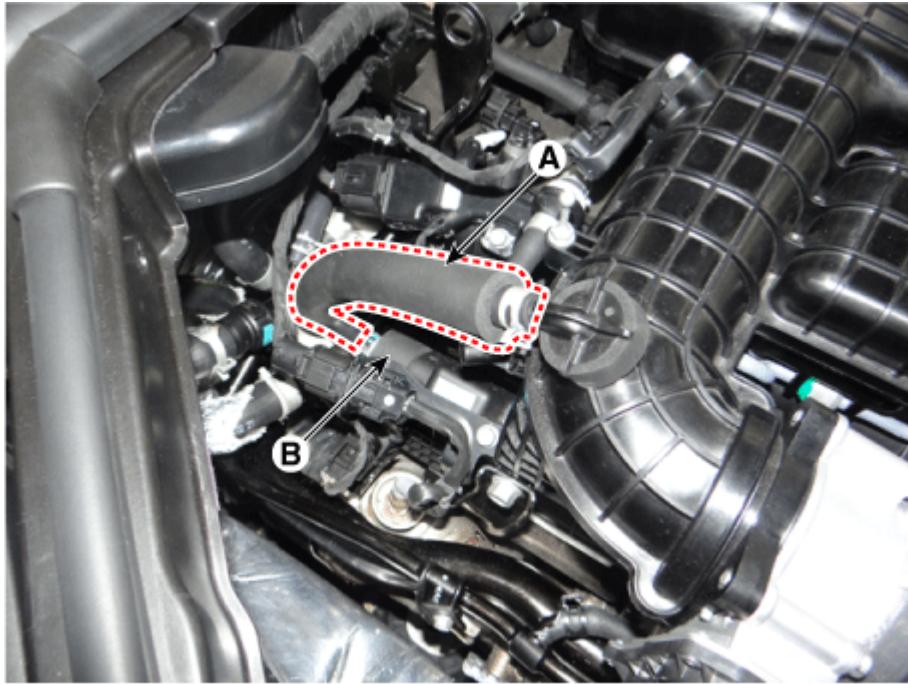

INSPECTION

1. Insert a thin stick (A) into the PCV valve (B) from the threaded side to check for plunger movement.

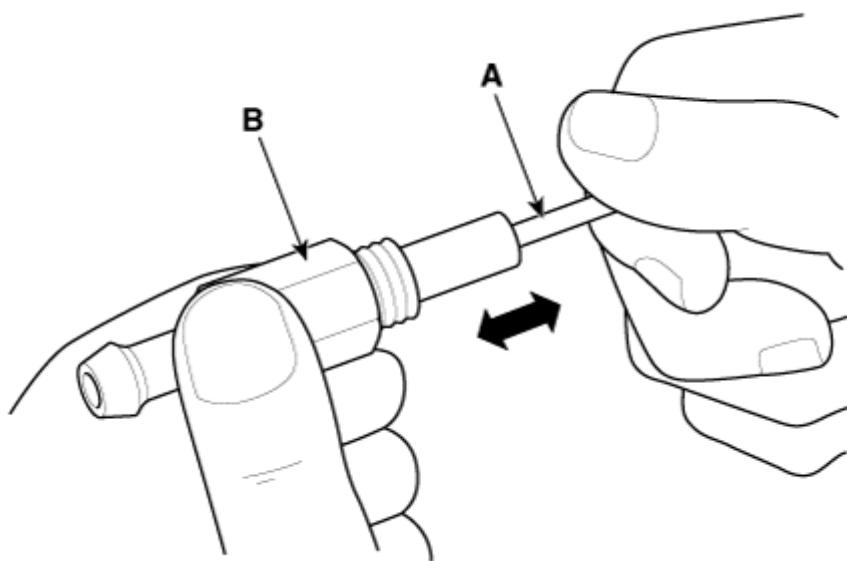

NOTICE

If the plunger does not move (PCV valve is clogged), clean or replace the valve.

English 

INSTALLATION

1. Install in the reverse order of removal.

PCV Valve :

7.9 - 11.7 N·m (0.8 - 1.2 kgf·m, 5.8 - 8.6 lb·ft)

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**