



Please rate this document after reviewing at the bottom of this page.

## REMOVAL


1. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
2. Remove the rear-left wheel & tire and wheel house cover.
3. Remove the fuel tank air filter.  
**(Refer to Emission Control System - Fuel Tank Air Filter")**
4. Disconnect the vapor hose quick-connector (A).
5. Remove the canister assembly (C) from the vehicle after removing the mounting nuts (B).

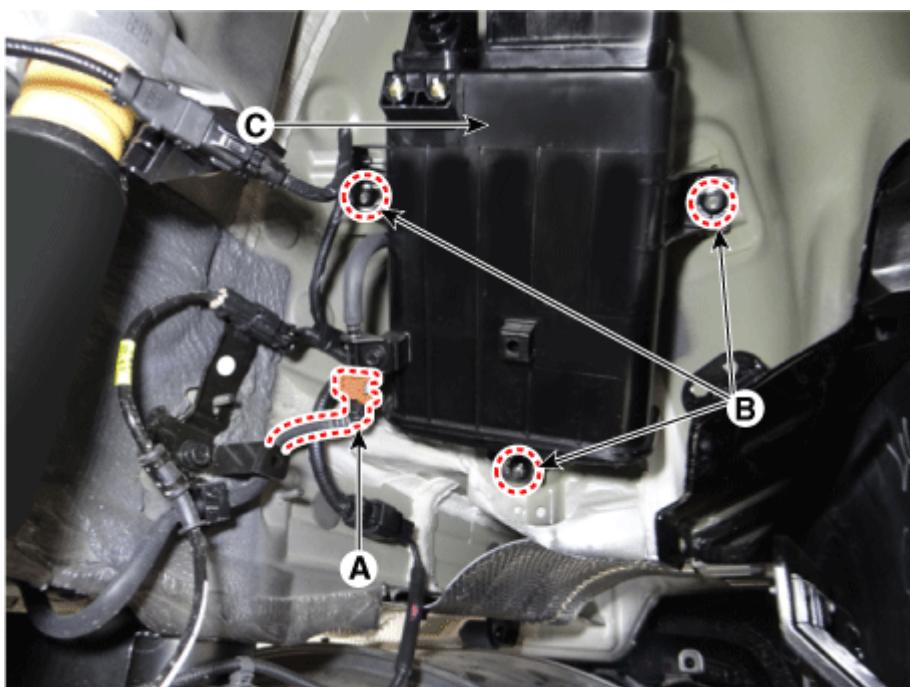

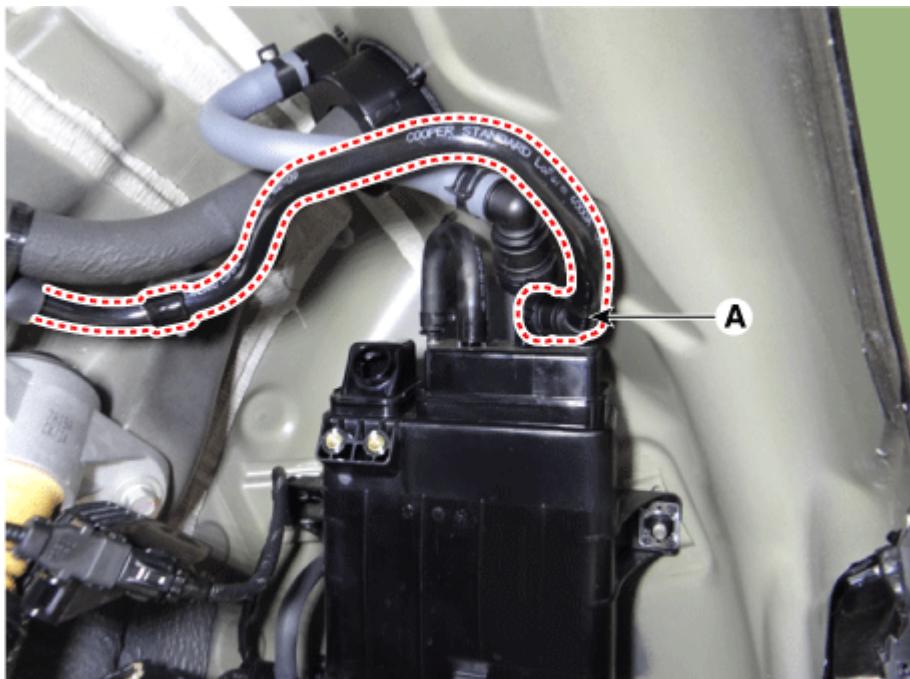

## INSPECTION

1. Check for the following items visually.
  - Cracks or leakage of the canister
  - Loose connection, distortion, or damage of the vapor hose/tube

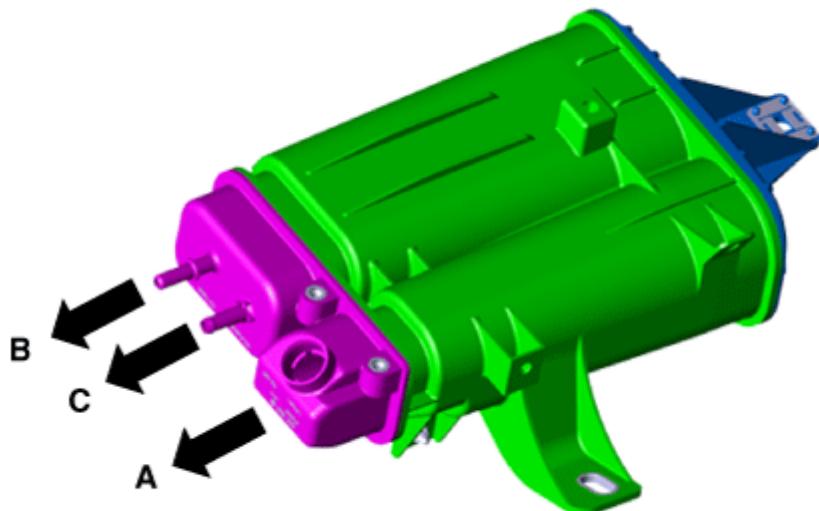

A: Canister ↔ Atmosphere

B: Canister ↔ Fuel Tank

C: Canister ↔ Intake Manifold

## INSTALLATION

1. Install in the reverse order of removal.

**Canister protector mounting bolt:**

3.9 - 5.9 N·m (0.4 - 0.6 kgf·m, 2.9 - 4.3 lb·ft)

**Canister mounting bolt:**

3.9 - 5.9 N·m (0.4 - 0.6 kgf·m, 2.9 - 4.3 lb·ft)

\* Thanks for your cooperation for the more quality. Please surely rate this document before you leave.

English