

Please rate this document after reviewing at the bottom of this page.

## INSPECTION

1. Switch "OFF" the ignition.
2. Disconnect the PCSV connector.
3. Measure resistance between the PCSV terminals 1 and 2.
4. Check that the resistance is within the specification.


**Specification:** 18.5 - 22.5  $\Omega$  [20°C(68°F)]

## REMOVAL

1. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
2. Disconnect the purge control solenoid valve connector (A).



3. Disconnect the vapor hoses (A) from the purge control solenoid valve.
4. Remove the valve from the bracket.

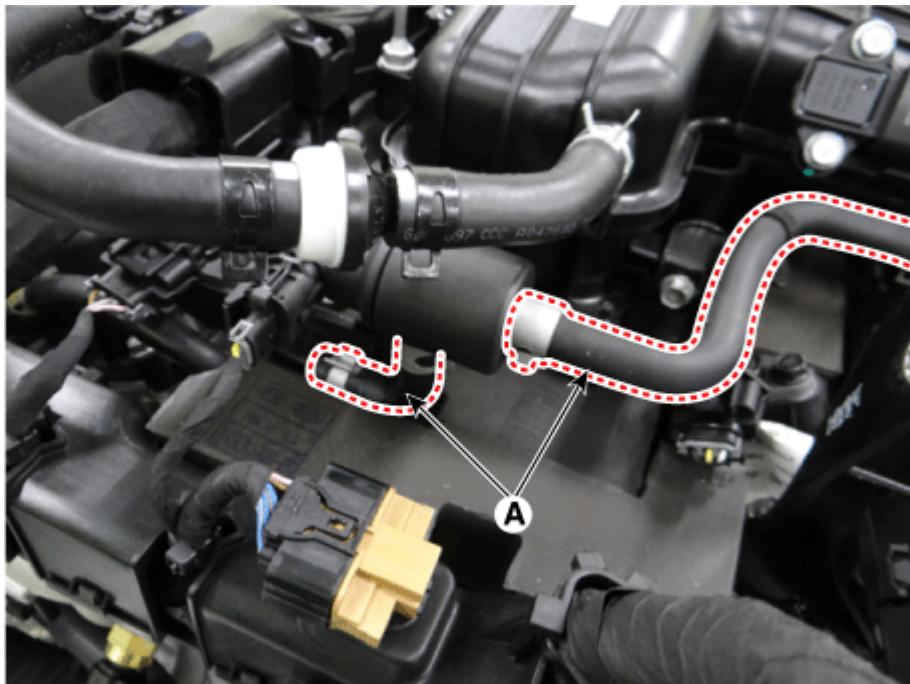

## INSTALLATION

### NOTICE

- Install the component to the specified torque.
- Note that internal damage may occur if the component drops. In this case, inspect it before installation.
- Do not apply oil or lubricant to the end of the hoses when connecting the PCSV hose.
- Keep foreign materials away from flowing into the valve.

1. Install in the reverse order of removal.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**