
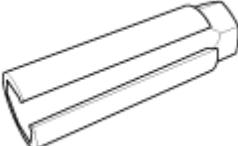
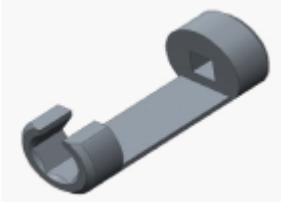


Please rate this document after reviewing at the bottom of this page.

SPECIAL SERVICE TOOLS

Tool Name / Number	Illustration	Description
Fuel Pressure Gauge 09353-24100	 A fuel pressure gauge with a flexible hose attached to a fitting.	Used for measuring the pressure in fuel line
Fuel Pressure Gauge Adapter 0K353-D4100	 A U-shaped adapter with two fittings, designed to connect between a high pressure fuel pump and a low pressure fuel feed tube.	Used for connecting between high pressure fuel pump and low pressure fuel feed tube to measure the pressure in fuel line ※SST 09353-C1000 also can be used
Heated Oxygen Sensor Socket Wrench 09392-1Y100 (19 mm)	 A long, tapered wrench with a hexagonal socket at the end, used for removing and installing heated oxygen sensors.	Removal and installation of the heated oxygen sensor ※ SST No.09392-2H100 model also can be used for removing the Heated Oxygen Sensor.
Torque Wrench Socket 09314-3V100 (17 mm)	 A torque wrench with a long, thin, curved handle and a hexagonal socket at the end.	Used for removing / installing high pressure fuel pipe
Injector Combustion Seal Guide & Sizing tool 09353-2B000	 A cylindrical tool with several smaller cylindrical components attached to its side, used for installing injector combustion seals.	Used for installing injector combustion seal on injector
Injector Remover 09351-D2100	 A mechanical device with a gripping mechanism, used for removing stuck injectors.	Removing the stuck injector
Sub Fuel Sender Plate Cover remover 09310-B9100	 A curved metal plate with a central hole, used for removing fuel pump sub-sender plate covers.	Used for removing / installing fuel pump.

Low Pressure Fuel Pump
Plate Cover remover
09310-B8100

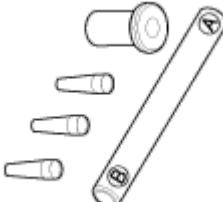

Used for removing / installing fuel p

English

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.