

Please rate this document after reviewing at the bottom of this page.

## REMOVAL

1. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
2. Disconnect the boost pressure sensor connector (A).
3. Remove the mounting bolt (B), and then remove the sensor from the intercooler outlet pipe.

**Boost pressure sensor mounting bolt :**

9.8 - 11.8 N·m (1.0 - 1.2 kgf·m, 7.2 - 8.7 lb·ft)



## INSTALLATION

### NOTICE

- Install the component to the specified torques.
- Note that internal damage may occur when the component is dropped. If the component has been dropped, inspect before installing.
- Insert the sensor in the installation hole and be careful not to damage it.

1. Install in the reverse order of removal.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**