

Please rate this document after reviewing at the bottom of this page.

INSPECTION

1. Connect the KDS on the Data Link Connector (DLC).
2. Switch "ON" the ignition.
3. Measure the output voltage of the APS 1 and 2 at C.T and W.O.T.


Accelerator Position	Output Voltage (V) [Vref = 5V]	
	APS1	APS2
C.T	0.7 - 0.8	0.33 - 0.43
W.O.T	3.98 - 4.22	1.93 - 2.17

REMOVAL

1. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
2. Disconnect the accelerator position sensor connector (A).
3. Remove the installation nuts (B) and then remove the accelerator pedal module (C).

Accelerator pedal sensor mounting bolt :

8.8 - 13.7 N·m (0.9 - 1.4 kgf·m, 6.5 - 10.1 lb·ft)

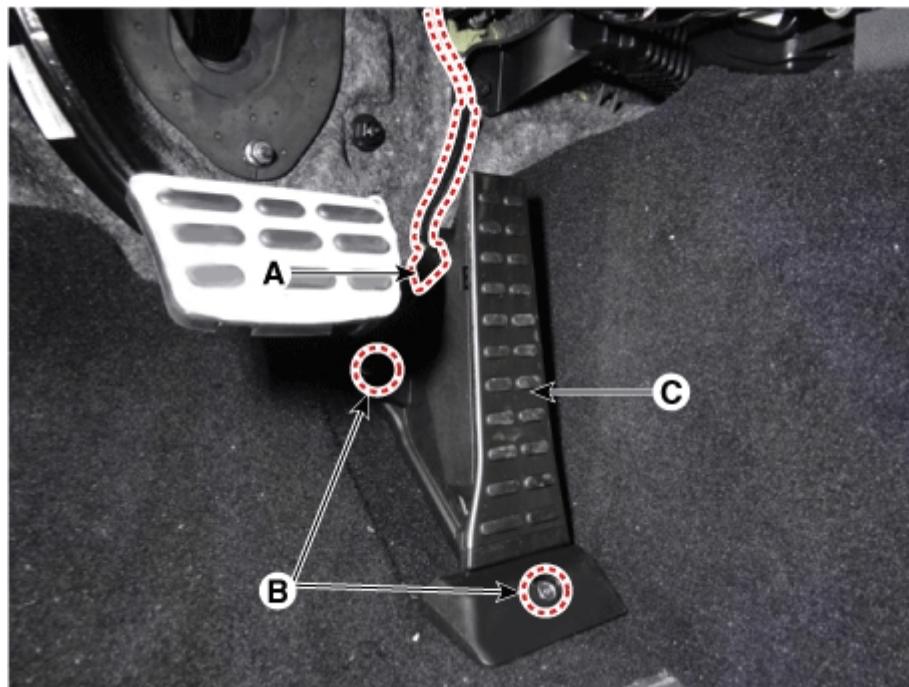

INSTALLATION

1. Install in the reverse order of removal.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**