

Please rate this document after reviewing at the bottom of this page.

INSPECTION

1. Switch "OFF" the ignition.
2. Disconnect the PCSV connector.
3. Measure resistance between the PCSV terminals 1 and 2.
4. Check that the resistance is within the specification.


Specification: 18.5 - 22.5 Ω [20°C(68°F)]

REMOVAL

1. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
2. Disconnect the purge control solenoid valve connector (A).



3. Disconnect the vapor hoses (A) from the purge control solenoid valve.
4. Remove the valve from the bracket.

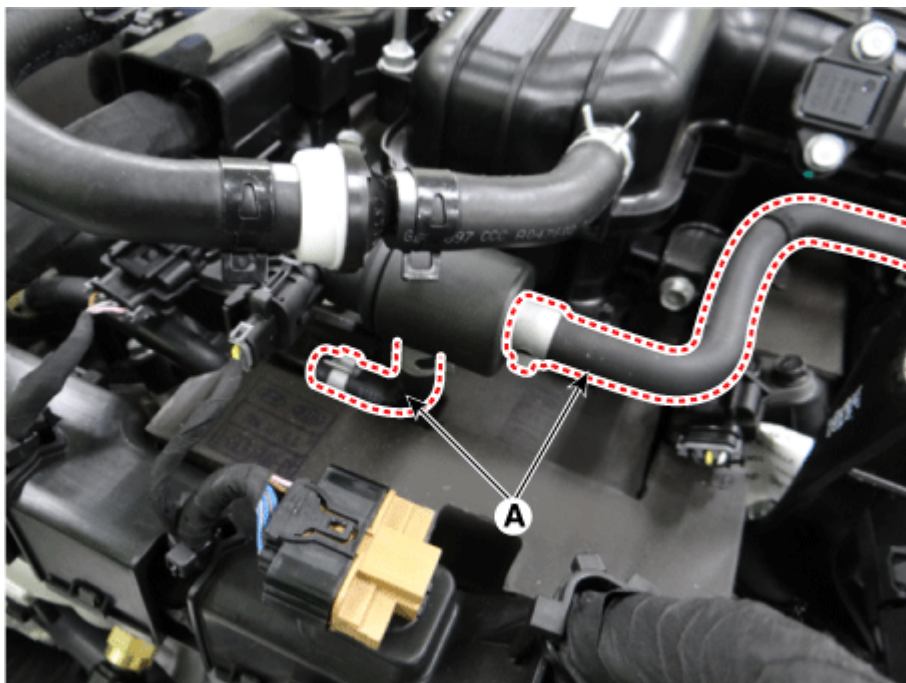

INSTALLATION

NOTICE

- Install the component to the specified torque.
- Note that internal damage may occur if the component drops. In this case, inspect it before installation.
- Do not apply oil or lubricant to the end of the hoses when connecting the PCSV hose.
- Keep foreign materials away from flowing into the valve.

1. Install in the reverse order of removal.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**