


Please rate this document after reviewing at the bottom of this page.

REMOVAL

1. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
2. Disconnect the RCV control solenoid valve connector (A) and vapor hoses (B).
3. Remove the RCV control solenoid valve (C).

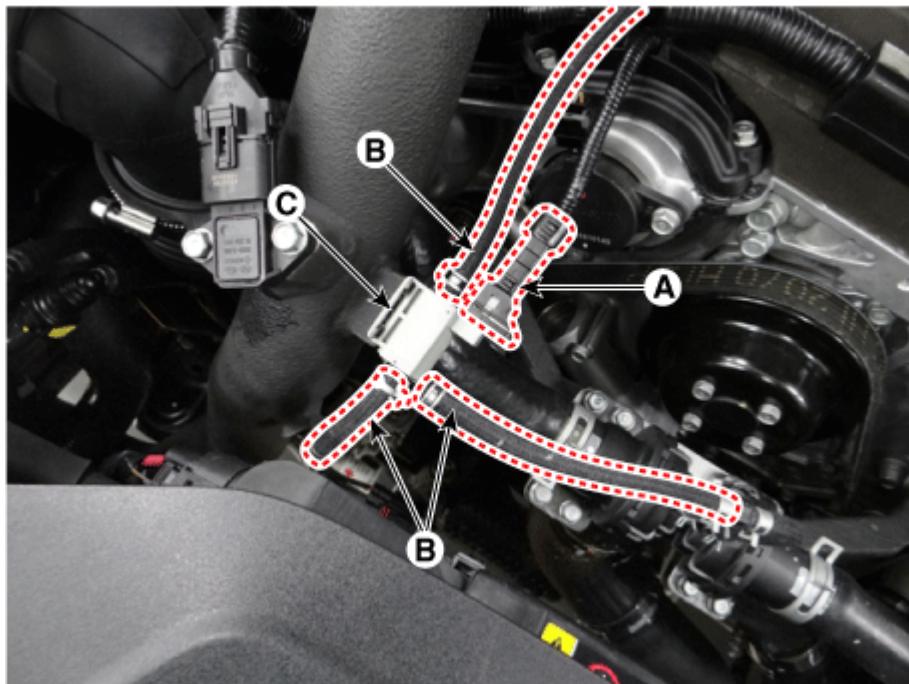

INSTALLATION

NOTICE

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. If the component has been dropped, inspect before installing.

1. Install in the reverse order of removal.

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.