


Please rate this document after reviewing at the bottom of this page.

COMPONENTS LOCATION

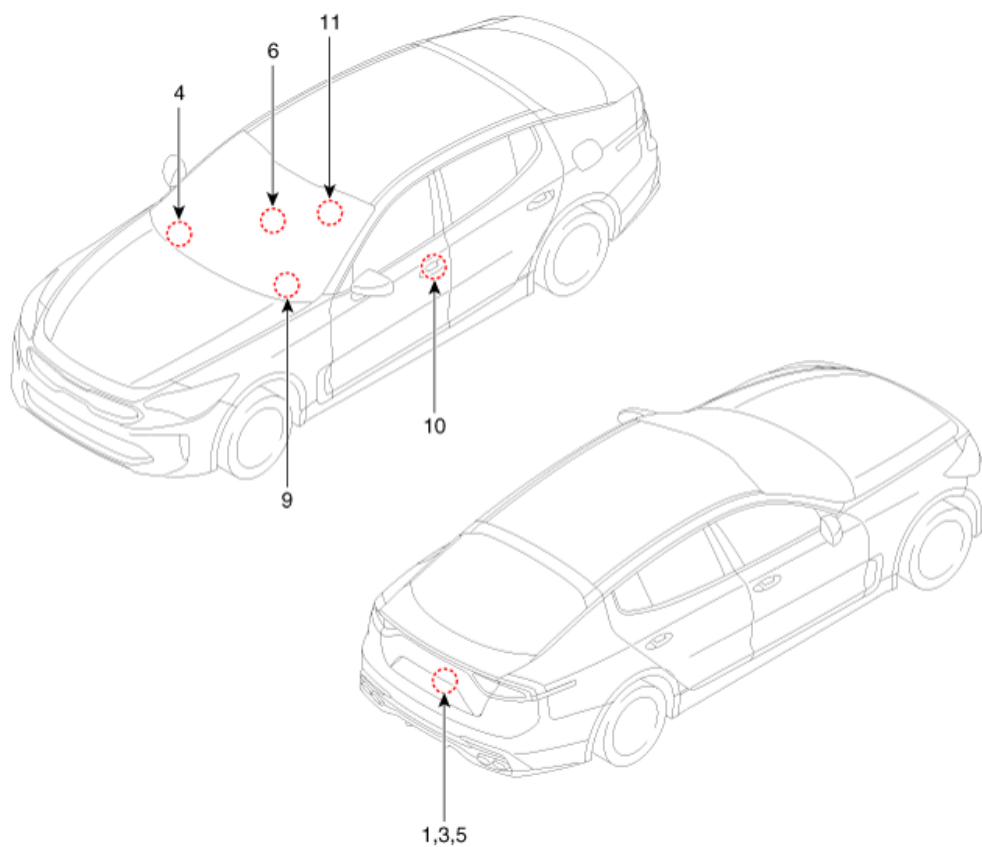


- | | |
|---|---------------|
| 1. Battery sensor | 7. Alternator |
| 2. Brake Booster Vacuum Pressure Sensor (BBVPS) | 8. Starter |


- 3. AGM battery
- 4. DC/DC Converter [200W]
- 5. DC/DC Converter [400W]
- 6. ISG OFF Switch

- 9. Brake switch
- 10. Door switch
- 11. Seat belt switch
- 12. Hood switch


- 1. Battery sensor
- 3. AGM battery

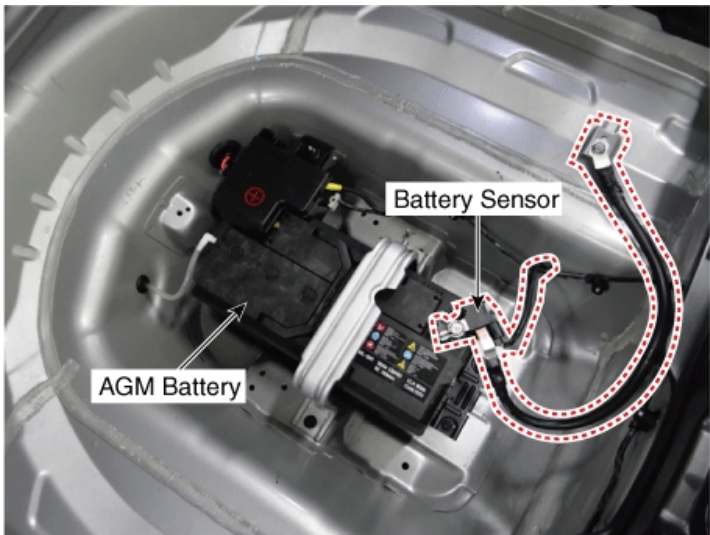


- 2. Brake Booster Vacuum Pressure Sensor (BBVPS)

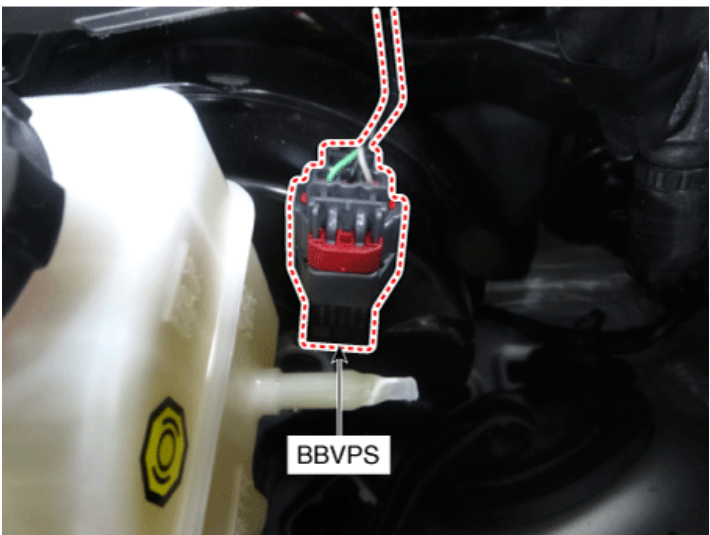

- 4. DC/DC Converter [400W]

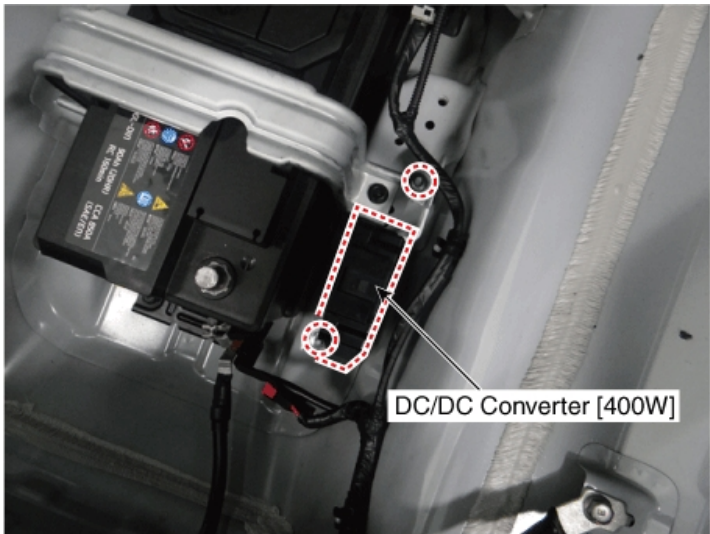


- 5. DC/DC Converter [200W]

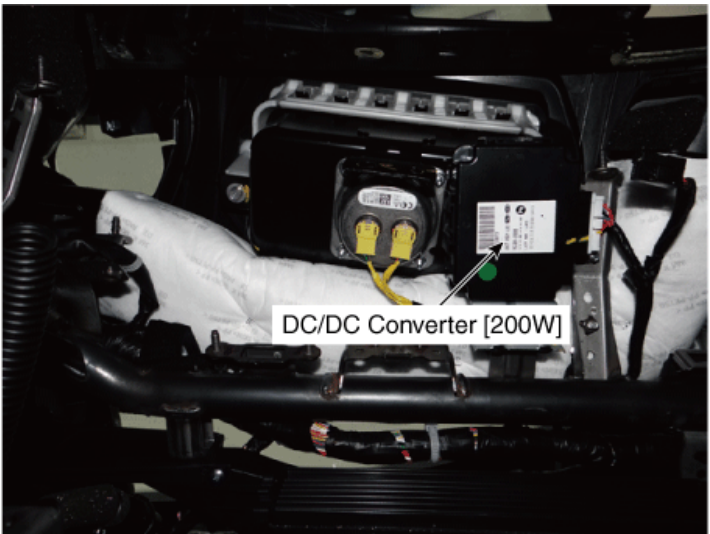

- 6. ISG OFF Switch




- 7. Alternator

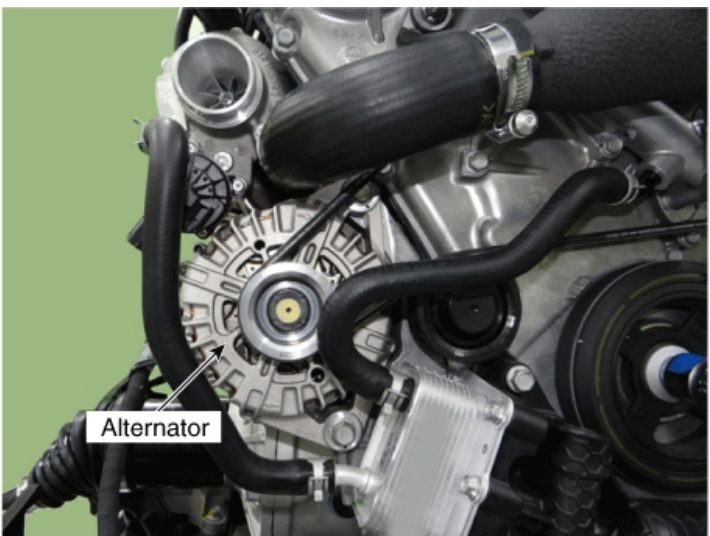


- 8. Starter


- 9. Brake switch

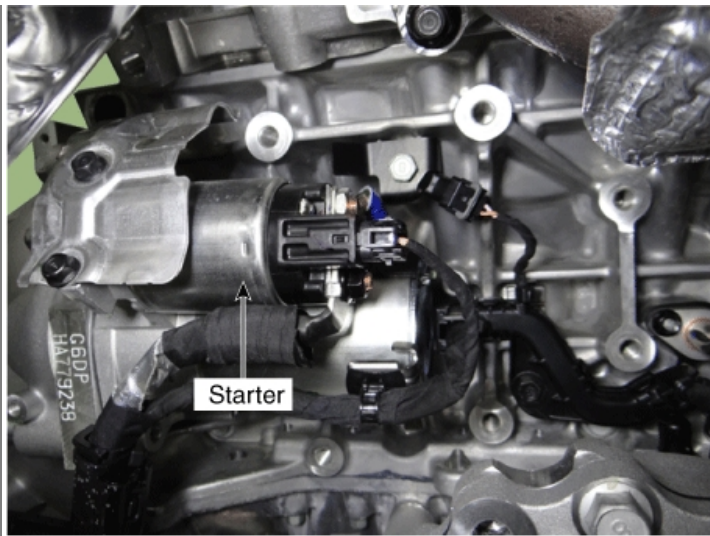



10. Door switch

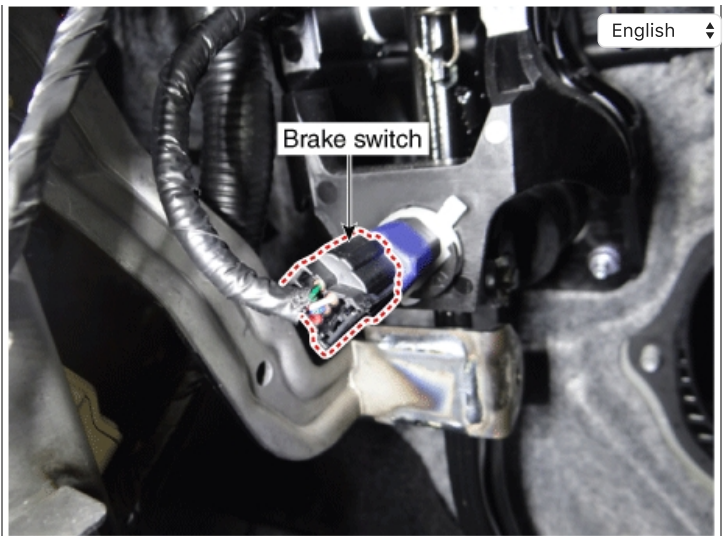

11. Seat belt switch

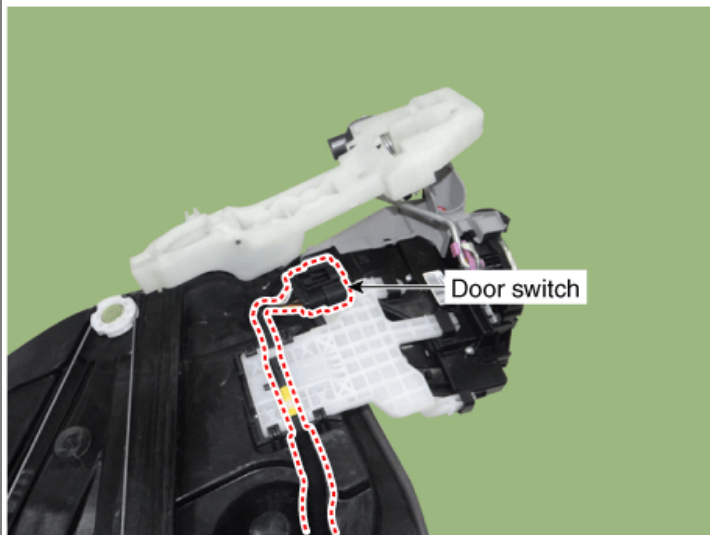

12. Hood switch

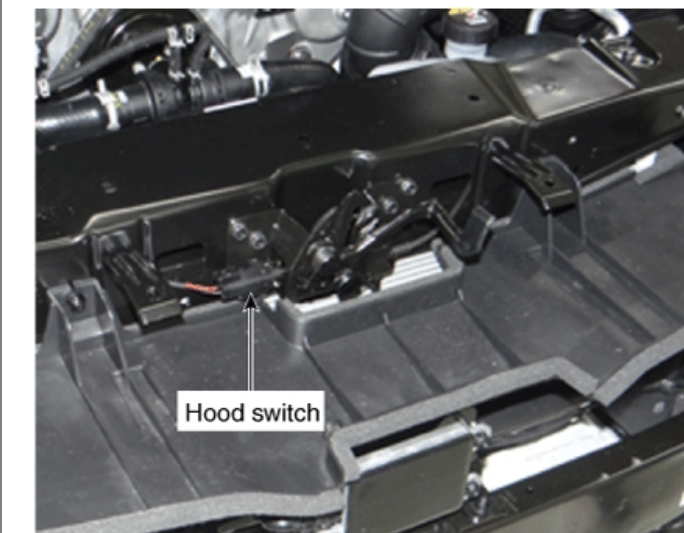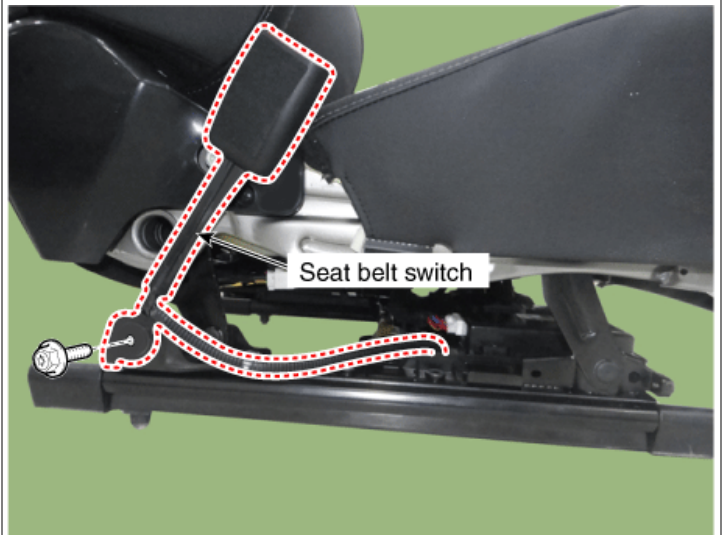

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.