

Please rate this document after reviewing at the bottom of this page.

## INSPECTION

1. Check for loose connection of BBCPS and vacuum hose, and damage of vacuum hose.
2. Connect KDS to DLC (Data Link Cable).
3. Warm up the engine to normal operating temperature.
4. Monitor "BBVPS" parameter on KDS.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**