


Please rate this document after reviewing at the bottom of this page.

REMOVAL

1. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
2. Remove the turbo manifold module.
(Refer to Engine Mechanical System - "Turbo Manifold Module")
3. Disconnect the alternator connector (A), and remove the cable (B) from alternator "B" terminal.

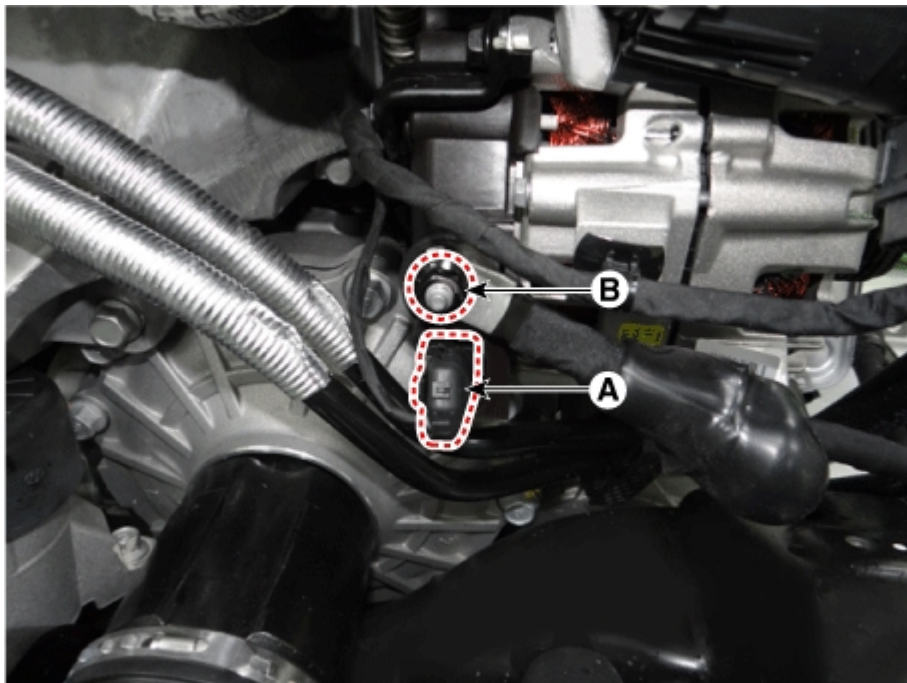

4. Remove the alternator bolts (A).





INSTALLATION

1. Install in the reverse order of removal.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**