



Please rate this document after reviewing at the bottom of this page.

## REMOVAL

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Remove the crash pad lower panel.  
**(Refer to Body - "Crash Pad Lower Panel")**
3. Remove the knee airbag.  
**(Refer to Restraint - "Knee airbag")**
4. Disconnect the brake lamp switch connector (A).

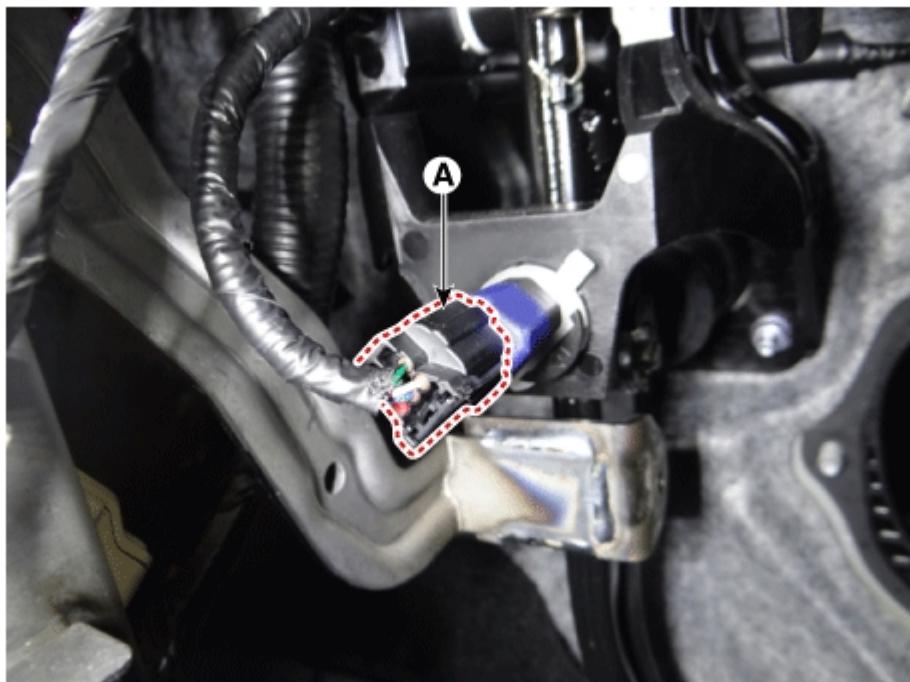

5. Pull the locking plate (A) as indicated by the arrow and then turn brake switch (B) 45° clockwise and remove it.

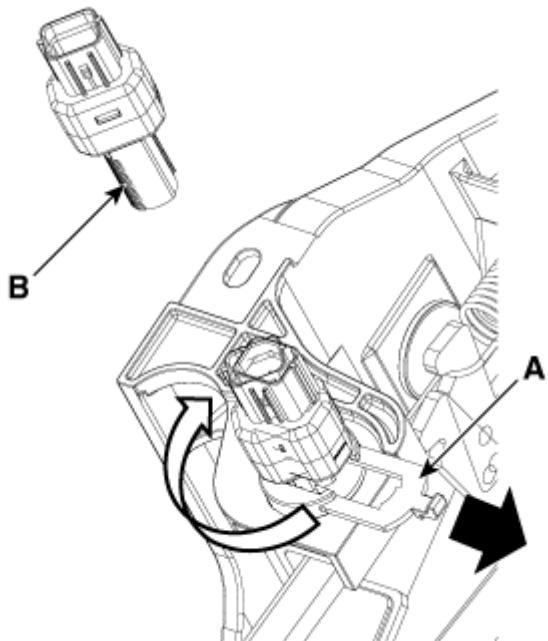


6. Inspect a removed stop lamp switch along the below procedures.

(1) Confirm a normal connection with terminal part.

English 

- A confirmation can be made to see if the connector has been secured properly and if a connection mark is present.

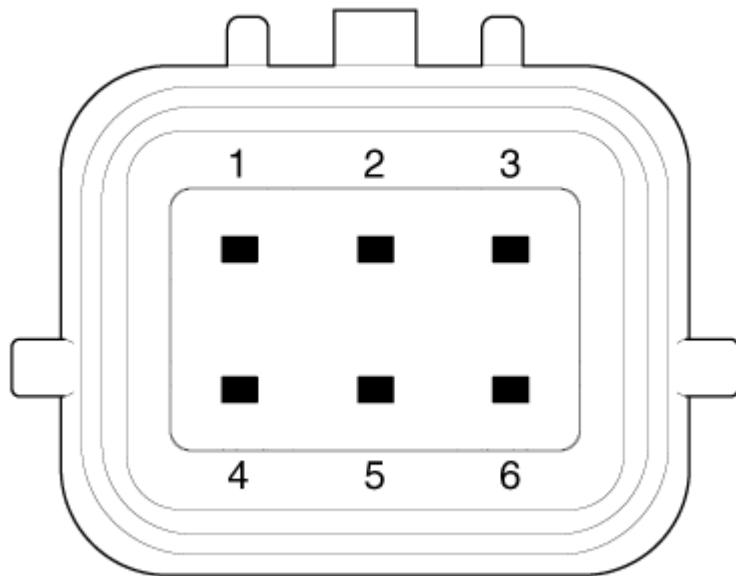


(2) Perform the inspection of parts resistance.

---


## INSTALLATION

---

1. Fix the brake pedal arm and insert fully the brake switch so that the contact part is invisible.

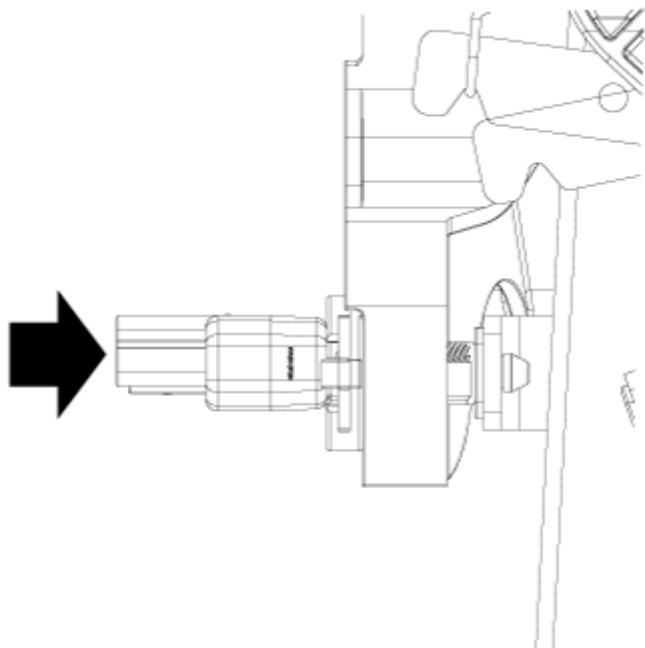


2. After inserting, turn the brake switch 45° counterclockwise, and then assemble locking plate by pushing.

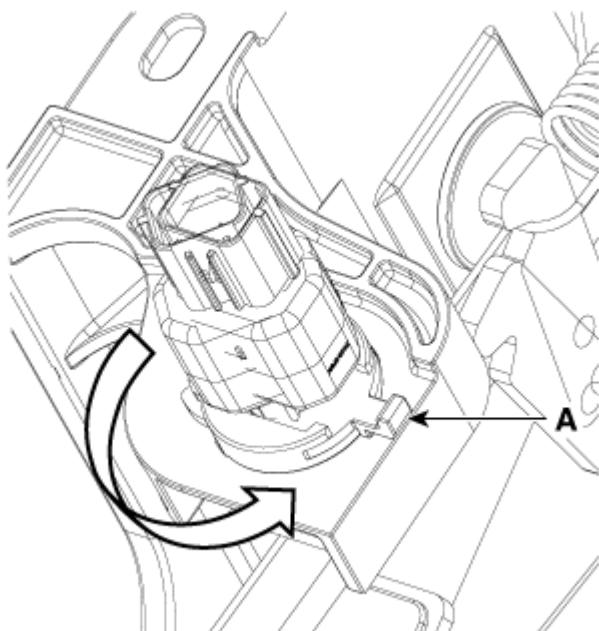

3. Confirm the gap between stop lamp switch and bracket.

**Stop lamp clearance (A) :**


1.0 - 2.0 mm (0.04 - 0.08 in.)

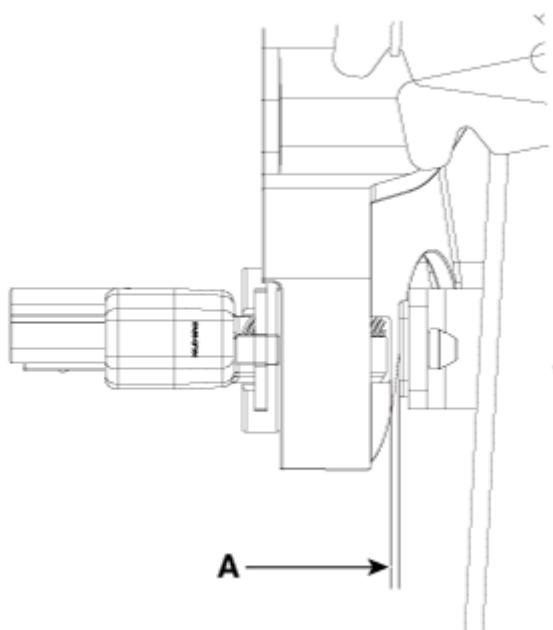

#### NOTICE

- If the gap between stop lamp switch and bracket is not between 1.0 - 2.0 mm (0.04 - 0.08 in), check the mounting clip and other parts around the stop lamp.
- If everything is normal, reinstall the stop lamp switch and check the clearance again.

4. Install the stop lamp switch connector (A).

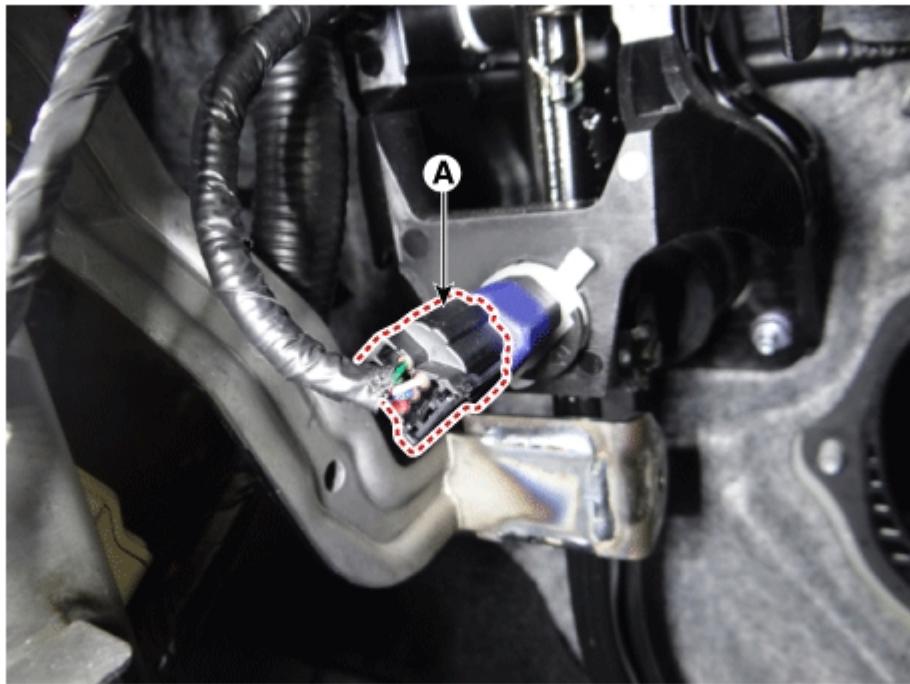

\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.