


Please rate this document after reviewing at the bottom of this page.

## REMOVAL

1. Remove the front seat assembly.  
**(Refer to Front Seat - "Front Seat Assembly")**
2. Remove the front seat belt buckle (A) after loosening the mounting bolt.

**Tightening torque :**

39.2 - 53.9 N·m (4.0 - 5.5 Kgf·m, 28.9 - 39.8 lb·ft)

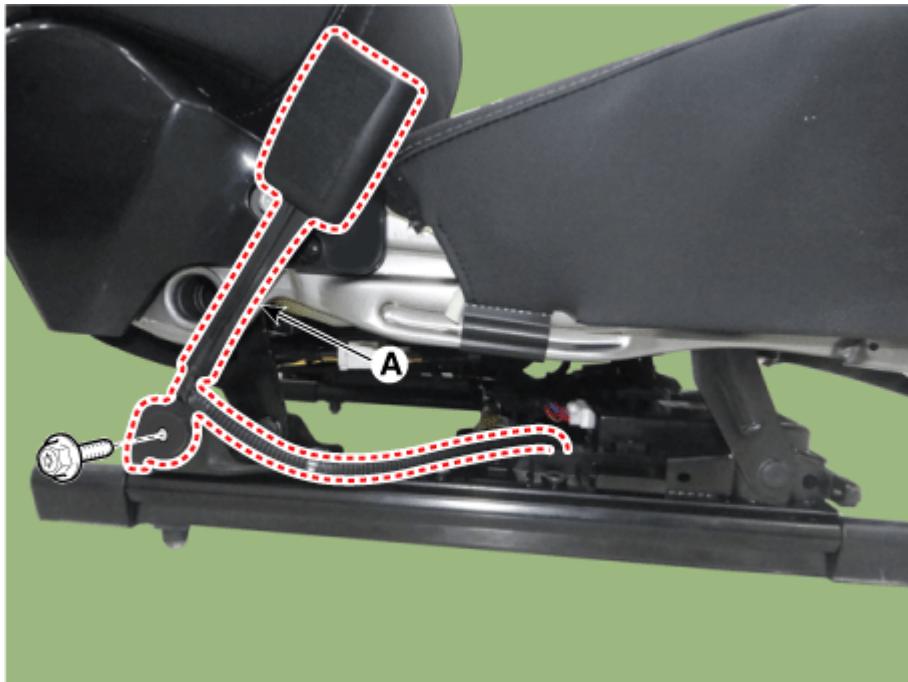

## INSTALLATION

1. Install in the reverse order of removal.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**