


Please rate this document after reviewing at the bottom of this page.

REPLACEMENT

Hood Switch Inspection

1. Remove the front bumper assembly.
(Refer to Body - "Front Bumper Assembly")
2. Disconnect the hood switch connector (A).

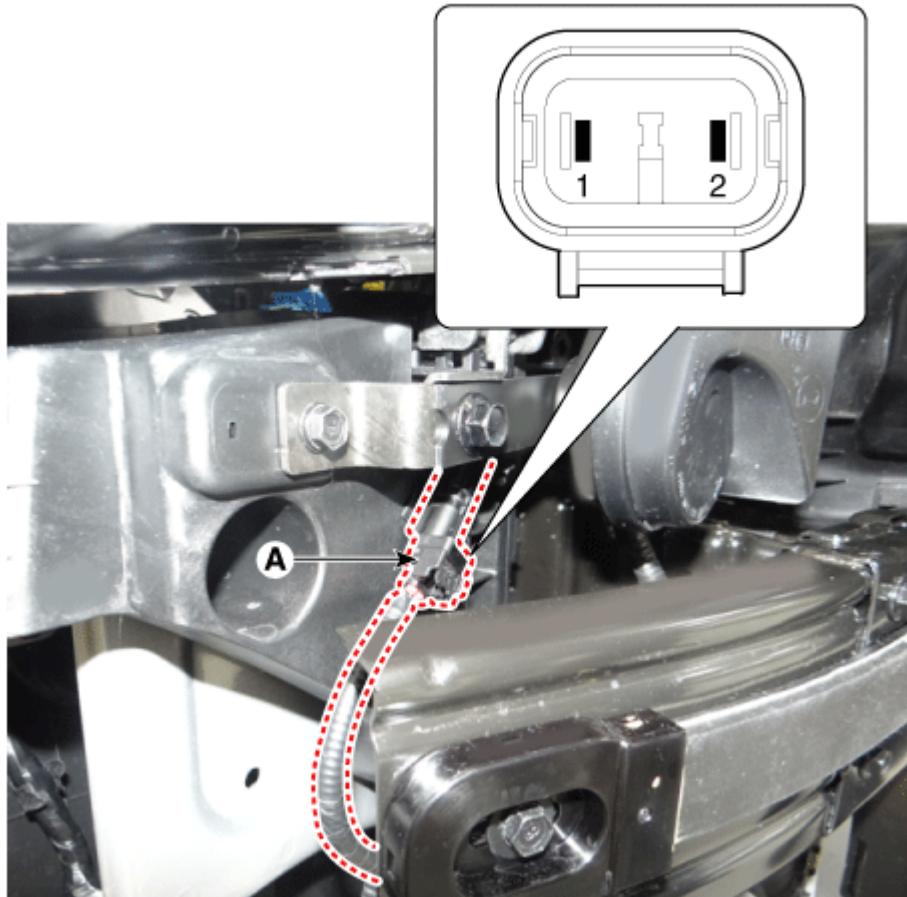

3. Check for continuity between the terminals and ground as shown below.

(Refer to Body - "Hood Latch")

| Terminal Position | 1 | 2 |
|-------------------|---|---|
| Open hood(Free) | ○ | ○ |
| Close hood(Push) | | |

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**