


Please rate this document after reviewing at the bottom of this page.


COMPONENTS LOCATION

Fuel Tank & Filler-Neck Assembly

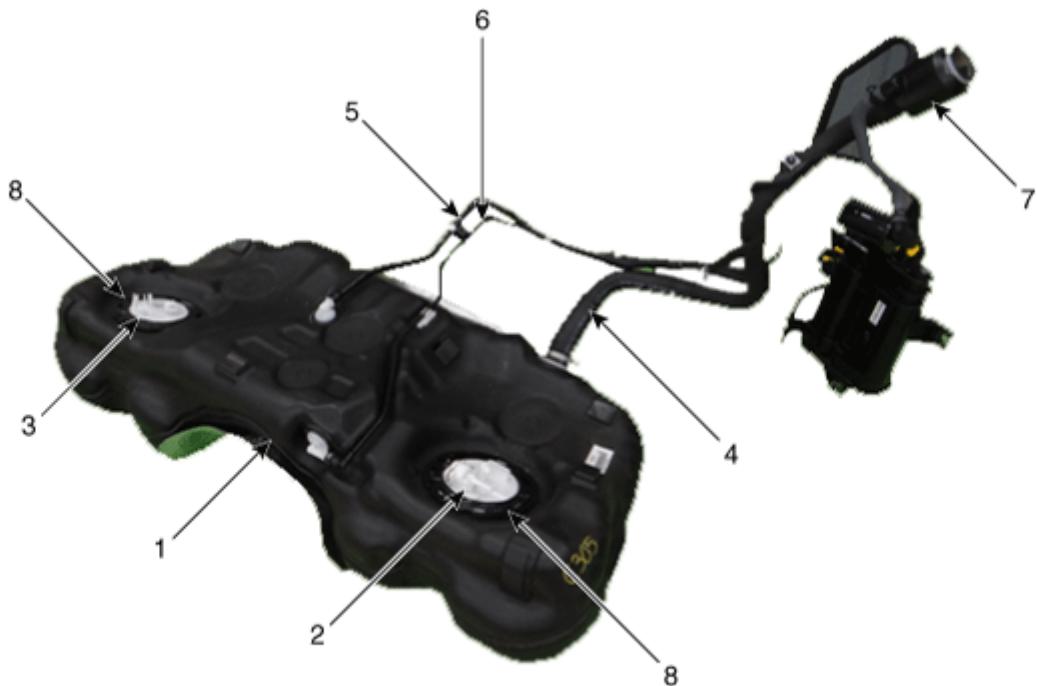

1. Fuel Tank	5. Leveling Hose
2. Low Pressure Fuel Pump	6. Ventilation Hose
3. Sub Fuel Sender	7. Filler-Neck Assembly
4. Fuel Filler Hose	8. Fuel Pump Plate Cover


Low Pressure Fuel Pump

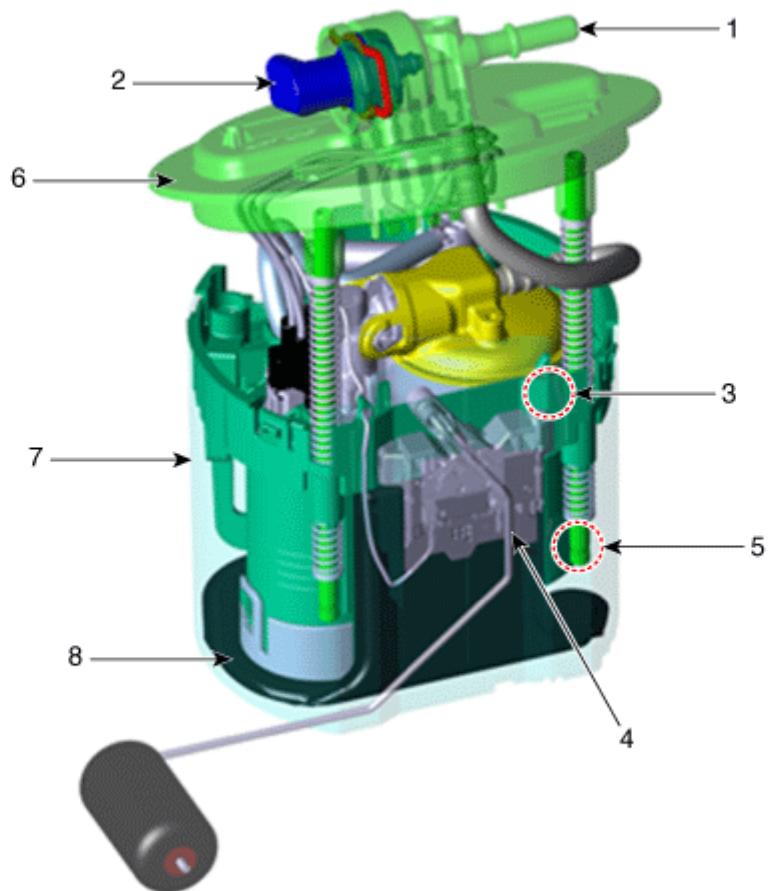

- 1. Fuel Feed Port
- 2. Fuel Pressure Sensor (FPS)
- 3. Fuel Filter
- 4. Fuel Sender

- 5. Fuel Pressure Regulator
- 6. Head Assembly
- 7. Reservoir-Cup
- 8. Pre-filter

High Pressure Fuel Line

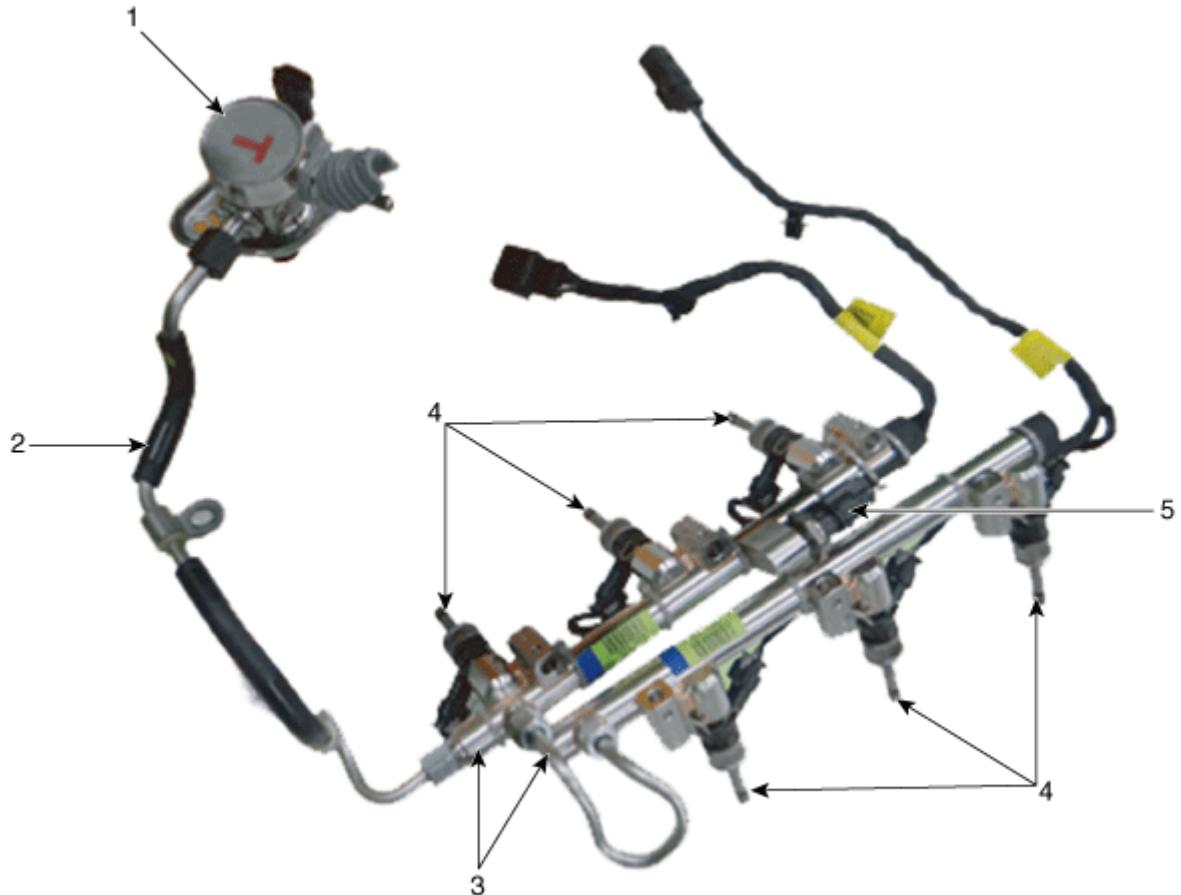

1. High Pressure Pump
2. High Pressure Pipe
3. Delivery Pipe

4. Injector
5. Rail Pressure Sensor (RPS)

⚠ WARNING

Whenever the high pressure fuel pump, fuel pipe, delivery pipe, or injector is removed immediately after shutting off the engine, an injury may be caused by the release of highly pressurized fuel. Release the residual pressure in the high pressure fuel line by referring to the "Residual fuel pressure release procedure" below before removing any high pressure fuel system components.

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.