

Please rate this document after reviewing at the bottom of this page.

REMOVAL

NOTICE

Fuel pump motor cannot be replaced on its own; it should be replaced with the fuel pump assembly.
(Refer to Fuel Delivery System - "Low Pressure Fuel Pump")

INSTALLATION

NOTICE

Fuel pump motor cannot be replaced on its own; it should be replaced with the fuel pump assembly.
(Refer to Fuel Delivery System - "Low Pressure Fuel Pump")

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.