


Please rate this document after reviewing at the bottom of this page.

REMOVAL


1. Release the residual pressure in fuel line.
(Refer to the Fuel Delivery System - "Release Residual Pressure in Fuel Line")
2. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
3. Remove the rear seat cushion.
(Refer to Body - "Rear Seat Assembly")
4. Remove the sub fuel sender service cover (A) after loosening the mounting screws.



5. Disconnect the sub fuel sender connector (A).

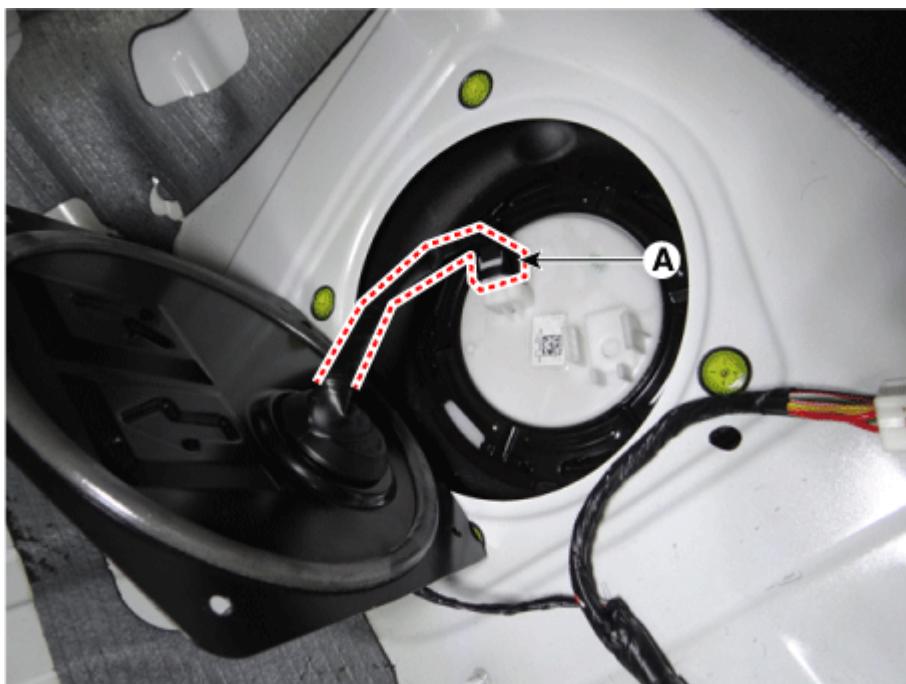

6. Remove the locking ring (B) by using the special service tool (A) [No.: 09310-B9100].

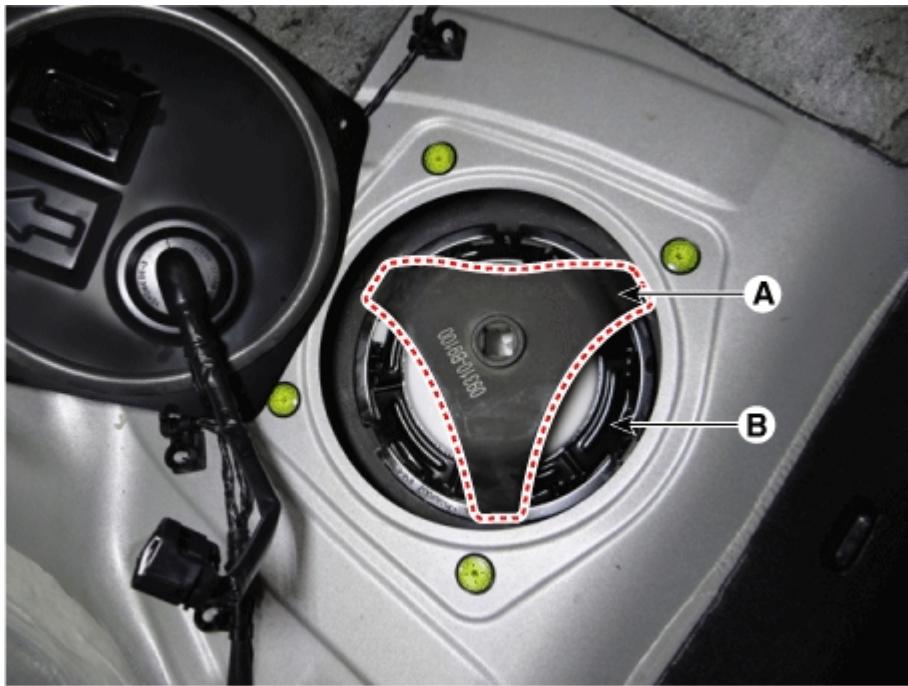

7. Remove the sub fuel sender (A).



INSTALLATION

1. Install in the reverse order of removal.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**