

Please rate this document after reviewing at the bottom of this page.

INSPECTION

1. Connect the KDS on the Data Link Connector (DLC).
2. Check the output voltage of fuel pressure sensor (FPS).


Pressure [kPa (kgf/cm ² , psi)]	Output Voltage (V) [Vref = 5V]
50 (0.51, 7.3)	0.3
600 (6.12, 87.0)	2.5
1100 (11.2, 159.5)	4.5

REMOVAL

1. Release the residual pressure in fuel line.
(Refer to the Fuel Delivery System - "Release Residual Pressure in Fuel Line")
2. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
3. Remove the rear seat cushion.
(Refer to Body - "Rear Seat Assembly")
4. Remove the fuel pump service cover (A) after loosening the mounting screws.



5. Disconnect the fuel feed quick-connector (A).
6. Remove the fuel pressure sensor fixing pin (B).
7. Remove the fuel pressure sensor from the fuel pump.

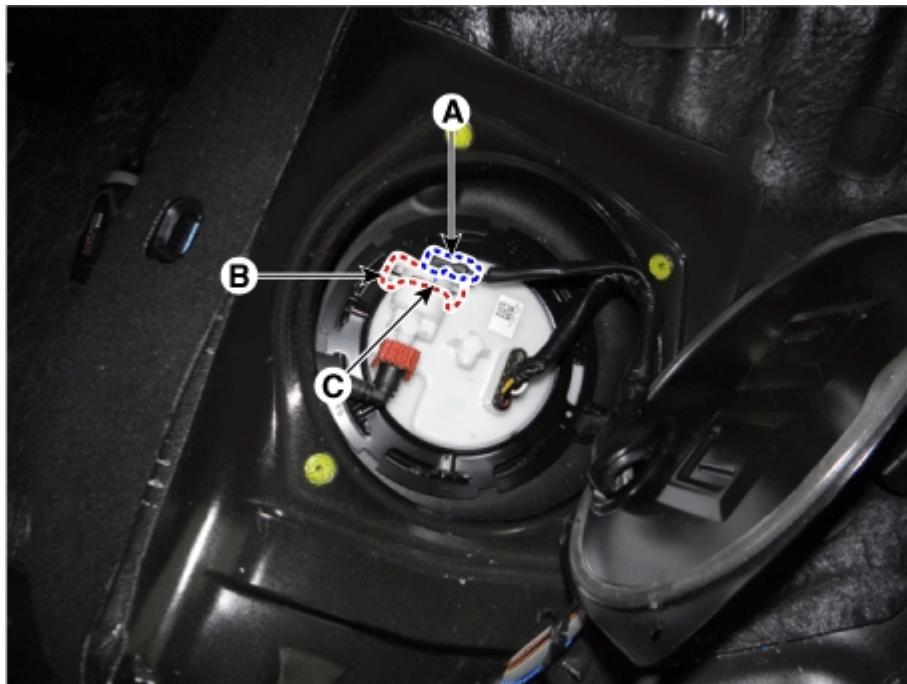

INSTALLATION

1. Install in the reverse order of removal.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**