



Please rate this document after reviewing at the bottom of this page.

REMOVAL


1. Switch "OFF" the ignition and disconnect the negative (-) battery terminal.
2. Remove the fuel filler cap after opening the fuel filler door.
3. Lift the vehicle.
4. Remove the rear-left wheel & tire and wheel house cover.
5. Disconnect the fuel filler hose (A) and leveling hose (B).

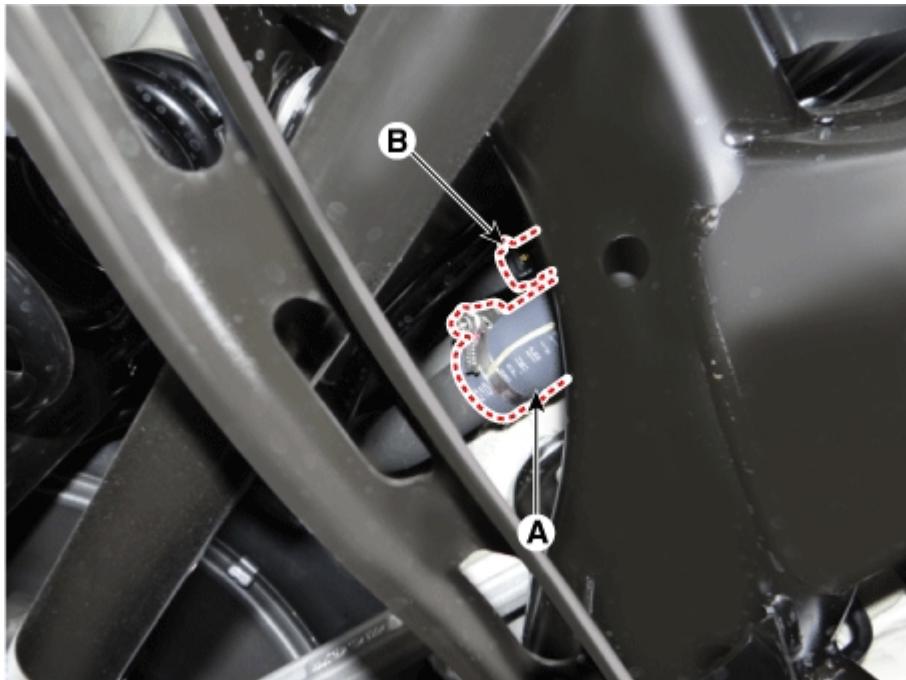

6. Disconnect the ventilation (A).

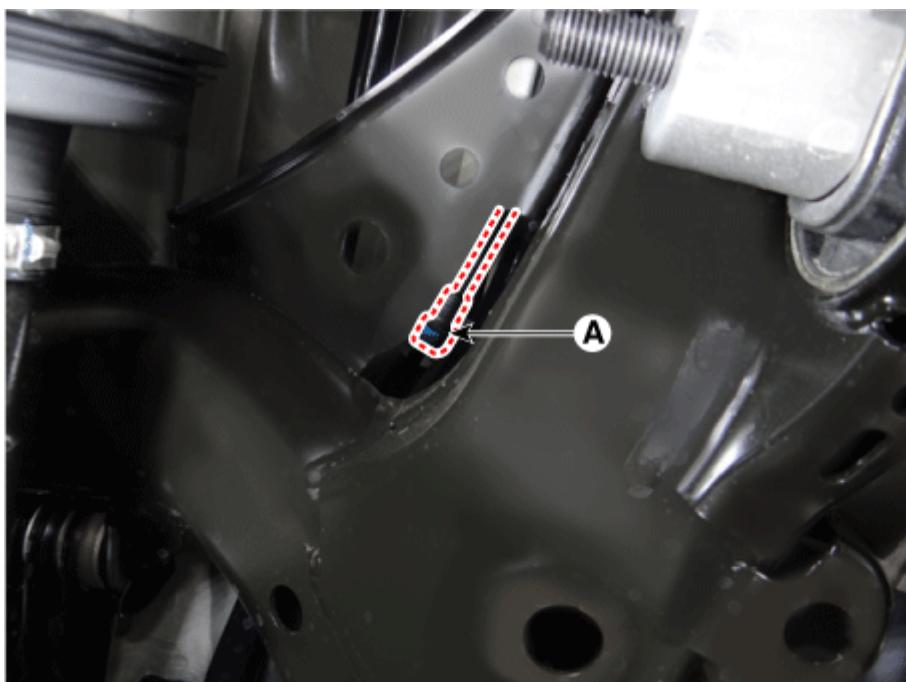

7. Remove the filler-neck assembly from the vehicle after removing bracket mounting nuts (A).

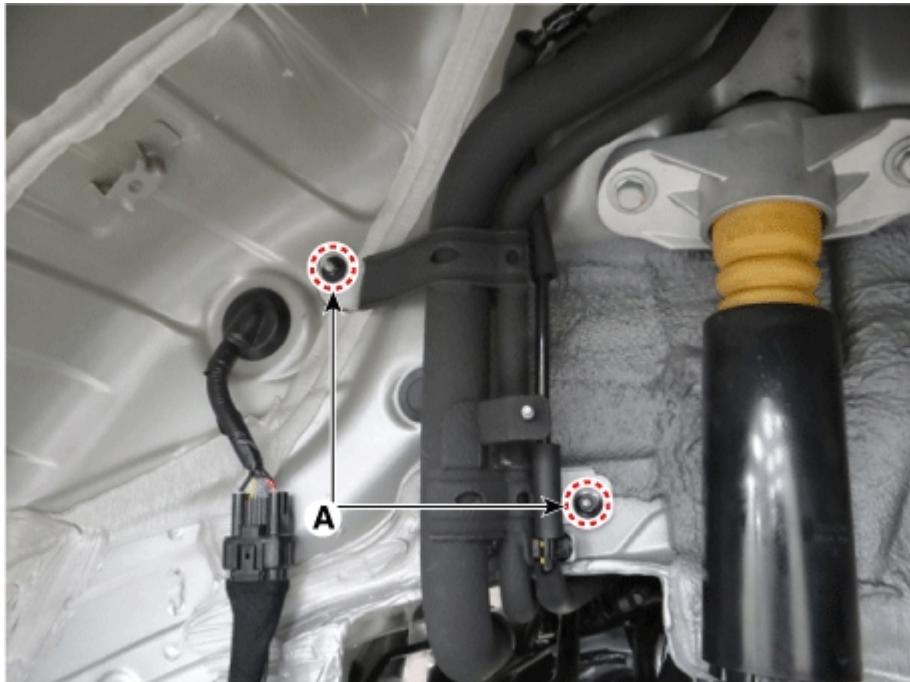

INSTALLATION

1. Install in the reverse order of removal.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**