


Please rate this document after reviewing at the bottom of this page.

INSPECTION

1. Switch "OFF" ignition.
2. Disconnect the main connector (A).

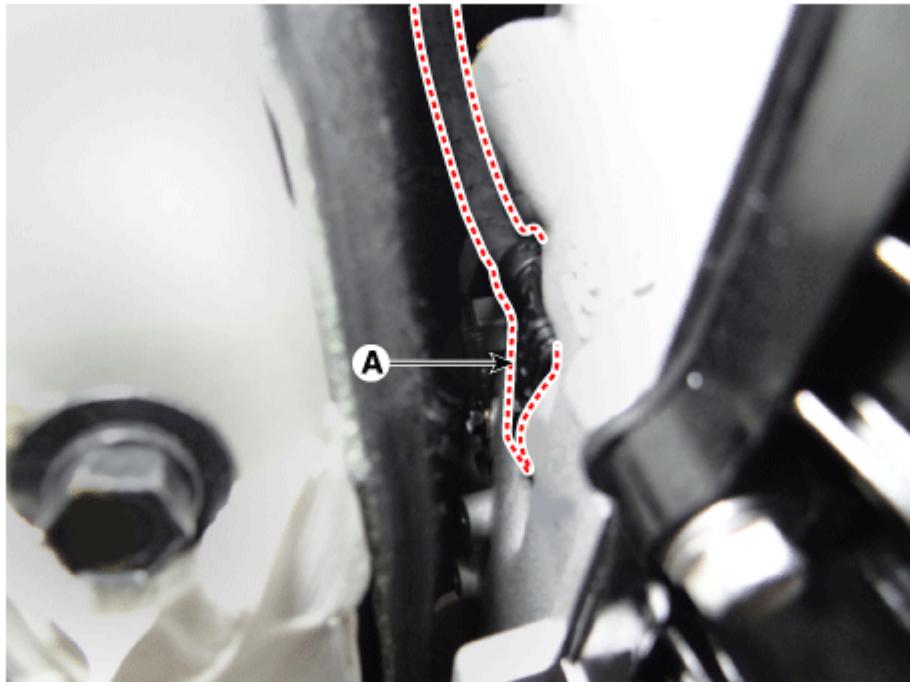

3. Measure the resistance between + terminal (15) and - terminal (16).
4. Check that the resistance is within the specification.

Item		Specification
Oil temperature sensor	Type	*NTC thermistor
	Temp.[(°C)°F] / Resistance (kΩ)	(-40)-40 / 139.5
		(-20)-4 / 47.4
		(0)32 / 18.6
		(20)68 / 8.1
		(40)104 / 3.8
		(60)140 / 1.98
		(80)176 / 1.08
		(100)212 / 0.63
		(120)248 / 0.38
		(140)284 / 0.25
		(150)302 / 0.16

REPLACEMENT

The oil temperature sensor is integrated into the E-module that can't be disassembled. So refer to "E-module" English 

1. Replace the E-module.

(Refer to Automatic Transmission Control System - "E-Module")

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**