

Please rate this document after reviewing at the bottom of this page.

## DESCRIPTION

- Speed sensor is integrated with E module.
- Speed sensor uses an electric current type hall sensor in which the current is changed
- The speed sensor measures the rate of rotation of the input & output shafts inside the transmission and delivers the readings to the TCM.
- The sensor provides critical input data used in feedback control, torque converter clutch control, gear setting control, line pressure control, clutch activation pressure control, and sensor fault analysis.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**