

Please rate this document after reviewing at the bottom of this page.

INSPECTION

1. Check signal waveform of speed sensor using the KDS.

REPLACEMENT

Information

The speed sensor is integrated into the E-module that can't be disassembled. So refer to "E-module" for the removal or installation procedure of the speed sensor.

1. Replace the E-module.
(Refer to Automatic Transmission Control System - "E-Module")

* Thanks for your cooperation for the more quality. Please surely rate this document before closing.