

Please rate this document after reviewing at the bottom of this page.

REMOVAL

1. Remove the parking release cable after loosening the fastener (A).

NOTICE

The existing fastener (A) must be replaced with a new one. (Do not reuse it.)




2. Remove the parking release cable from the bracket after loosening a bolt (A).

NOTICE

When installing , tighten the bolt (A) to the specified torque after removing gap by pushing the parking release cable in the direction of the arrow.

Tightening torque :

12.7 - 15.7 N·m (1.3 - 1.6 kgf·m, 9.4 - 11.6 lb·ft)

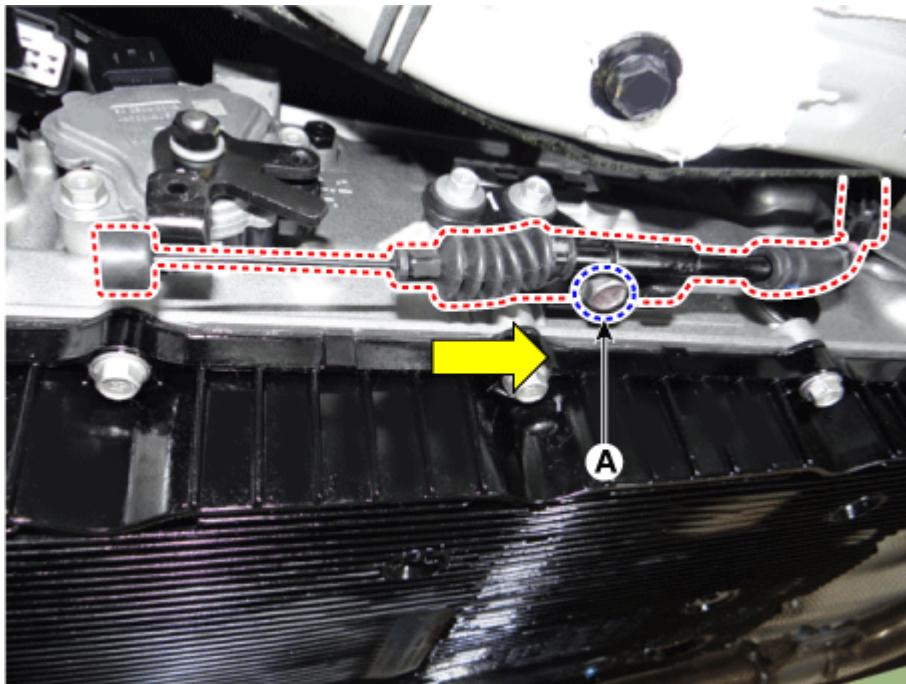


3. Remove the floor console assembly.
(Refer to Body - "Floor Console Assembly")
4. Remove the wiring fixing clip (A) from the parking release actuator.



5. Loosen the parking release actuator mounting nuts (A, B).

Tightening torque :


- (A) 9.8 - 14.7 N·m (1.0 - 1.5 kgf·m, 7.2 - 10.8 lb·ft)
(B) 8.8 - 13.7 N·m (0.9 - 1.4 kgf·m, 6.5 - 10.1 lb·ft)

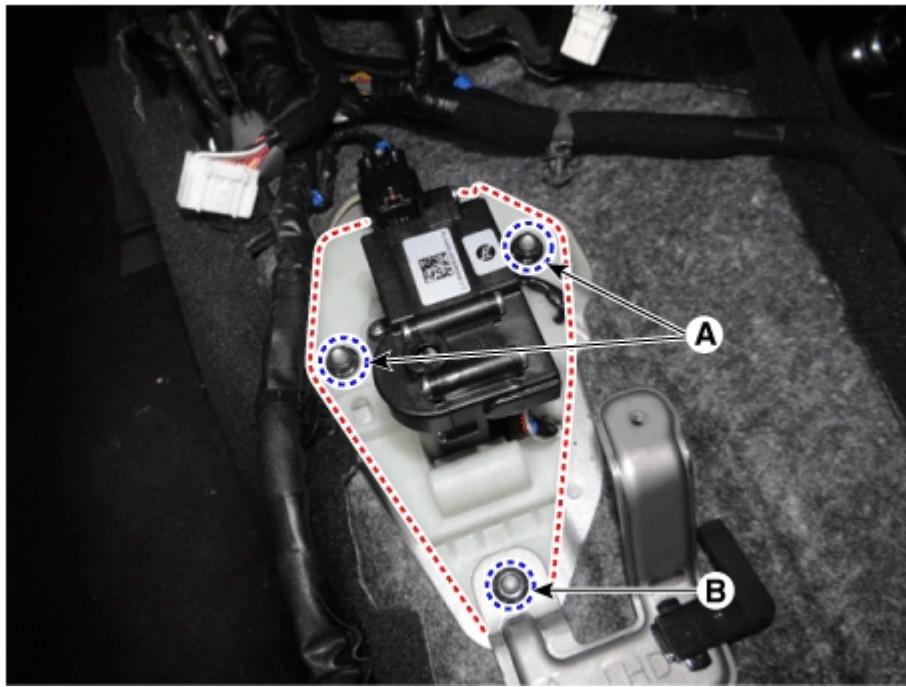

6. Remove the bracket (A).

Tightening torque :

8.8 - 13.7 N·m (0.9 - 1.4 kgf·m, 6.5 - 10.1 lb·ft)

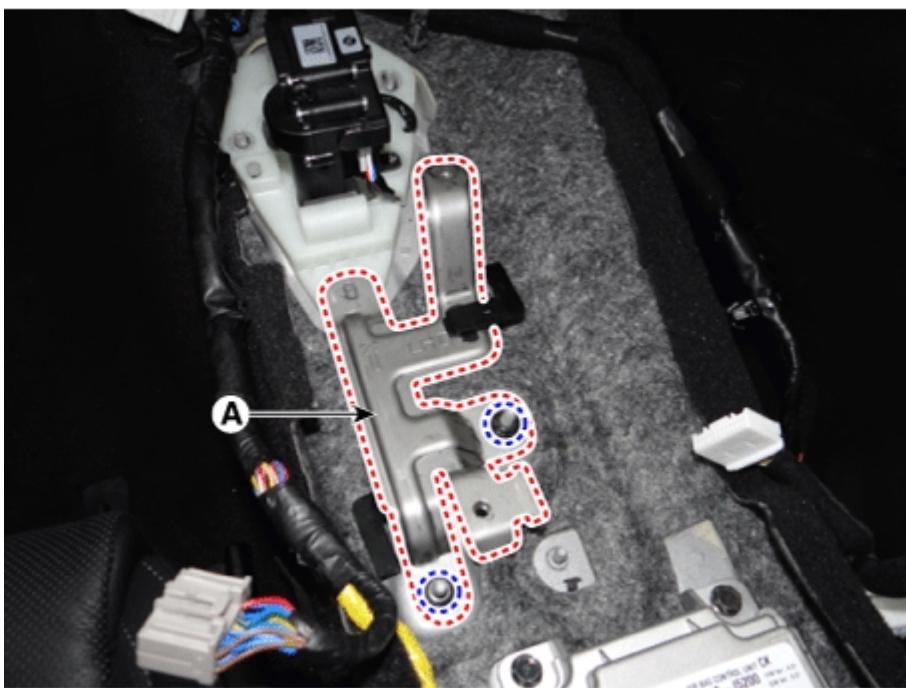

7. Disconnect the parking release actuator connector (A). Then, remove the cable by pulling it toward the vehicle interior.



INSTALLATION

1. Install in the reverse order of removal.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**