


Please rate this document after reviewing at the bottom of this page.

## REMOVAL

1. Remove the upper console cover (A) using the remover.



2. Disconnect the main connector (A).

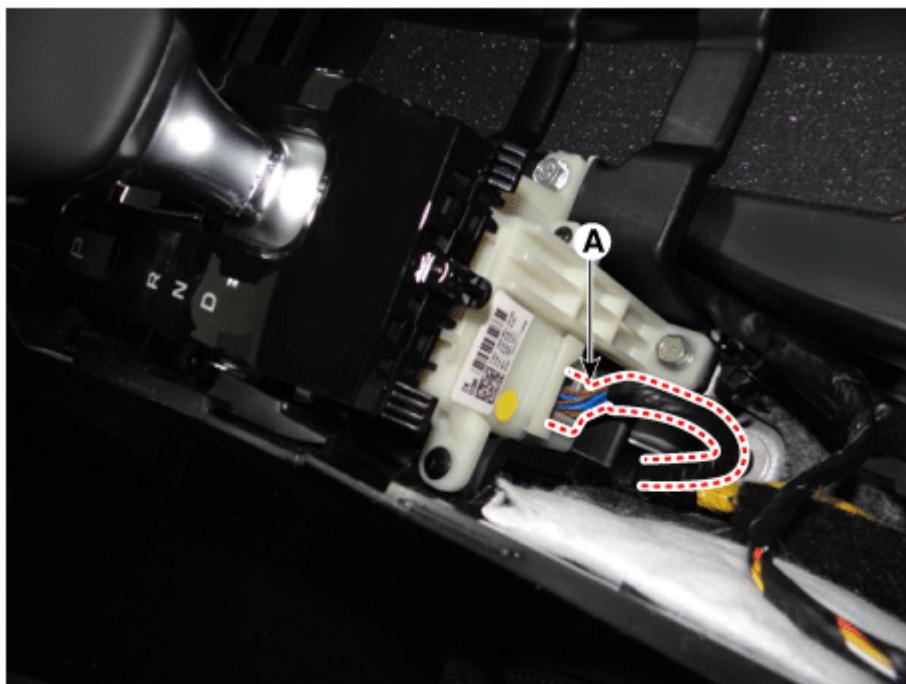

3. Loosen the E-shifter mounting screws (A).



4. Loosen the E-shifter mounting bolts (A).

**Tightening torque :**

8.8 - 13.7 N·m (0.9 - 1.4 kgf·m, 6.5 - 10.1 lb·ft)



---

## INSTALLATION

---

1. Install in the reverse order of removal.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**