

Please rate this document after reviewing at the bottom of this page.

## REMOVAL


1. Shift the gear to "N".
2. Remove the knob (A) by pulling it in the direction of arrow after removing the boots from the console upper cover.



3. Remove the floor console assembly.  
**(Refer to Body - "Floor Console Assembly")**
4. Disconnect the shift lever main connector.
5. Remove the shift lever (A) after loosening the mounting bolts.


**Tightening torque :**

8.8 - 13.7 N·m (0.9 - 1.4 kgf·m, 6.5 - 10.1 lb·ft)

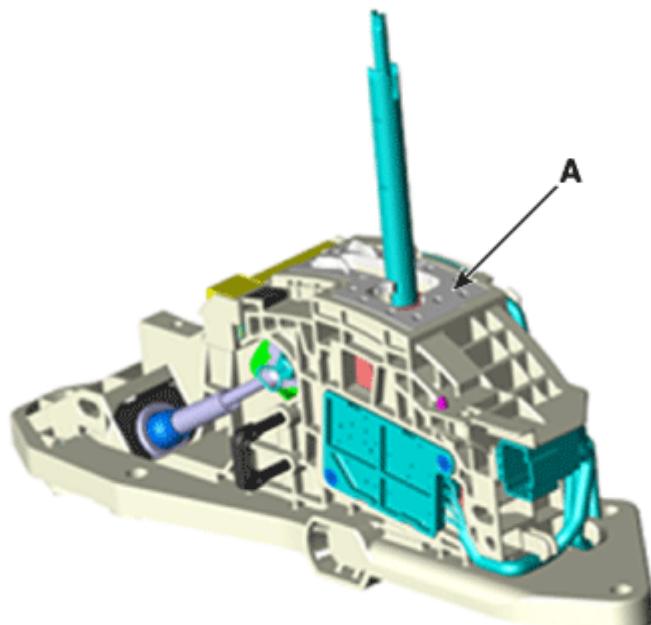

6. Remove the snap pin (A) and shift cable fixing clip (B).


English 

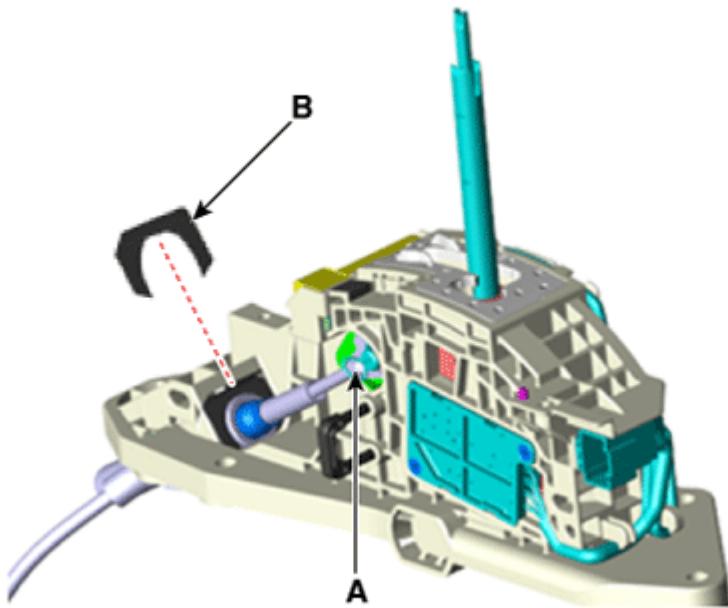

7. Remove the shift cable from the shift lever after loosening the screws (A).

**Tightening torque :**

0.69 - 1.37 N·m (0.07 - 0.14 kgf·m, 0.51 - 1.01 lb·ft, 6.08 - 12.15 lb·in)

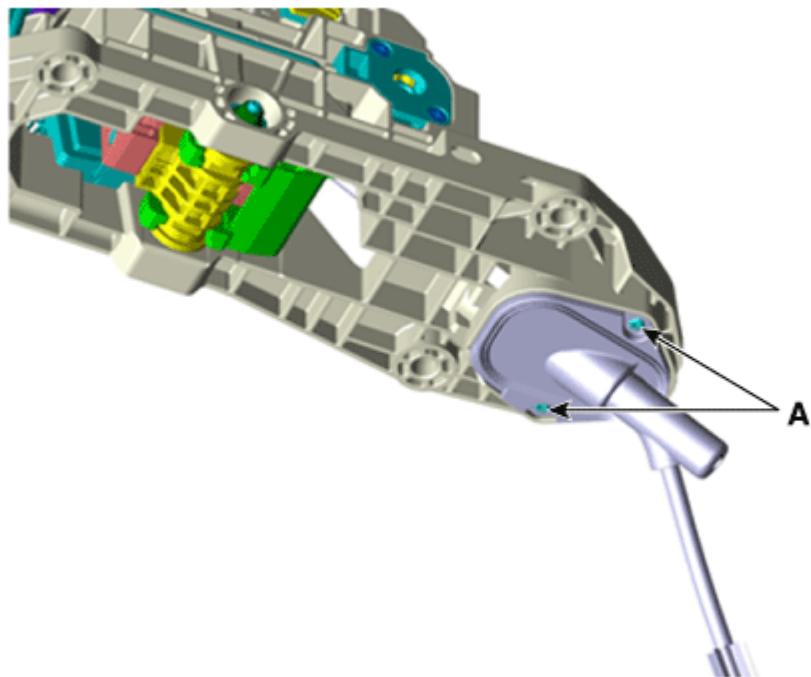

---

## INSTALLATION

---

1. Install in the reverse order of removal.

**\* Thanks for your cooperation for the more quality. Please surely rate this document before closing.**