


Please rate this document after reviewing at the bottom of this page.

REMOVAL

1. Shift the gear to "N".
2. Loosen the nut (A) and remove the shift cable fixing clip (B).

Tightening torque :

9.8 - 14.7 N·m (1.0 - 1.5 kgf·m, 7.2 - 10.8 lb·ft)

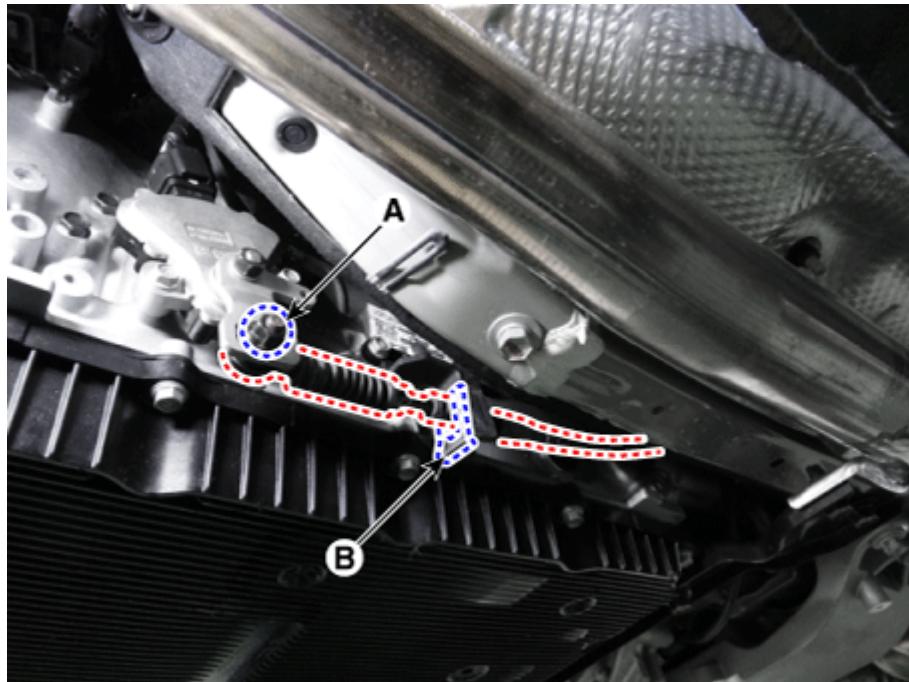

NOTICE

When installing, the existing shift cable clip (A) must be replaced with new one. (Do not reuse it.)

3. Remove the shift lever.
(Refer to Automatic Transmission Control System - "Shift lever")
4. Then, remove the shift cable by pulling it toward the vehicle interior.

INSTALLATION

1. Install in the reverse order of removal.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**