


Please rate this document after reviewing at the bottom of this page.

REMOVAL

1. Remove the integrated body control unit (IBU).
(Refer to - Body Electrical System - "Integrated Body Control Unit")
2. Disconnect the OPU connector (A) and then remove the OPU by loosening the OPU bracket nut (B).

Tightening torque :


9.8 - 11.8 N·m (1.0 - 1.2 kgf·m, 7.2 - 8.7 lb·ft)

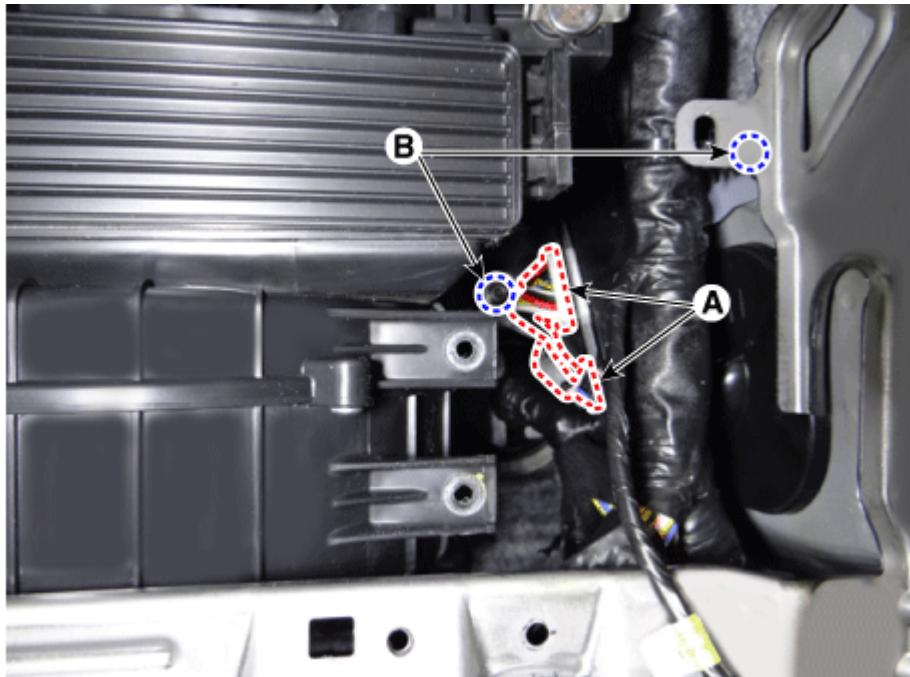

3. Remove the OPU (A) from the bracket.

Tightening torque :

9.8 - 11.8 N·m (1.0 - 1.2 kgf·m, 7.2 - 8.7 lb·ft)

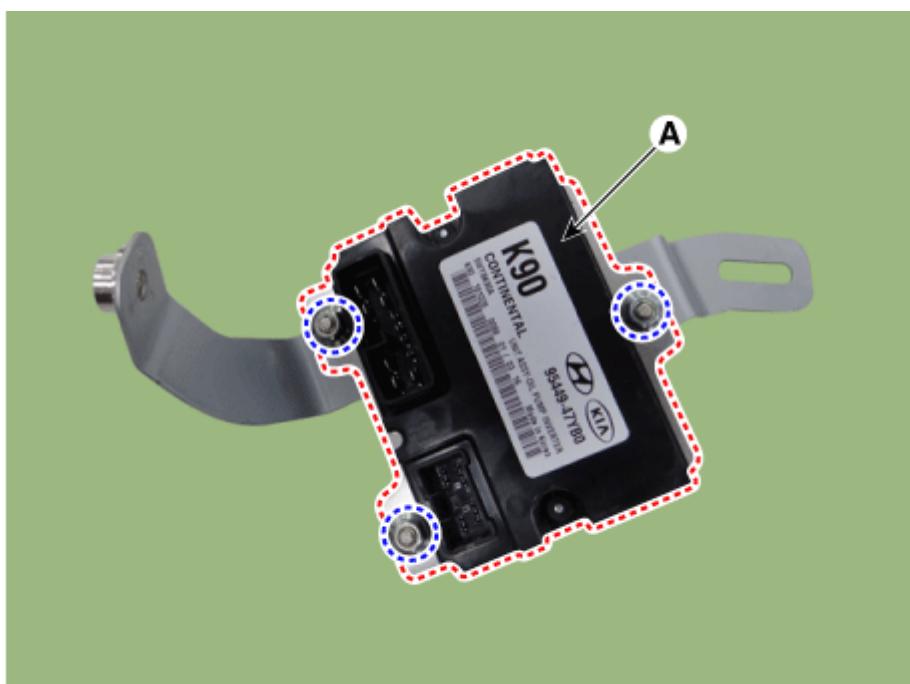

1. Install in the reverse order of removal.

*** Thanks for your cooperation for the more quality. Please surely rate this document before closing.**